



Ease

ASSEMBLY INSTRUCTIONS

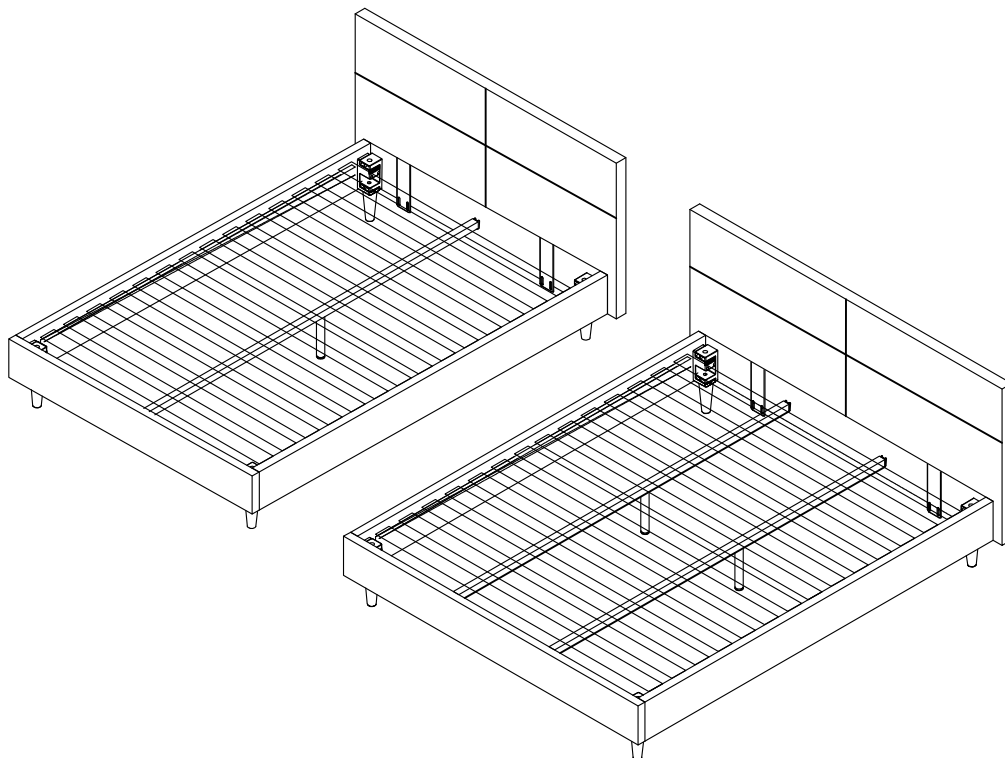


140*200 & 160*200, only have one middle rod
180*200, have two middle rod

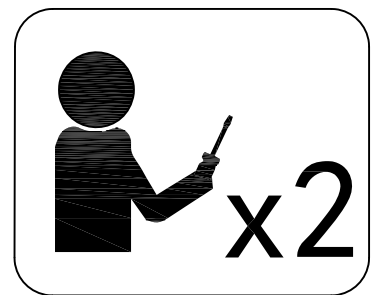


READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY


1. PLEASE SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
6. DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.

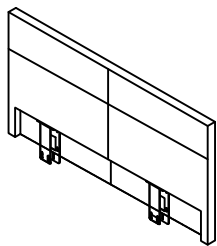

①x1

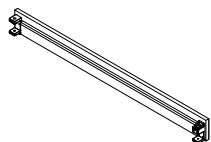


②x2

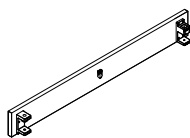

③x2




④x1

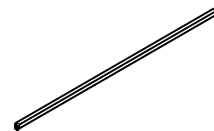

⑤x1




⑥x4

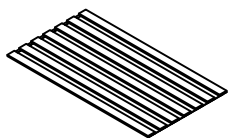

⑦x2

140*200 & 160*200




Ax4




Bx4

140*200 & 160*200


Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

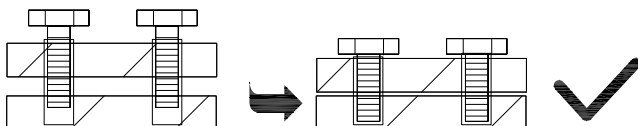


⚠ Don't tighten up the screw before you start next mounting during the installation.

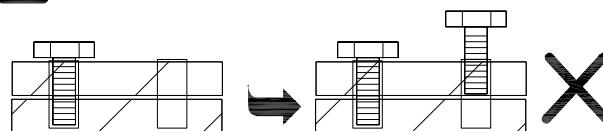


1

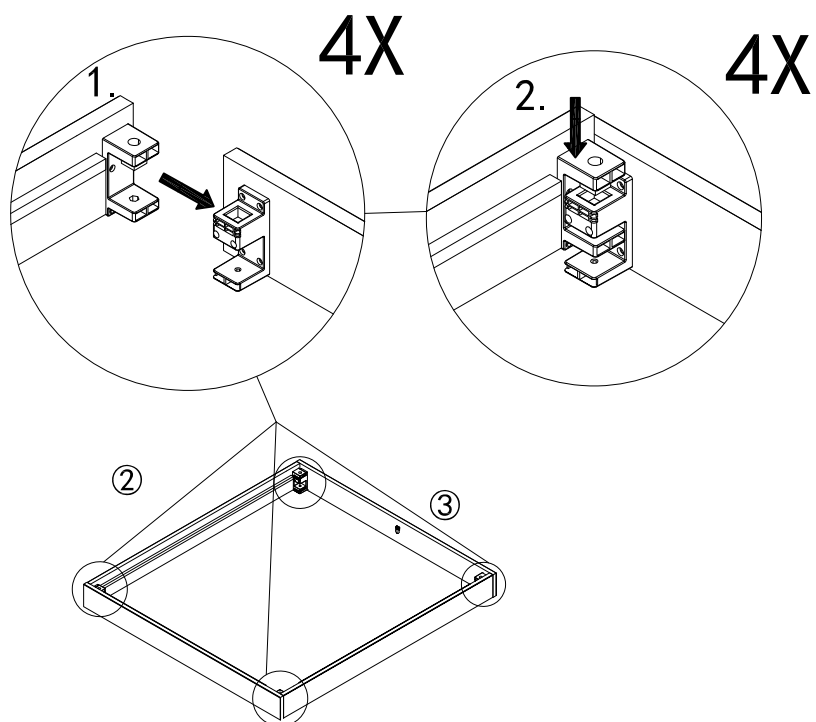


2

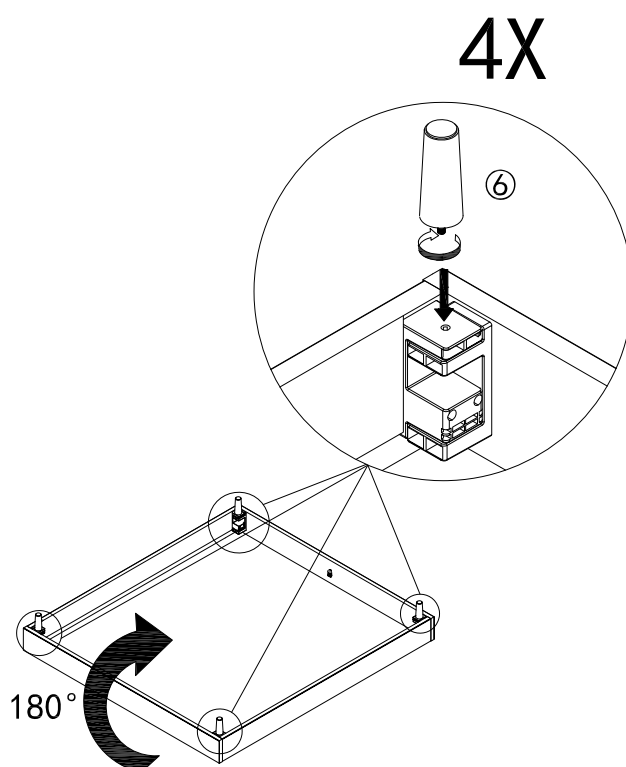


3

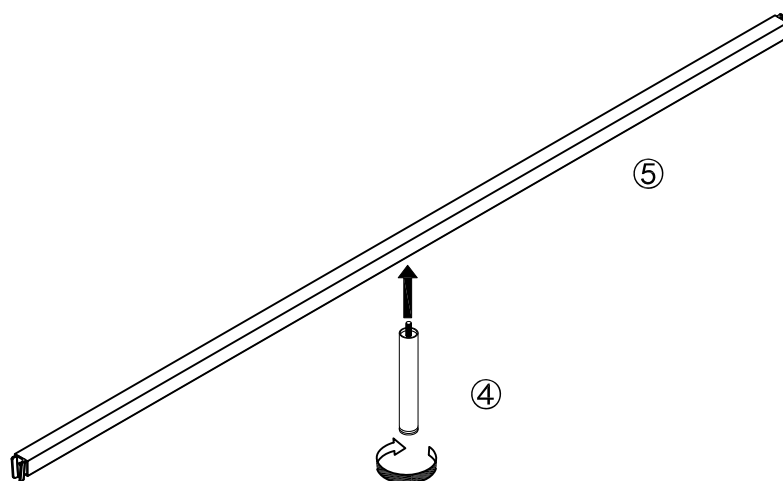


4

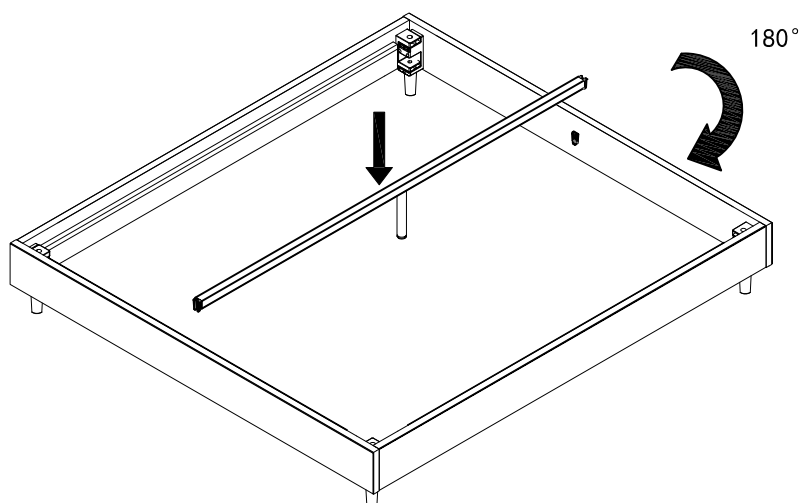


5

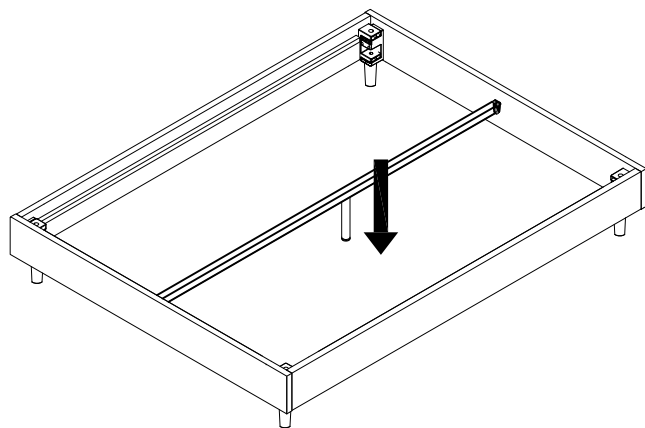


6

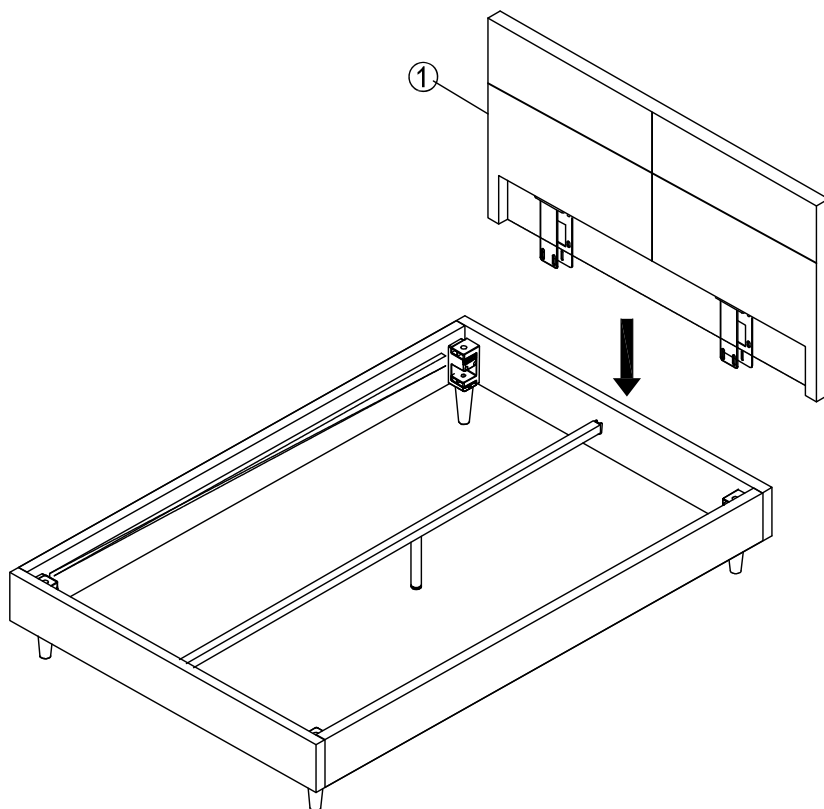



7

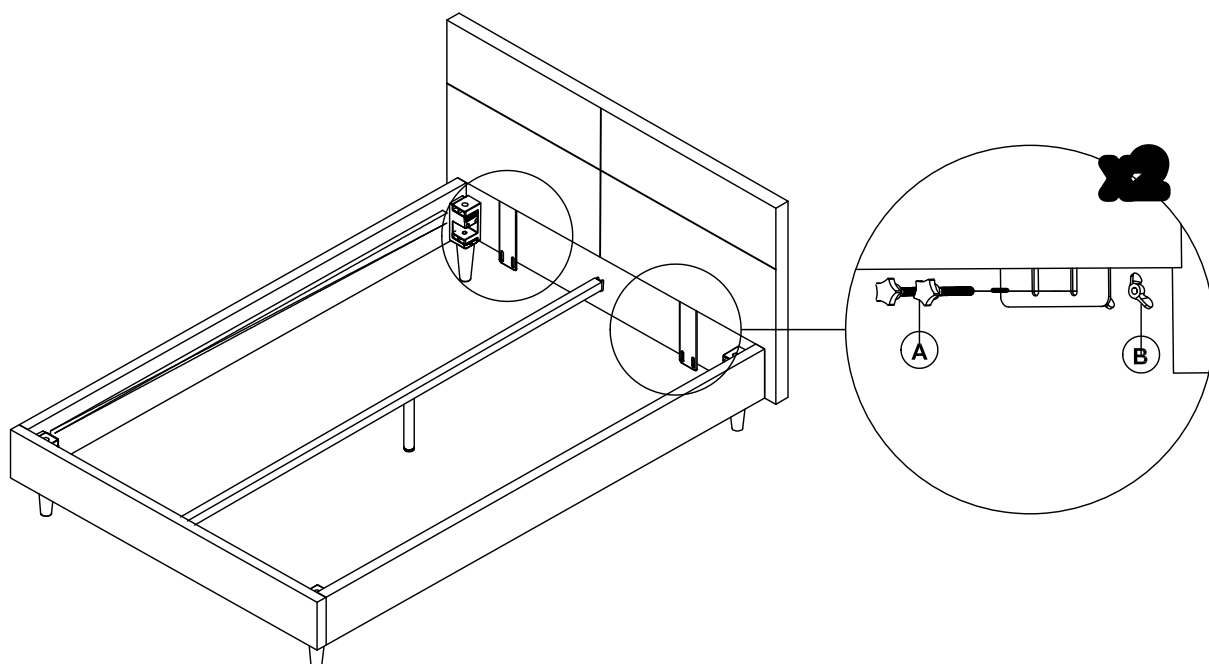


8

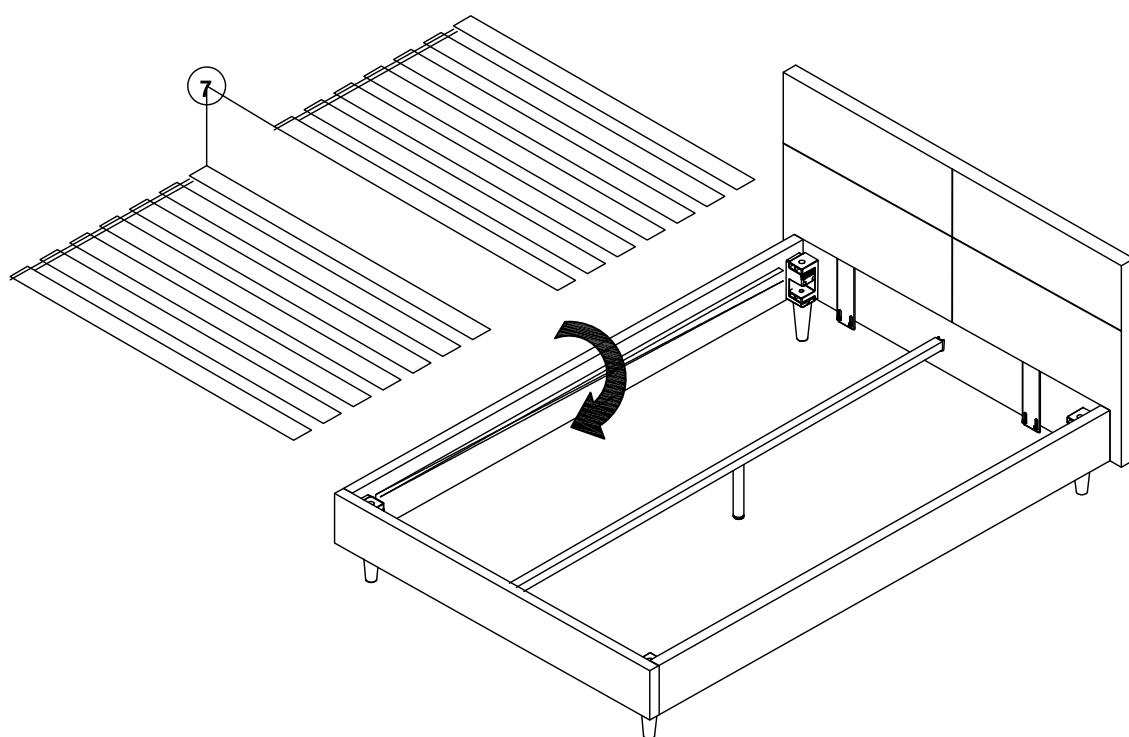

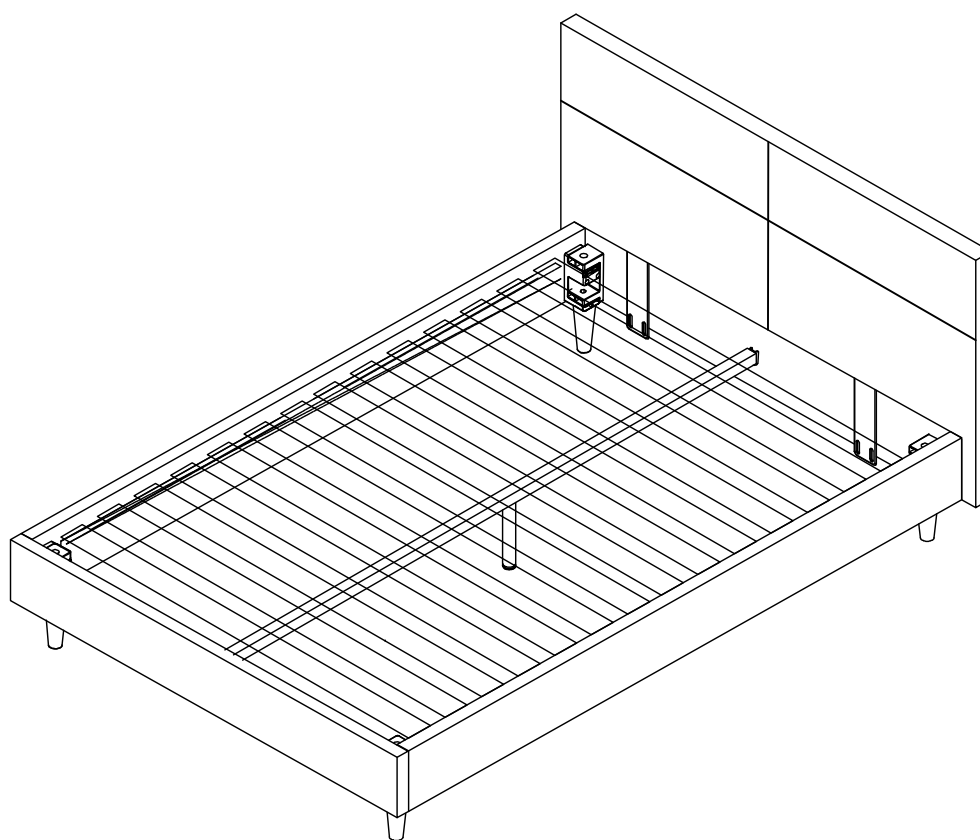


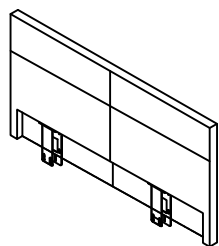

①x1

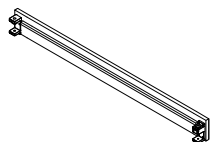


②x2

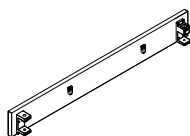

③x2




④x2

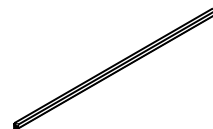

⑤x2




⑥x4

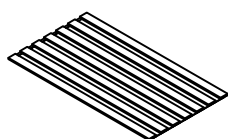

⑦x2

180*200




Ax4




Bx4

180*200


Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

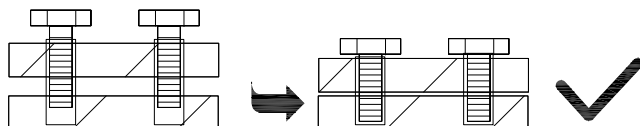


⚠ Don't tighten up the screw before you start next mounting during the installation.

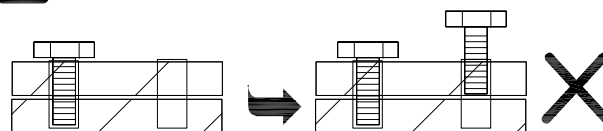


1

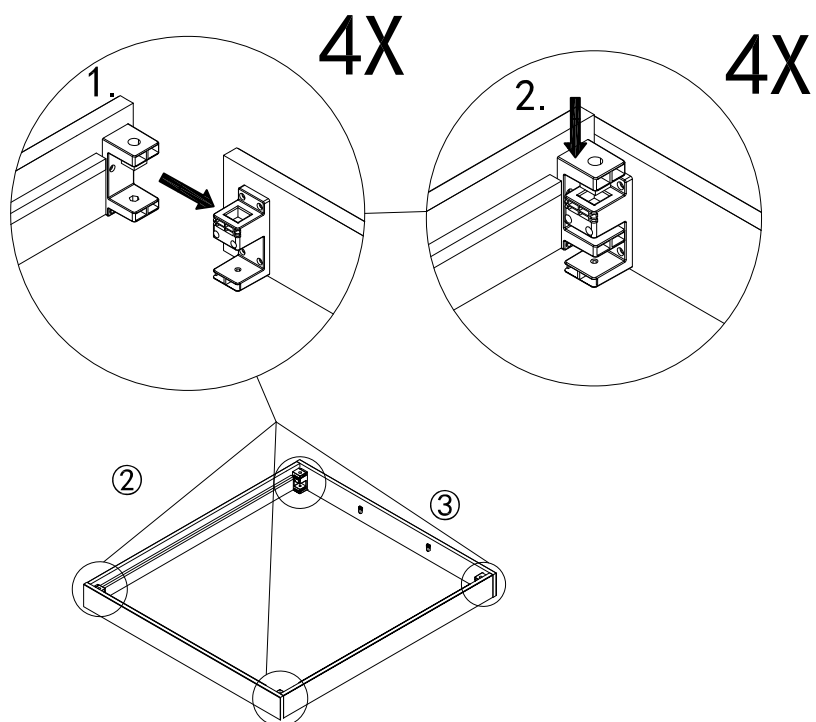


2

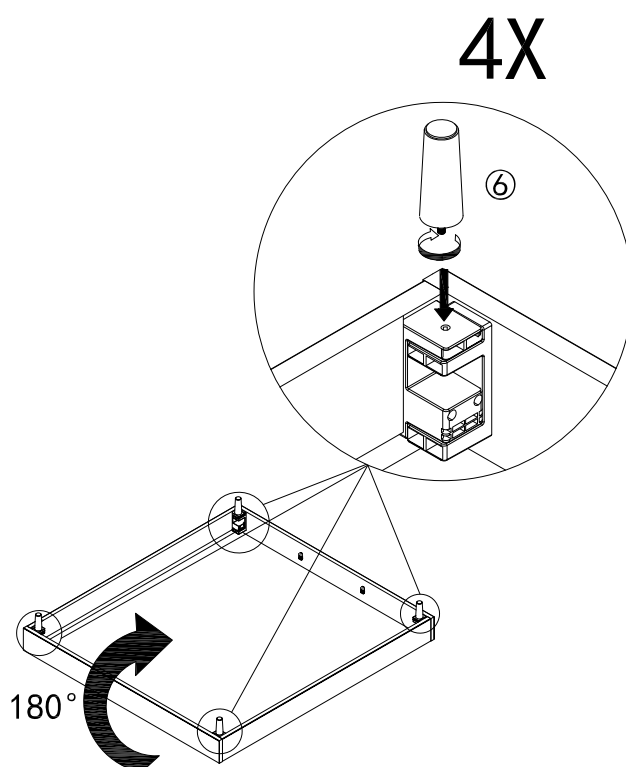


3

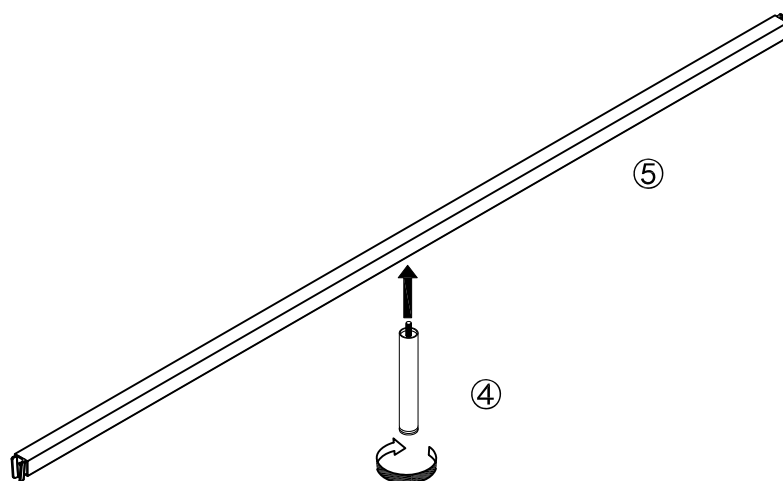


4

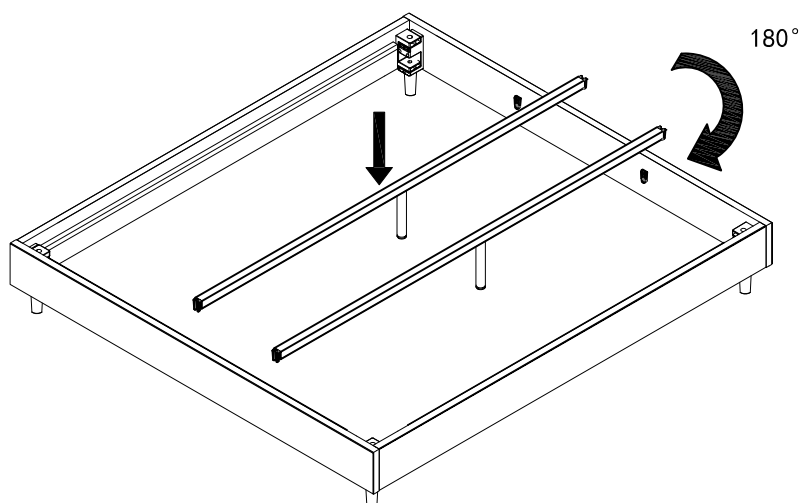


5

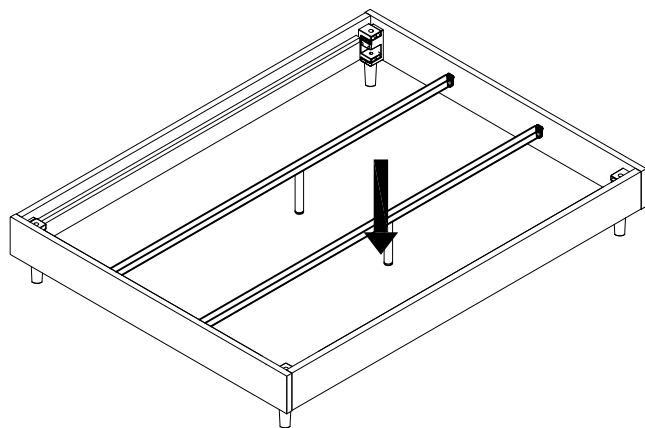

6

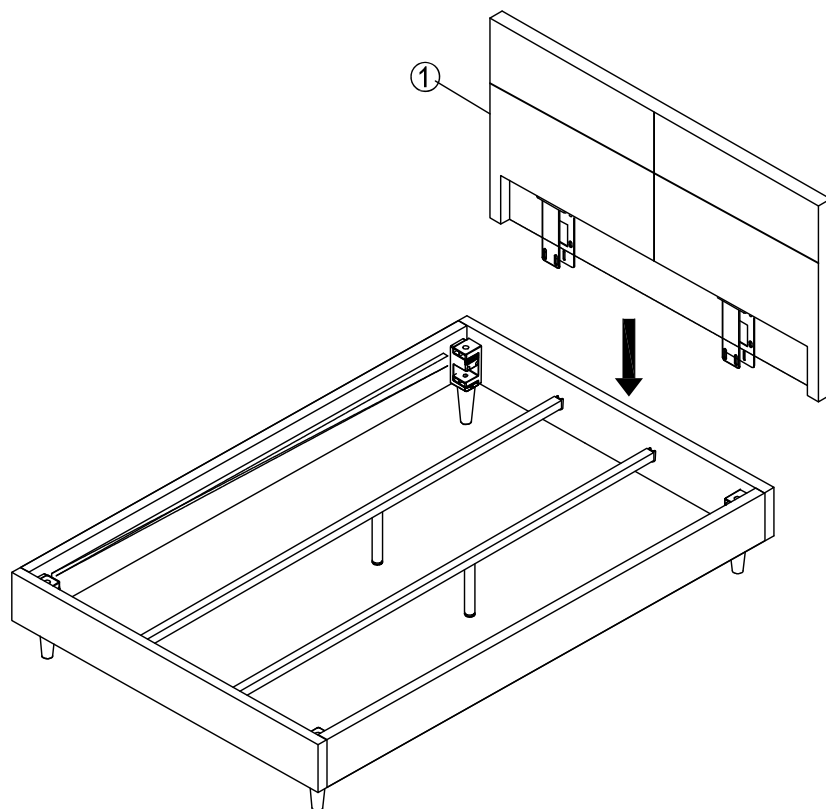

7

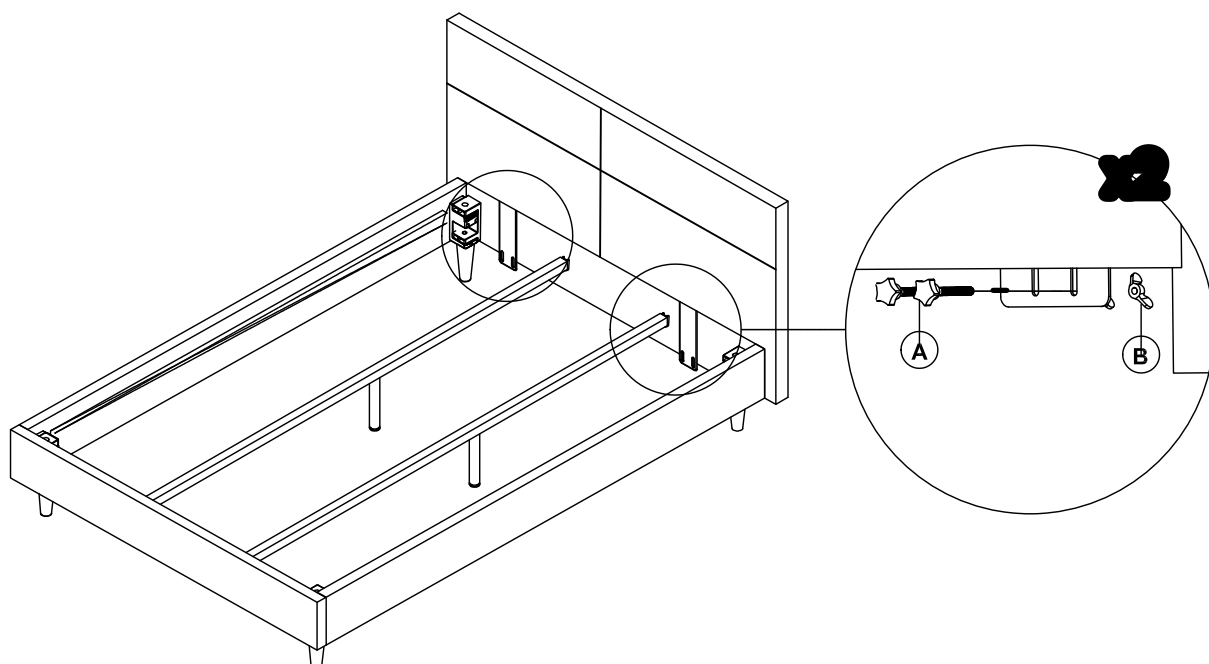

8

