


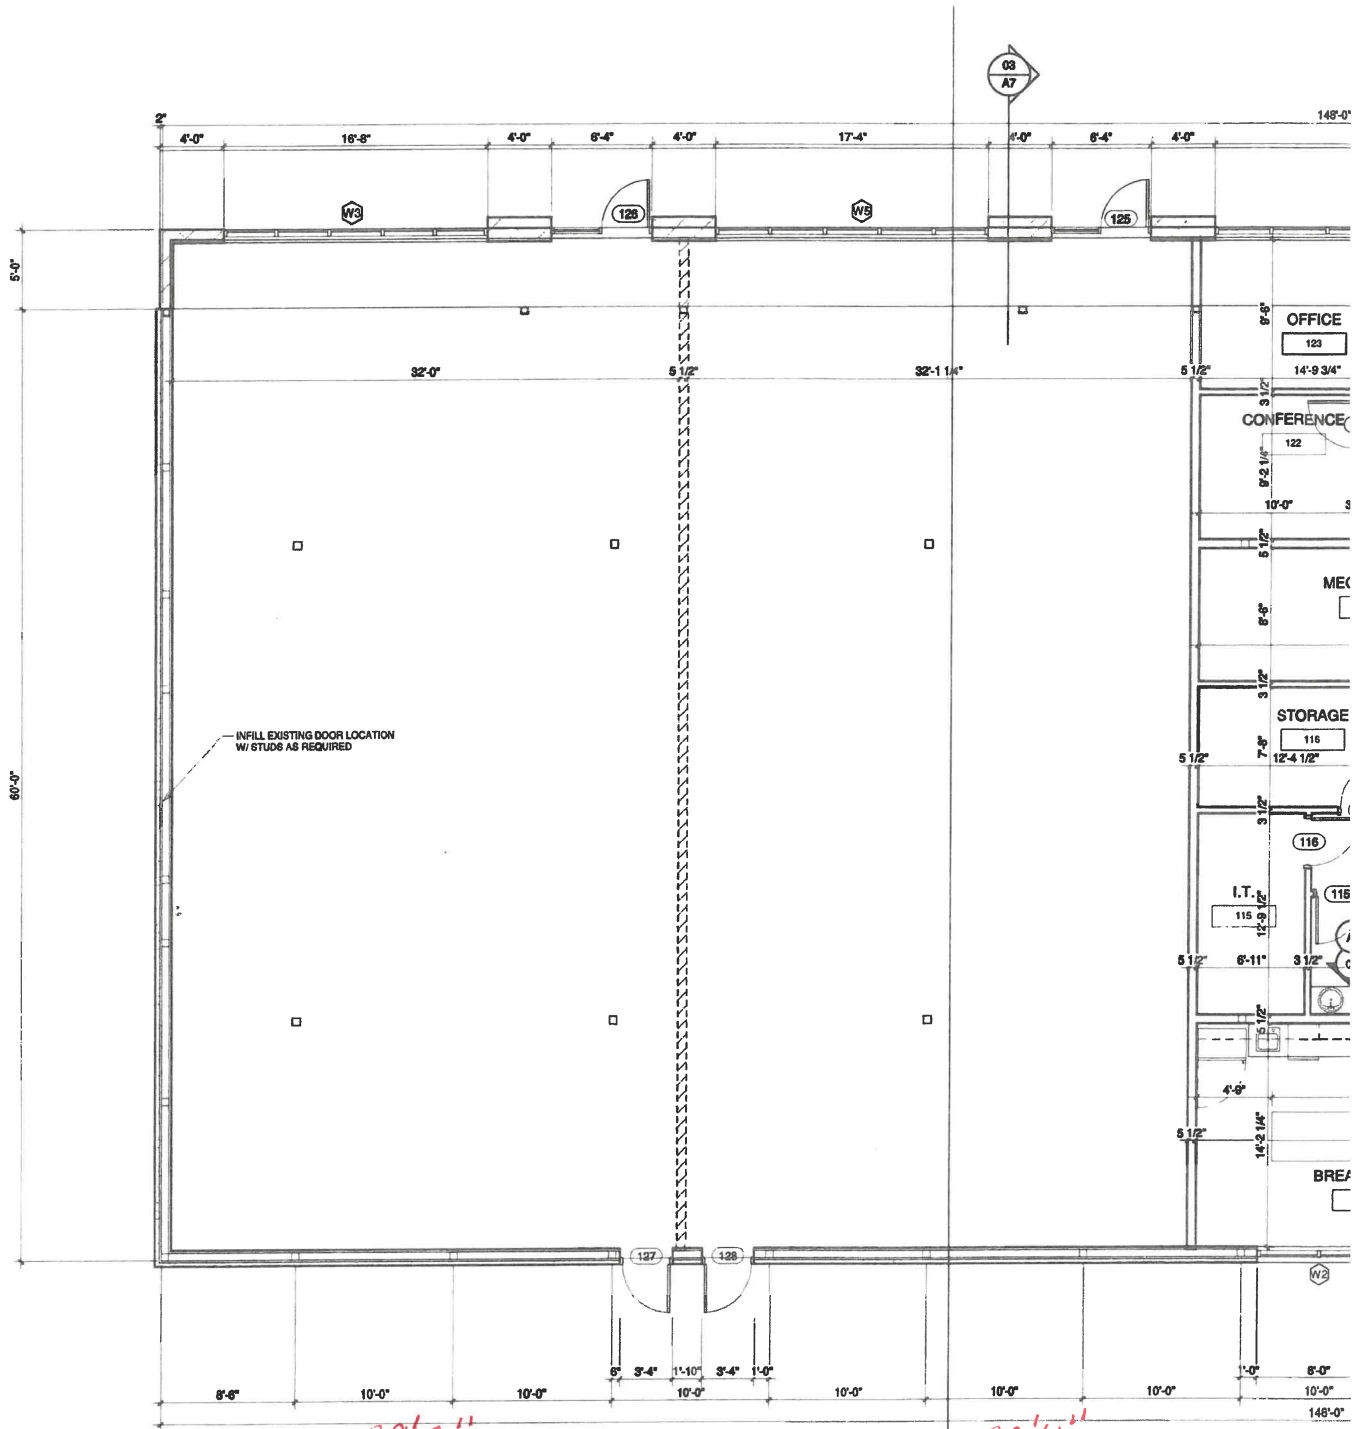

NOTES

1. INSTALL TEMPORARY SHORING AT REMOVED COLUMN LINE AS REQUIRED
2. INSTALL NEW 2X GIRTS AND PURLIN AS REQUIRED FOR INSTALLATION OF NEW SIDING AND ROOFING PANELS
3. ALL EXISTING POST VERIFY CONDITION AND REPLACE AS NEEDED
4. VERIFY ALL HEIGHTS PRIOR TO FABRICATION OF ANY STEEL COMPONENTS

5/8" GYP. BD. ON EACH SIDE OF 2 X 4 WOOD STUDS @ 16" O.C.

3802 TOTAL

1900

1902