


K23
 Mounting Template

Materials/Tools Required:

- Level
- Tape Measure
- Masking Tape
- Pilot Hole Drill Bit
- Drill and Drill Bit required for drilling into wall (see step 2)
- Caulk Gun
- GE RTV 108 or RTV 6700 Clear Silicone Adhesive *
- * Available from Takeform

K23 - SIGNIFY WP INSTALL


Step 1:
 Mount template on wall at desired location, using a level to ensure that template hole patterns are level.

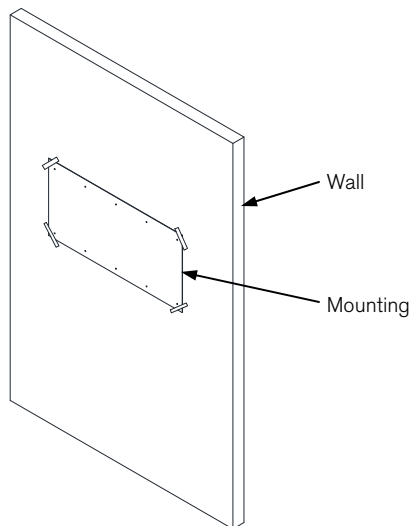

Step 2:
 Drill pilot hole at each mounting hole center location, then drill hole using appropriate bit diameter required to accommodate stud on backside of sign.


Caution: Use required drill and drill bit based on wall construction. For example, use proper sized hammer drill and masonry bit for masonry/stone wall applications., or conventional drill and bit for drywall/EIFS/wood/aluminum cladding wall applications.

Deburr holes to allow sign to sit flush to wall.

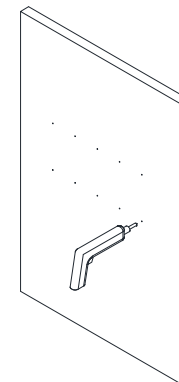


Step 3:
 Fill holes with silicone adhesive. Remove VHB tape backer.


Note: Silicone adhesive is the primary bonding agent. The VHB tape provides temporary hold until silicone adhesive cures.

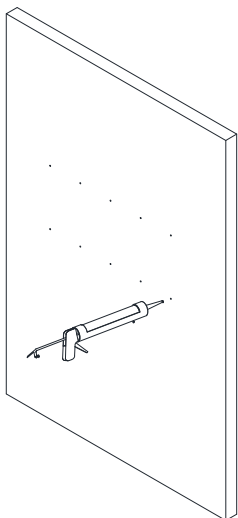

Step 4:
 Install WP sign to wall by aligning studs in back of sign to hole locations and press firmly against front face of sign.

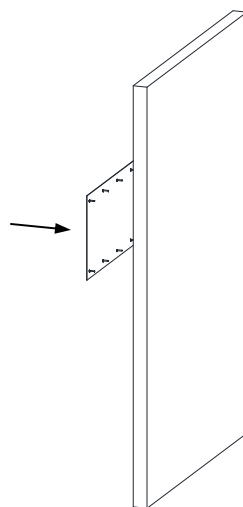

Step 5:
 Clean up debris accumulated from previous steps. Remove fingerprints using mild non-abrasive household cleaning agents, such as water and mild liquid dish soap. An adequate rinse should follow cleaning to assure cleansing of finish. Dilute the cleaning solution so as not to harm grass and shrubbery.

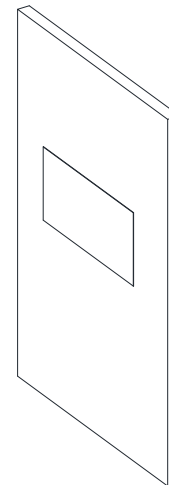

*Important: When installing sign, it must be aligned and centered to foundation and surrounding design elements (ex: sidewalks, curbs, building fascia).