


浴室防水任務

施作步驟


1



2

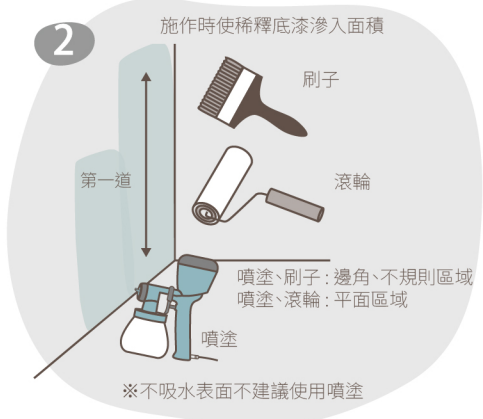

3

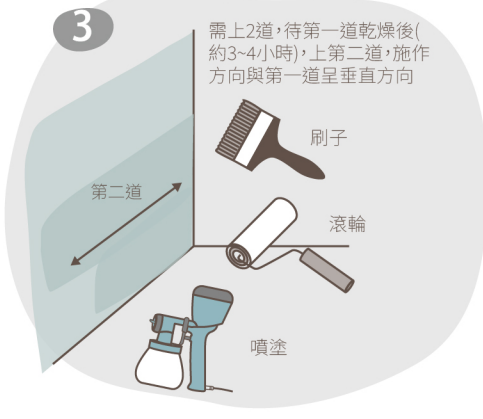

完成後，待手摸乾燥，進行下一步驟

4




5




6




7

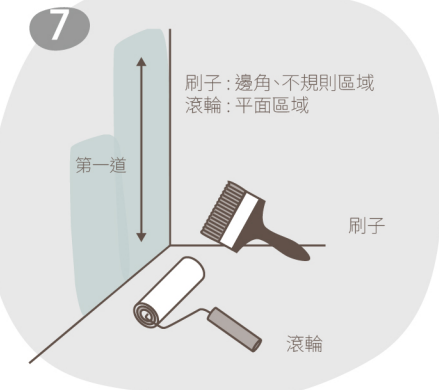

8

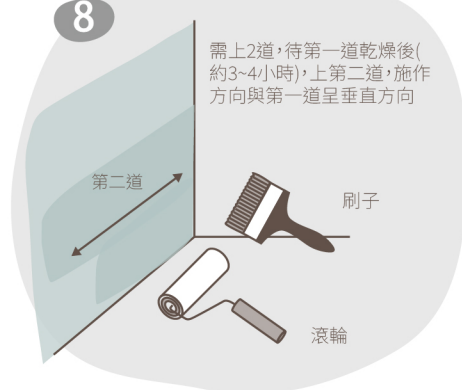

9

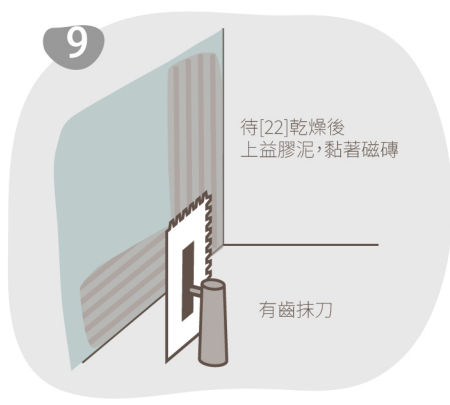


完成後，待彈性水泥成膜完全至少7天後再實施下一步


10




11

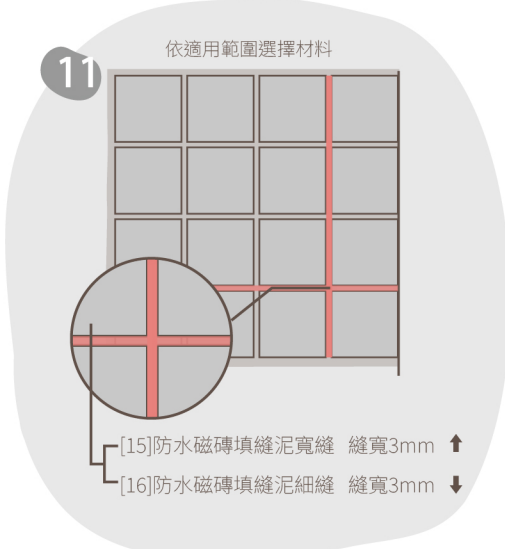

12

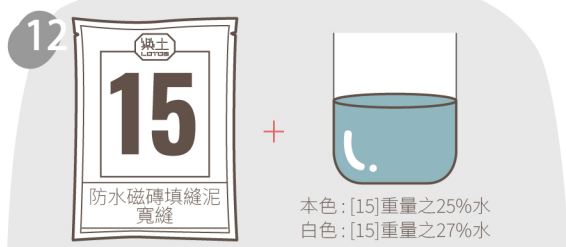

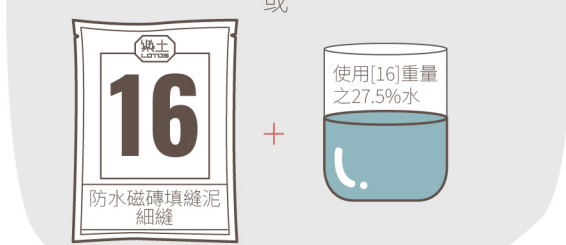

或

攪拌方式

10



11



12




13




14




15

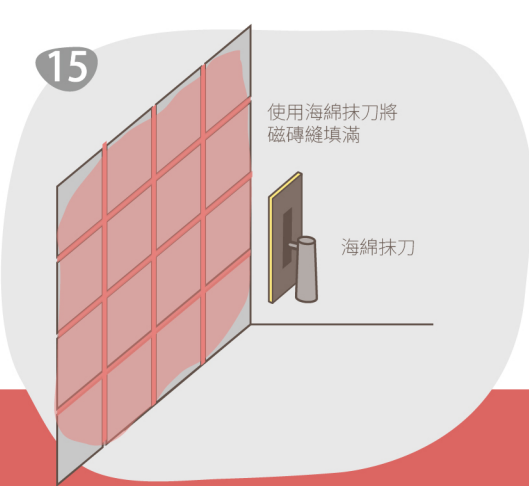

16

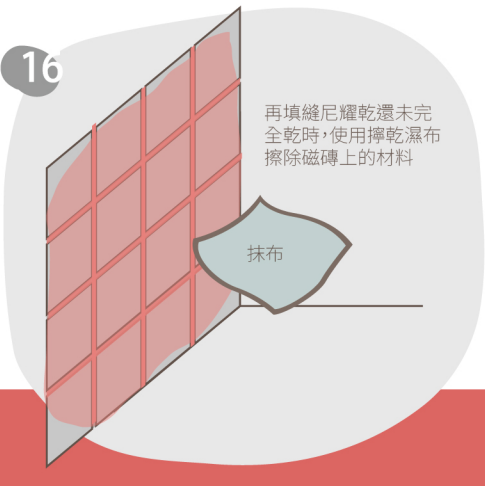

17

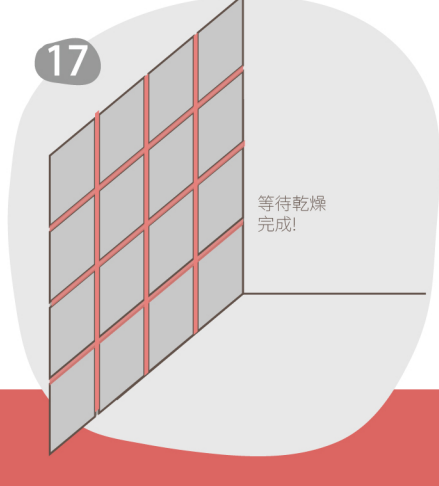

樂士
LOTOS