



1. PLACE THE TOP, BOTTOM, MIDDLE & 2 SIDES ON THE FLOOR.

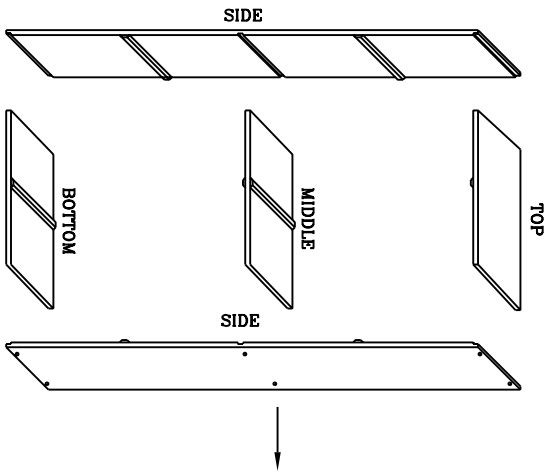


2. USE 12 2" - #8 SCREWS TO ATTACH THE PIECES TOGETHER. DO NOT TIGHTEN THEM ALL THE WAY UNTIL DIAMOND IS FULLY ASSEMBLED.

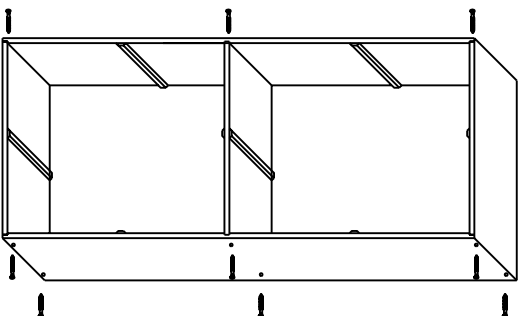

12 2" #8 Screws
1 Hardware Pack containing
2 angle brackets
2 plastic anchors
2 1" #8 screws
2 5/8" #6 screws


208 BOTTLE PINE SOLID DIAMOND BIN

3. INSERT 6 INTERLOCK BOARDS INTO BOX WITH NOTCHES FACING TOWARD YOU.

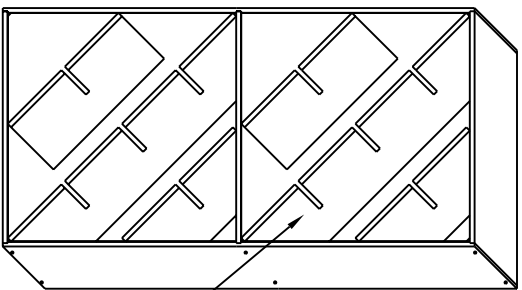


LARGER BOARD WILL GO INTO CORNERS
SMALLER BOARDS WILL GO IN-BETWEEN TWO CLEATS.
NOTCHES FACING OUT.


4. WITH NOTCHES FACING TOWARD RACKS INSERT REMAINING (6) INTERLOCK BOARDS

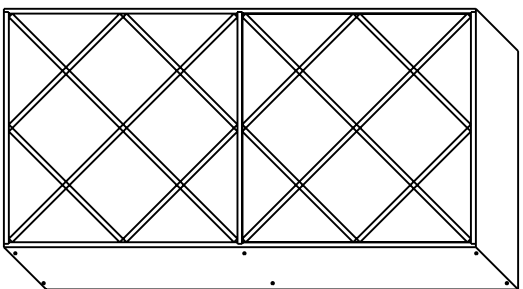

FINAL STEP
COMPLETELY TIGHTEN ALL SCREWS.
Secure unit to wall with hardware pack provided

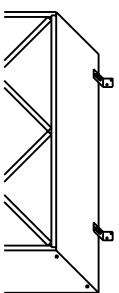

(1), 5/8" #6 Screw

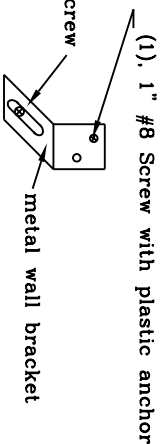

DIAMOND BIN COMPLETE.