



Anti Wave Universal Wall Goal

Note:

The Anti Wave Universal Wall Goal is designed to anchor nearest the pool edge or on the movable bulkhead, it is configured to get the most out of restricted space and is excellent for training, social matches, and for competition below the international level.

Patented Full Red net and Carvass are very strong and durable.



The Universal Wall Goal is the goal to fit the end of the pool.

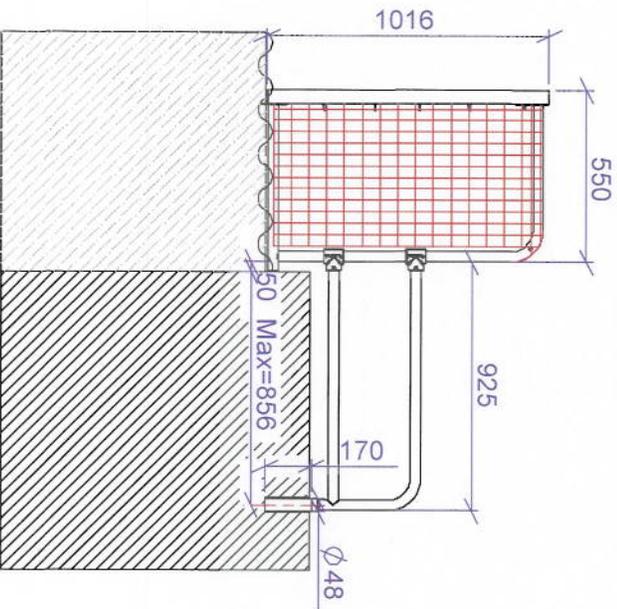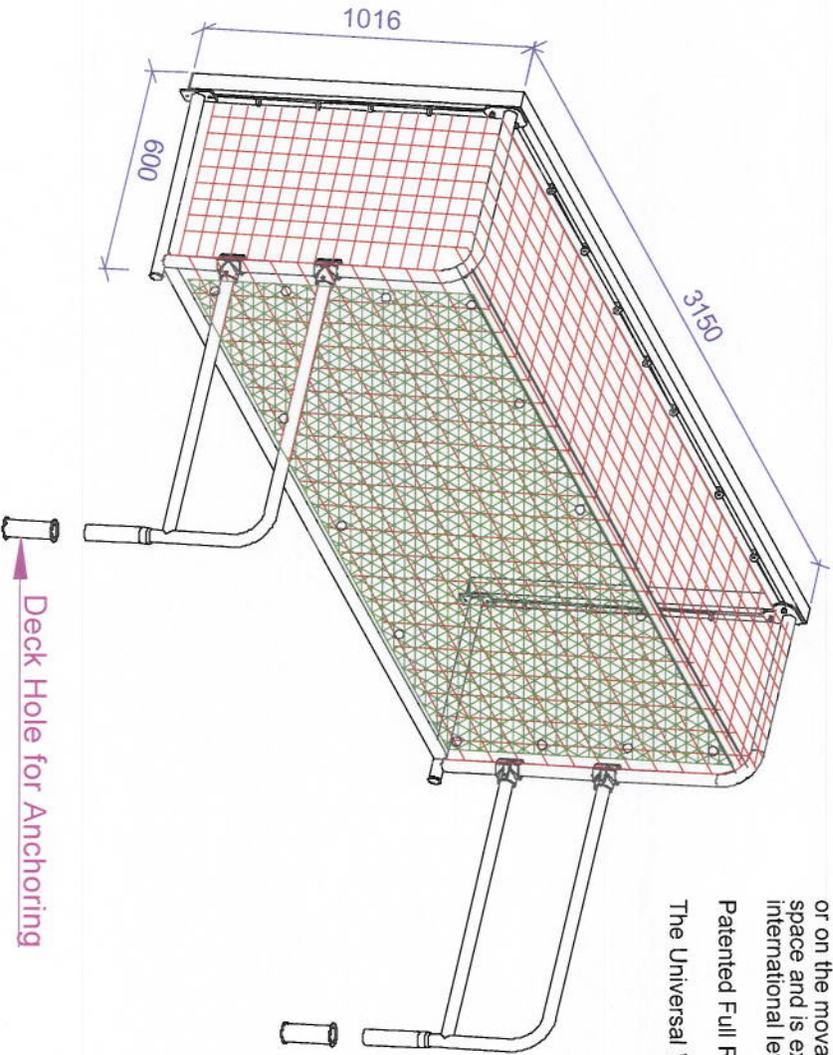

<p>anti™ PROPRIETARY AND CONFIDENTIAL The information contained in this drawing is the sole property of ANTI WAVE. any reproduction in part or as a whole without the written permission of ANTI WAVE is prohibited</p> <p>©ANTI WAVE 2006</p>				<p>Project Name: Universal Wall Goal</p>		<p>Product Name: Assembly Instruction</p>	
Drawn	Philip	Scale	No	Patent	4048677	Project No.	AWE00410
						Product No.	01
						Drawn Date	2006-08-14
						Verify Date	2006-08-17
						Revise Date	2006-08-18
						Verify Date	2006-08-21


Universal Wall Goal Assembly Instructions

General Sketch

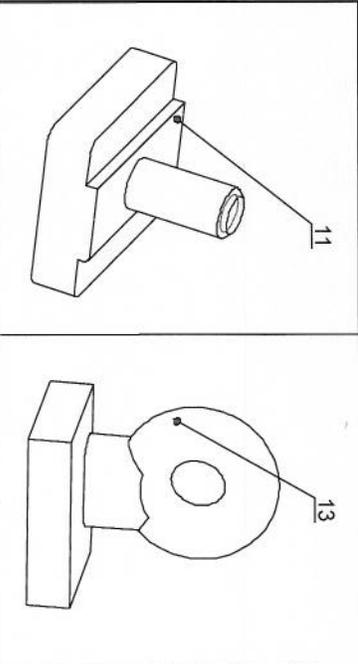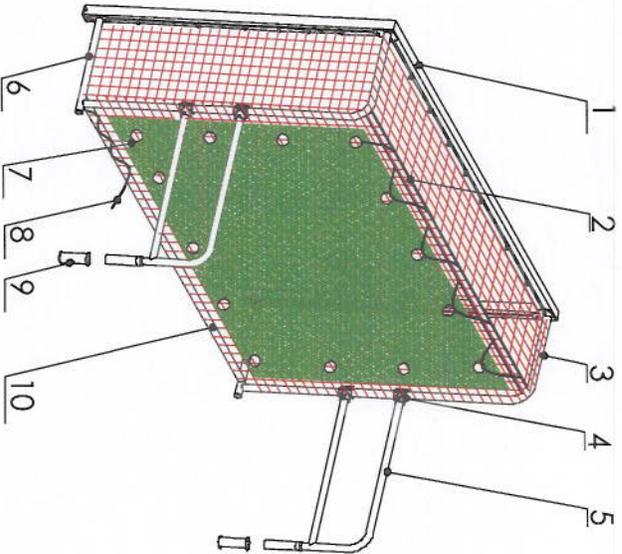

No.	Name	Qty
①	Front frame	1
②	Top tube for Canvass	1
③	Side Frame	2
④	Aluminium "T"	4
⑤	"F" Frame	2
⑥	Bottom Frame	1
⑦	Canvass	1
⑧	White Rope	2
⑨	Deck Hole Anchor	2
⑩	Red Net	1
⑪	M8x30 Slide Block, Washer and Lock Nut	6
⑫	M10x20 Countersunk Bolt	2
⑬	Eyebits	15
⑭	M6x70 Round Head Bolt	4
⑮	M6X25 Countersunk Bolt	8
⑯	M6 Lock Nut and Washer	4
⑰	Set Screw	8

Step 1

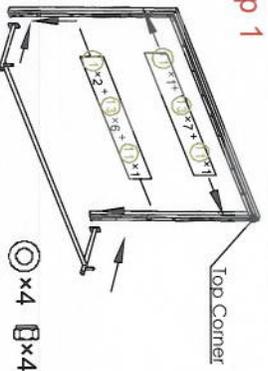


Open the Parts Bag, take out Slide Blocks and Eyebits. Slide them as above from top corner of Front Frame, then use Slide Block, M10x20 Round Head Bolt, Washer and Lock Nut to fix Bottom Frame to Front Frame. Note that the bolts crewed not tight.

Step 2




Slide Aluminium "T" from the bottom of Side Frame, use Slide Blocks, M8 Lock Nuts and Washers to fix Side Frame to Front Frame, then use M6X25 Countersunk Bolts, Washers, Lock Nuts to fix Side Frame to the Bottom Frame.

Step 3

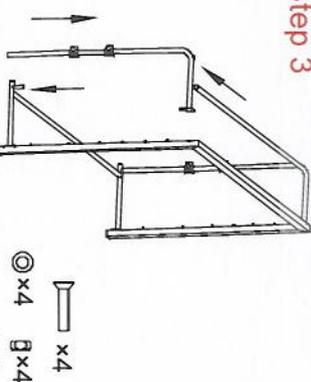


Slide Aluminium "T" from the bottom of Side Frame, use M6x25 Countersunk Bolts, Washer and Lock Nuts to fix the Top Tube to the Side Frame, fix the Side Frame to the Front Frame.

Step 4

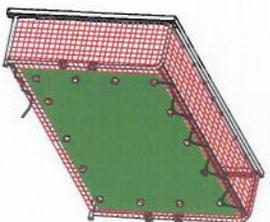


Use the White Rope to traverse the holes of Canvass to fix the Canvass to the Bottom Frame, Side Frame and Top Tube, then fix the Red Net to the Eyebits and lace it around the Side "L" Frames with White Rope.

Step 5

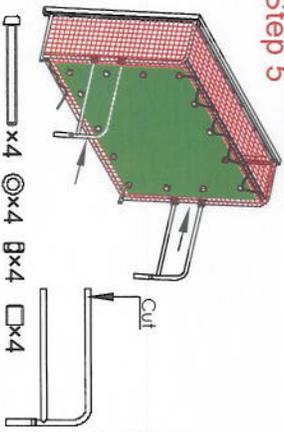

Cut the "F" Frame to fit the Pool, use the M6x70 Round Head Bolts, Aluminium "T" Washers, Lock Nuts and Set Screws to fix it to the Side Frames.

Step 6

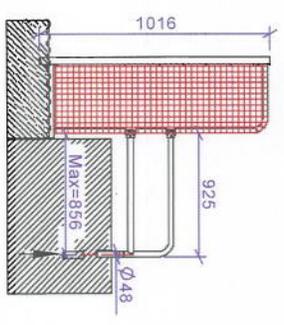

Insert the Leg of "F" Frame into the Deck Hole Anchors which you casted in the concrete (pls as close to pool edge as possible) two weeks ago to install the Wall Goal to the Pool.

Project Name:

Universal Wall Goal

Product Name:

Assembly Instruction

Drawn

Philip

Scale

No

Patent

4048677

Project No.

AWE00410

Product No.

02

Verify Date

2006-08-21

anti
 PROPRIETARY AND CONFIDENTIAL
 The information contained in this drawing is the sole property of ANTI WAVE. any reproduction in part or as a whole without the written permission of ANTI WAVE is prohibited.

©ANTI WAVE 2006