



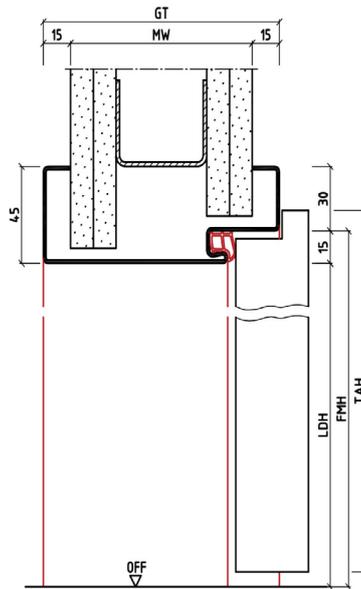

Lewis Aldridge


Steel frames for active leaf doors Stud Walls

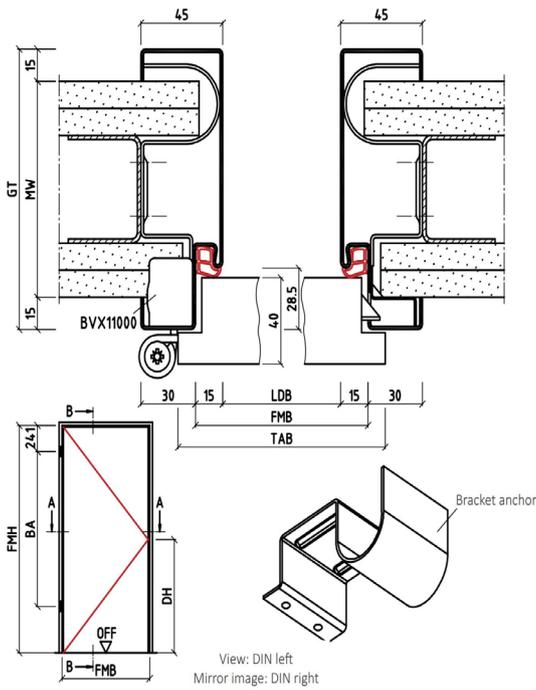


- Wrap around frame as block profile (1 part) for installation together with the wall
- For stud walls
- Illustration with braket anchor and hinge pocket

Steel frames for active leaf doors Stud Walls

Section A-A

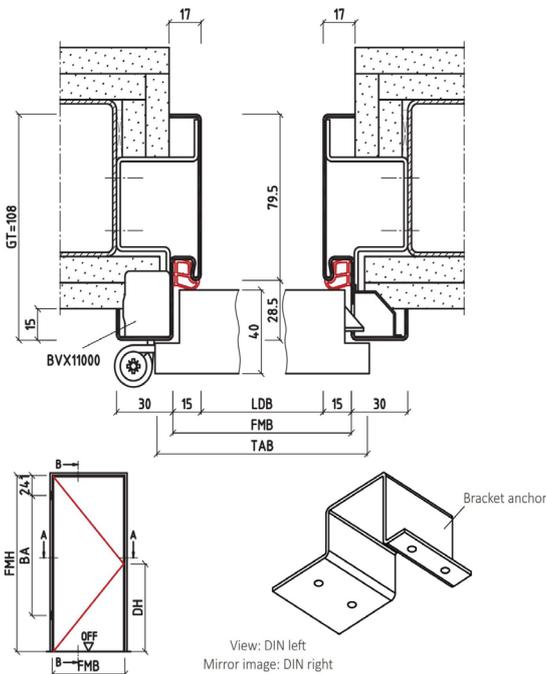

Section B-B

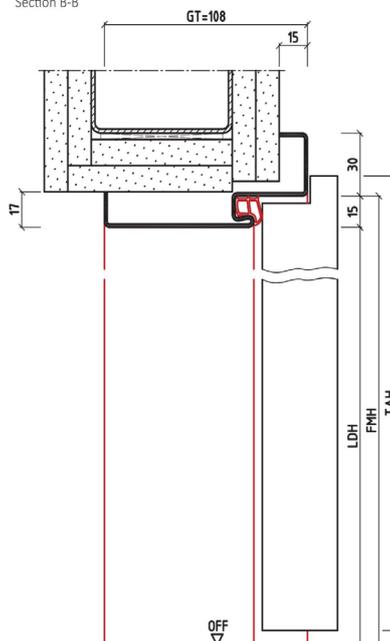

- Corner Frames
- For stud walls




Lewis Aldridge

Steel frames for active leaf doors For almost all wall types


OUR RECOMMENDATIONS

① Installation as wrap around frame

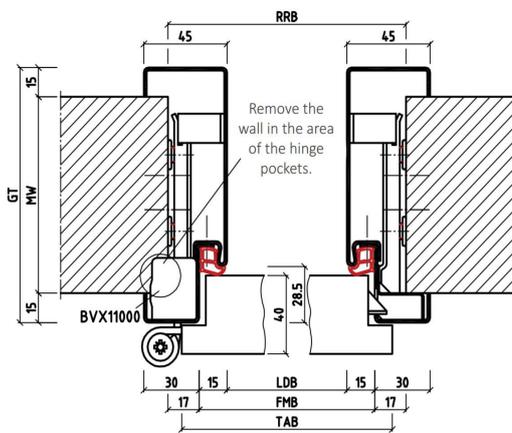

Our recommendation:
Choose an architrave width of at least 35/50mm, in order to cover any possible chasing out of the wall.

② Installation as flush block frame


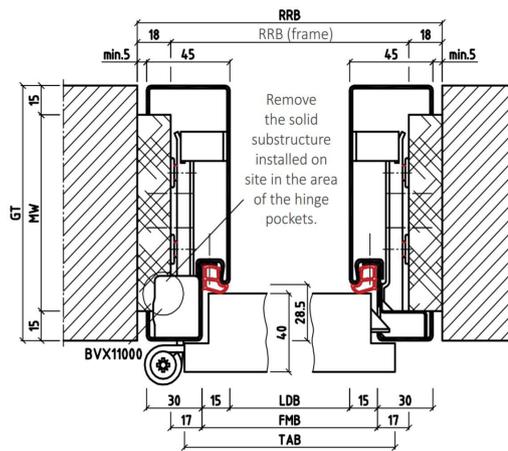


Attention:
For DIN door leaf increase the RRM of the wall (RRB +36 mm and RRH +18 mm)


- Wrap around frame as block profile (2 part split) for installation after wall completion
- For fairfaced brickwork
- Easy mortar-free installation with patented leveling anchor

FURTHER DESIGNS


③

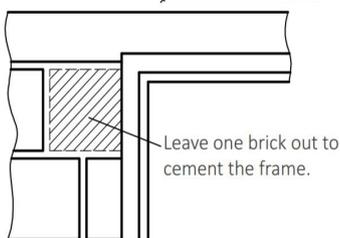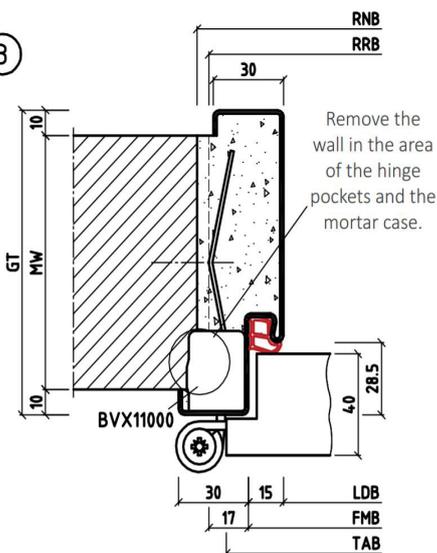

④

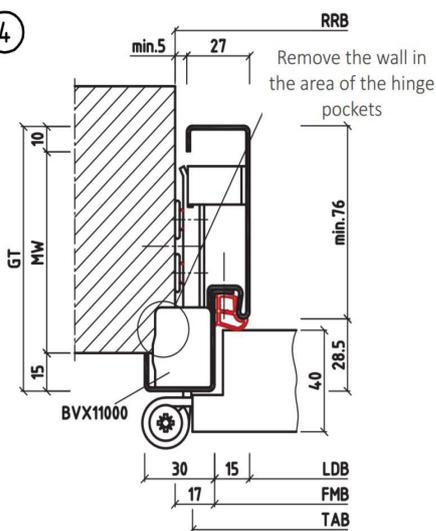

⑤


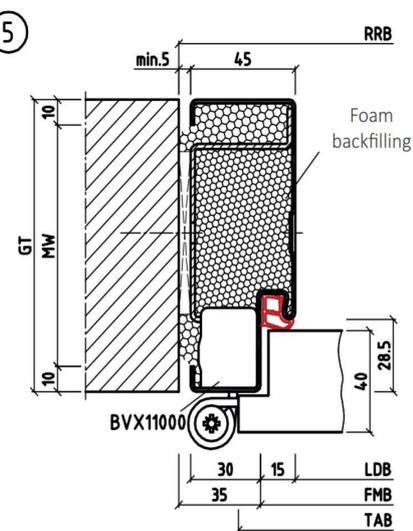


Attention:
For DIN door leaf increase the RRM of the wall (RRB +36 mm and RRH +18 mm)



Lewis Aldridge

Steel frames for active leaf doors Between two walls

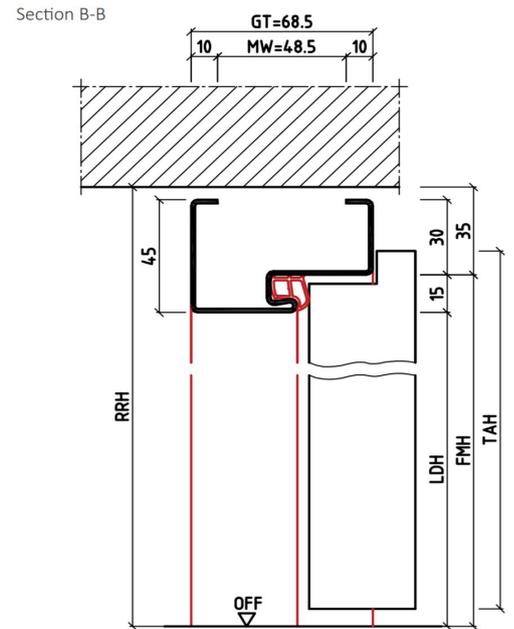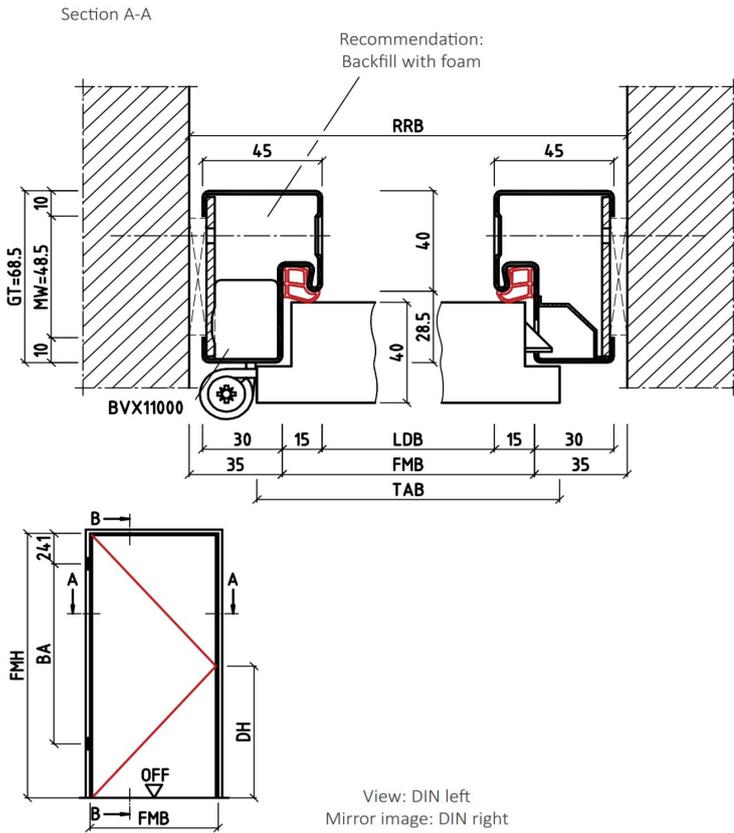


- Block frame (1 part)
- Between two walls
- Illustration with flat steel anchor and hinge pocket BVX11000




Lewis Aldridge


Installation

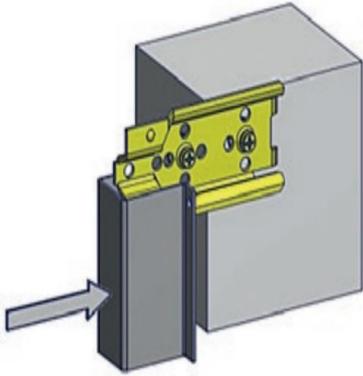

Push the front part into the wall opening.

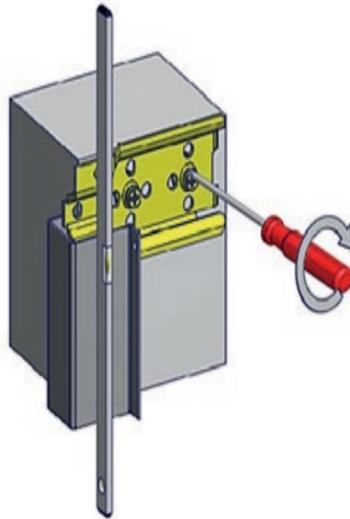

Align the front part using the levelling screws and then join to the wall.

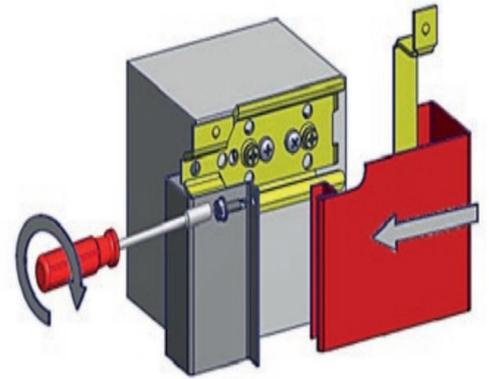

Push the back part into position and screw the two parts together in the seal groove.


- Patented BOS levelling anchor with guiding anchor
- Particularly installation-friendly
- Distance to the wall can easily be adjusted using a screwdriver





Lewis Aldridge

OUR RECOMMENDATION

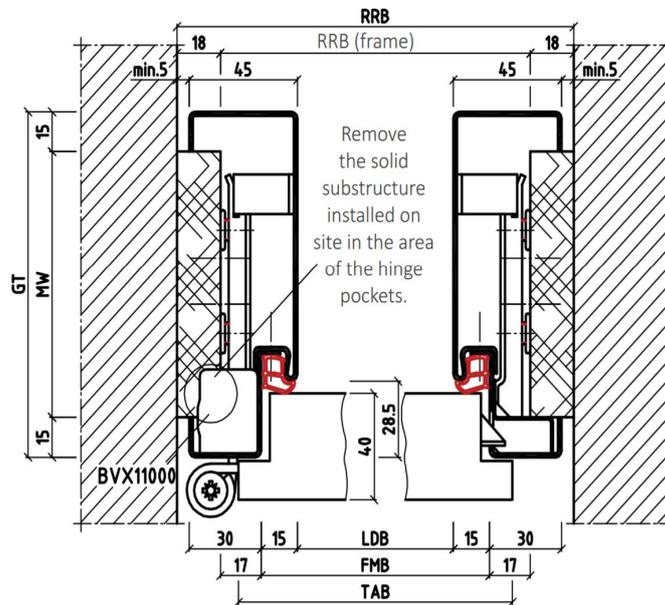

Attention:

The door cannot be opened to 90°.

Our recommendations:

- Use a door stop, to prevent possible damage to the wall from the handle and overhead door closer.
- If a door closer is used, an integrated one (ITS) is preferable.

- Block frame (2 part split)
- Between two walls
- Easy mortar-free installation with patented levelling anchor






Lewis Aldridge

Steel frames for active leaf doors For almost all wall types

Horizontal Section

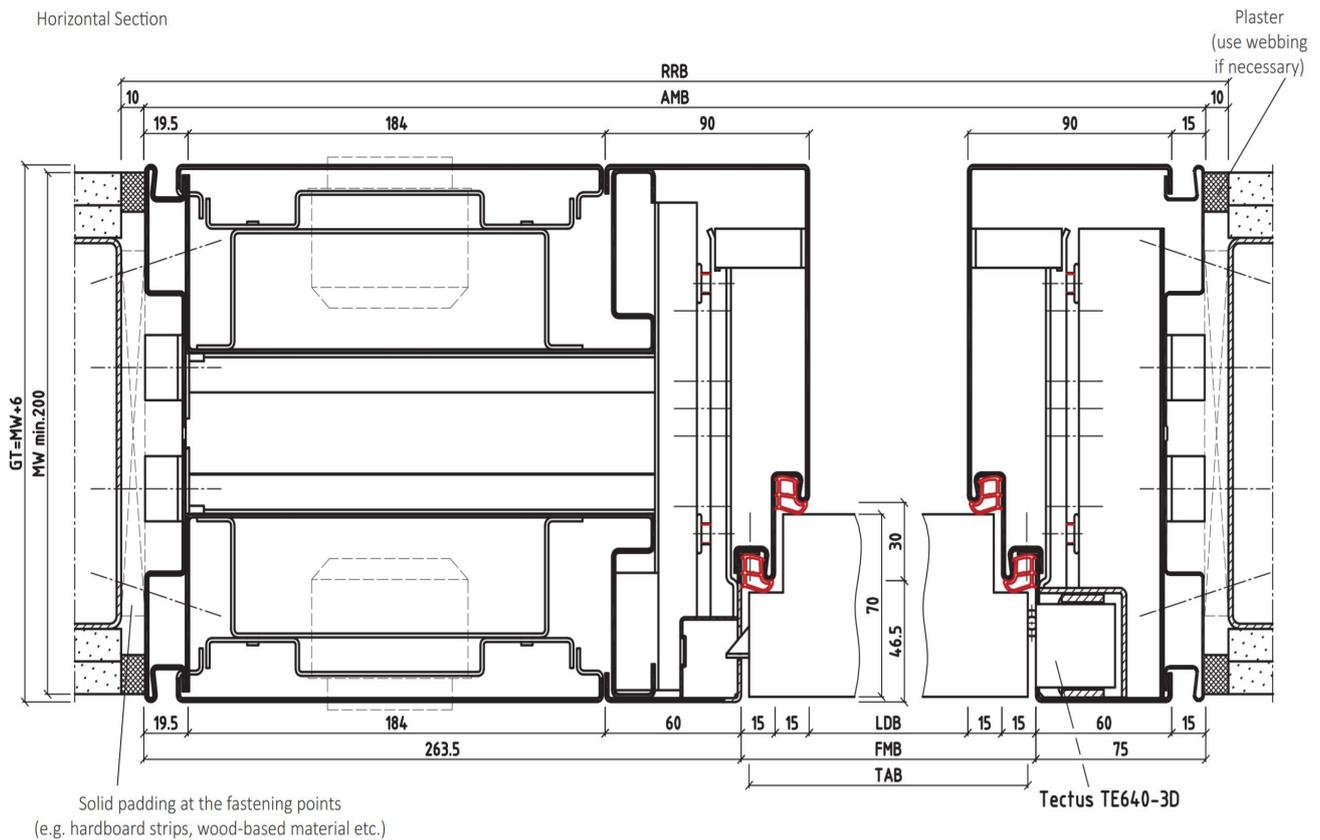

- CasePlus Front, two sided design
- for installation together with the wall
- for stud walls

