



Full Contact


Mini Van

Figure 8 Race

Sept 14th

Starting at \$500 to win

Need More Info?

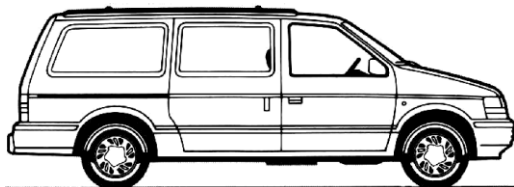

Contact:

Ray 217-8400 or

Wade 233-6047



www.rattlesnakeraceway.org



Mini Van Figure 8 Rules

Rattlesnake Raceway

Fallon NV

- **Van:** Any 4 or 6 cylinder mini vans, no full size vans allowed.
- **Safety Gear:** Helmet & Neck Brace Required, Fire suit highly suggested. Stock seat and belts ok, if in good working condition. Aftermarket seats (no plastic) allowed with 5 point harness suggested.
- **Appearance:** Paint drivers door with a bright color, suggest Red, Orange or Yellow. Make that area stand out from the rest of the van. We highly suggest themes, costumes, and props. Make the show as fun as possible from start to finish.
- **Race:** This is a full contact figure 8 race. Avoid hitting the drivers door as much as possible. Dead vans will be left in place till the end. We will go red for safety reasons like fire or a roll over. Last car standing, or first car to complete all scheduled laps WINS.
- **Gutting:** Must remove headlights, tail lights, all windows, plastic bumper covers, rearview mirrors, any easily removed trim. Removal of interior components suggested. **MUST REMOVE AIRBAGS!**

Cage:

No over building at all. Tech inspectors and track officials have the final say. You have two attempts to pass tech inspection.

1. All doors must be welded solid on the outside only, or 4 bolts or chains 1/2" in size. A steel plate can be inserted in window opening of drivers door only, or a steel plate can be welded to outside of drivers door only (not both). May only exceed door opening or edges by 2 inches.
2. Hoods must have 12 inch cut out in the center for fire purposes. Hoods may be bolted with four 1" bolts. Front two hood bolts may contact frame by welding or bolting. On the core support only, back two hood bolts may go to a 6X6 corner plate only not to frame. Or you can use chain of 1/2" size to secure hood.
3. Front suspension must be stock OEM parts to that car only.
4. Bumpers: 5 mph bumpers are ok, you can weld bumper seams solid. NO stuffing bumpers. NO swapping, homemade brackets are ok, max size 2X3 by 3/8 by 24 inches long measured from back of bumper, welded to outside of frame only. BUMPER HEIGHTS NOT TO EXCEED 18 INCHES MEASURED FROM GROUND TO BOTTOM OF BUMPER.
5. Crossbars: door bars are not to exceed 1 inch from front firewall and 1 inch from rear wheel hump. Two crossbars may be used, one 10 inches away from front firewall and second behind the seat within 6 inches. Main hoop (Roll bar) Suggested, 1 1/2 inch X .095 minimum, can be rear hoop with kickers (like Image 1). Roll bar can cover drivers side only or full and can be connected to 1 of your cross bars. May add 1 Petty bar from center of vehicle top of main hoop to passenger side floor, no farther forward than door opening (like image 2). Max crossbar size 1 ft by 1/2" for door bars, 6 inches by 1/2" for cross bars. Window bars required, 2 inch by 1/4 inch max size and only welded or bolted to window opening only. Four window bars max for the car. Drivers area should be well padded, a fire extinguisher suggested to be mounted on dash or front windshield crossbar aiming at driver.



6. Gas tanks: Must be in front of rear axle if using OEM fuel tank otherwise use metal gas can bolted or chained firmly down in back seat area.
7. All body bolts must be in stock OEM positions only. Body rubbers must all be left intact.
8. Tires: Mud and snow tires are ok, 17 inch rim maximum. Air filled only. NO bead locks, NO screws bolts or studs in tires, No bobcat, fork lift or tractor tires. 10 ply maximum rating
9. Frames: All stock OEM frames for the car. 24 inches of frame repair allowed on a previously used car, 12 inches per side. Frame repairs CANNOT touch bumper brackets at all. You may cold tilt or cut factory weld and re weld it only at crash box, NO ADDITIONAL METAL PERMITTED!
10. Radiators: must be mounted in stock OEM position only. NO homemade radiators.
11. Distributor Protectors are ok
12. Batteries must be moved to inside passenger seat area. They must be in a basket and ratchet strapped (use two for maximum security) to the floor board or caged and bolted to floor board, using 1/2" bolts. Positive terminal must be covered, rubber suggested.

HAVE ANY QUESTIONS CONTACT:

RAY: 775-217-8400

WADE: 775-233-6047

WT Auto and Salvage

Interested in a car?

Call 217-8400