

Small Cot Sheet

Contents: Cotton/Polyester Fabric and 24 pieces of 10" long elastic to make six sheets

Preparation and Cutting:

1. Prewash fabric in warm or cool water and tumble dry on the permanent press setting.
 2. Cut six rectangles that measure 43 by 22 ½ inches. You will need to straight cut at one end first.
 3. For each sheet, measure 4 inches from each edge and mark. Connect marks by drawing a diagonal line at each corner. (Figure 1)
 4. Cut along each diagonal line to create a shape like Figure 2.
- NOTE: To cut all four corners at one time, fold fabric in half once by length and again by width. Then measure as in step 3 and cut one diagonal line through all four thicknesses. The result should be shaped like Figure 2.

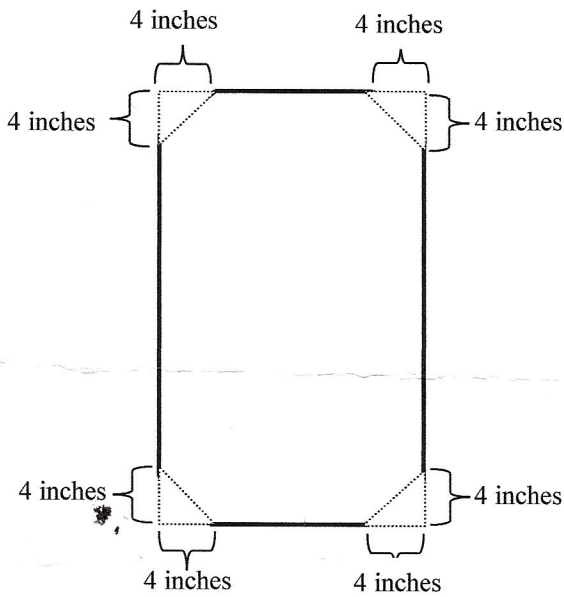


Figure 1

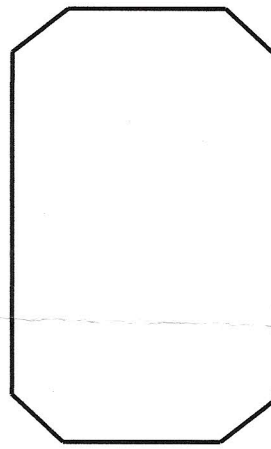


Figure 2

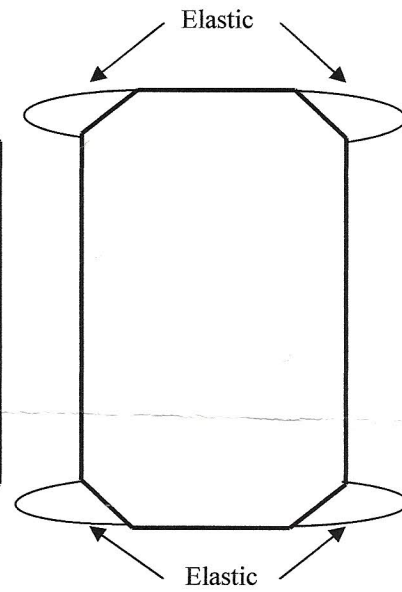


Figure 3

Sewing:

1. On the four diagonal edges, either serge or fold and press under ¼". Then either serge or fold and press ¼" on the straight edges also.
2. Fold and press a ½" hem on the diagonal edges first and then fold and press a ½" hem on the straight edges also. This creates a clean-finished hem and a space to insert the end of the elastic.
3. Attach ends of elastic as shown in Figure 3 by tucking each end of elastic into the straight edges of the fabric. Stitch elastic securely then stitch around all edges to create a finished hem.

NOTE: The elastic will be looped around the cot legs to secure the sheet. Finished size should be approximately 42 by 21 ½ inches.