


AKUPANEL 1x0.25

Installation instructions

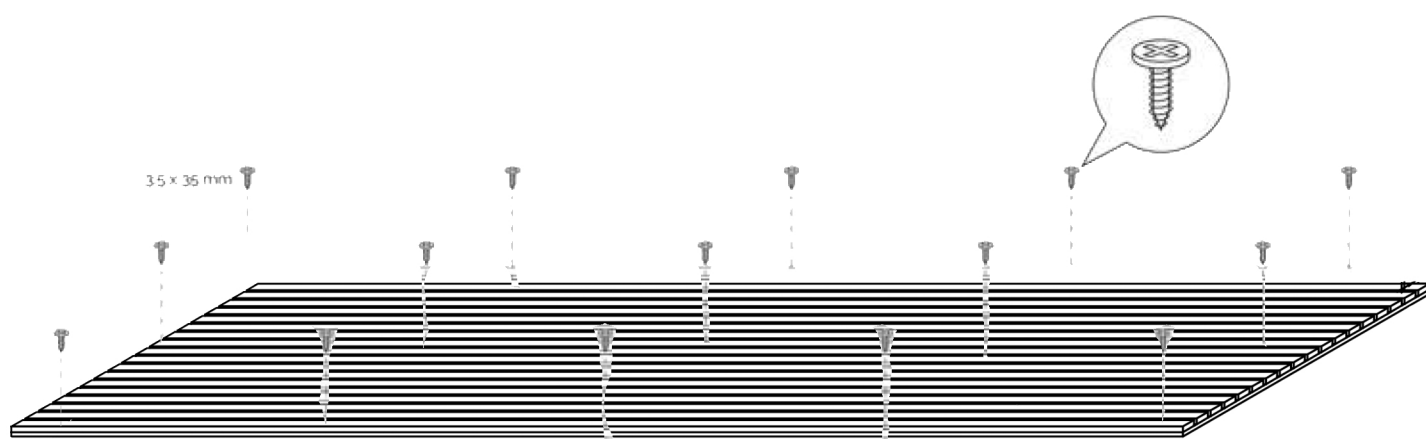

1. Install 45 mm (thickness) studs directly on your wall/ceiling with a distance of 600 mm.
2. Install the acoustic panels directly on the studs with screws (min. 3.5x35 mm). You can easily fit the screws between the lamellas in the underlying acoustic felt. Every panel is installed with 15 screws. Use black screws to achieve the best finish.
3. Cutting of the panels are easily done with a fine jigsaw. The underlying acoustic felt is easily cut with a good knife.
4. For an expanded acoustic solution, you can place 45 mm insulation between the studs.