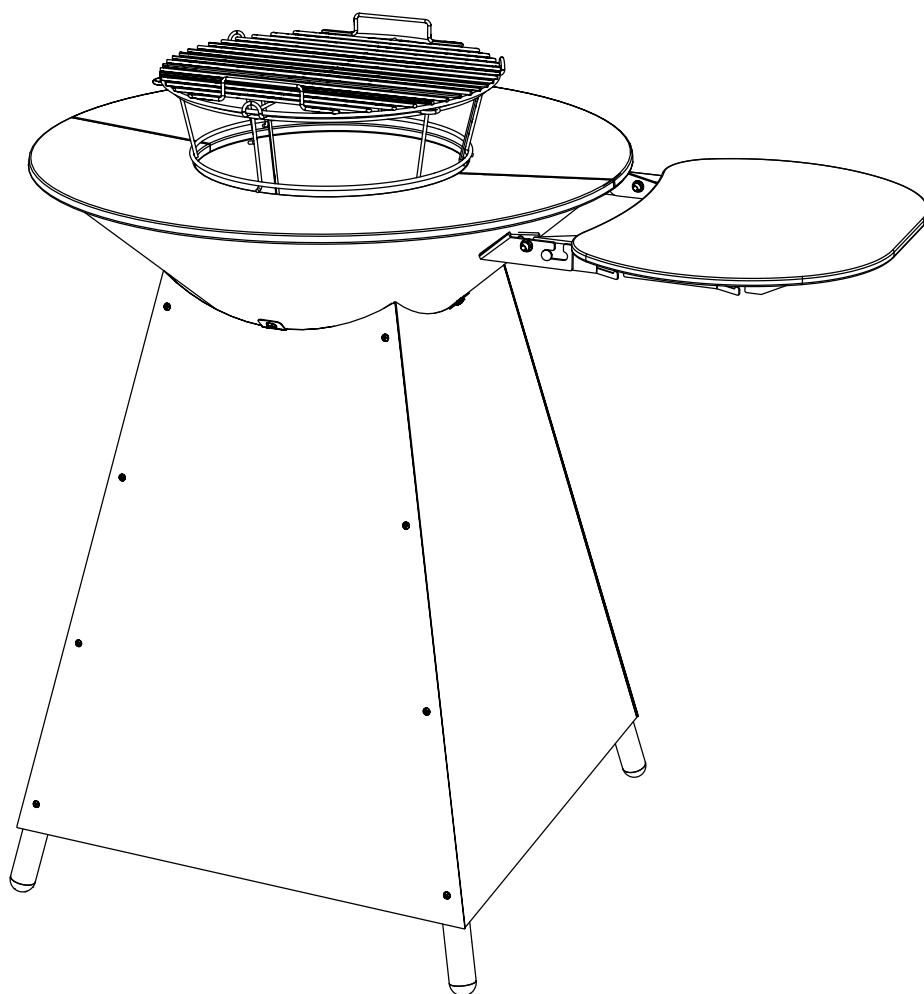
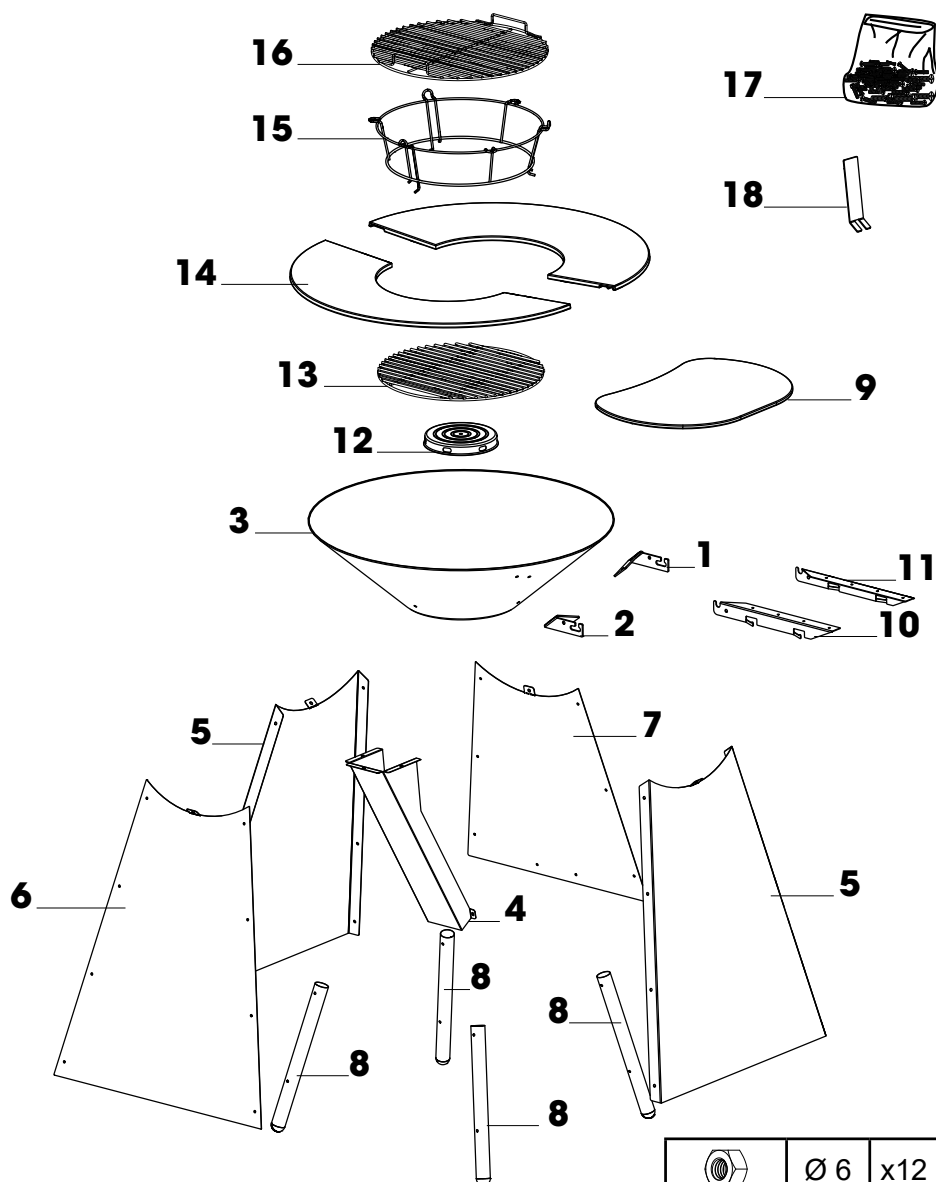


TOM 300907i EN







	Ø6 x 30	x1
	Ø6 x 15	x4
	Ø6 x 12	x8
	Ø4 x 40	x8

	Ø4 x 12	x13
	Ø3,5 x 9,5	x8
	Ø 6	x1
 frein	Ø 6	x1

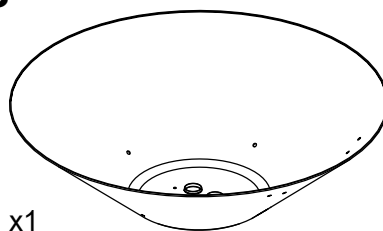
	Ø 6	x12
	Ø 4	x21
	Ø 6	x12
	Ø 6	x2
	Ø 4	x21

1

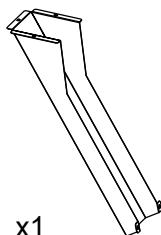
x1

2

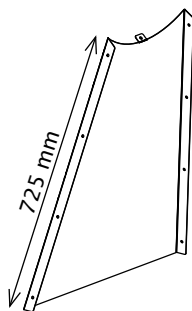
x1

3

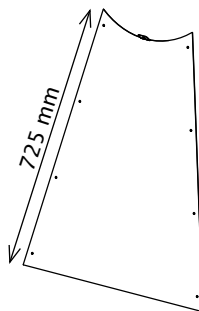
x1

4

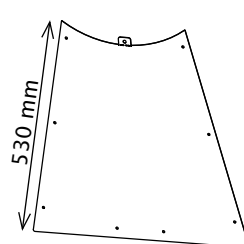
x1

5

x2

6

x1

7


x1

8


x4

9

x1

10


x1

11

x1

12

x1

13

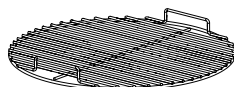
x1

14

x2

15

x1

16

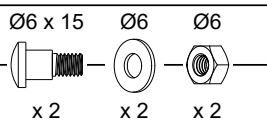
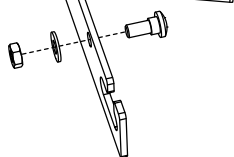

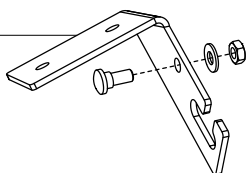
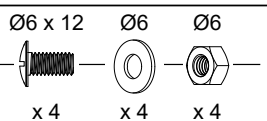

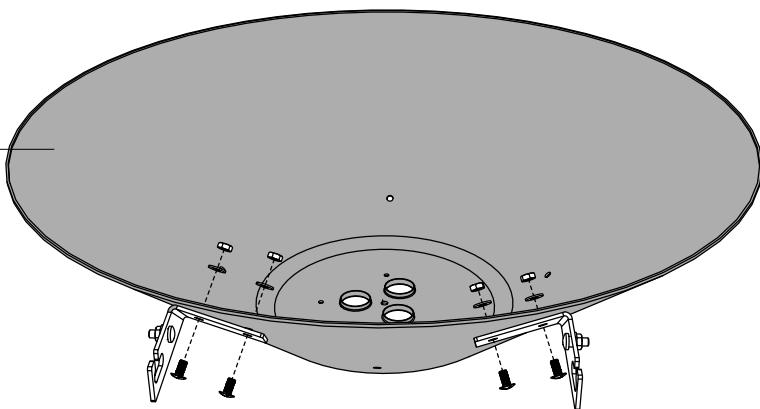
x1



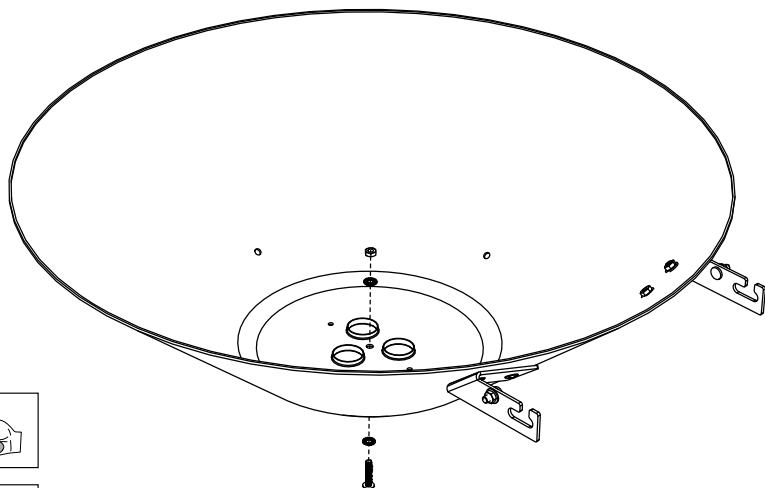
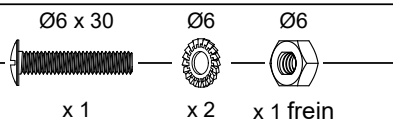

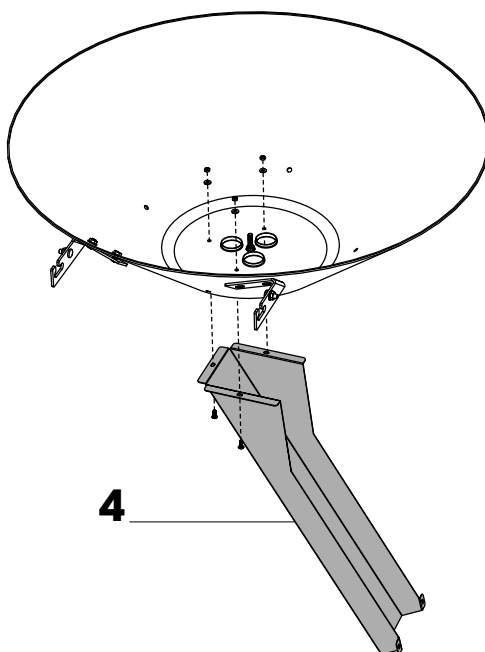

17

x1

18

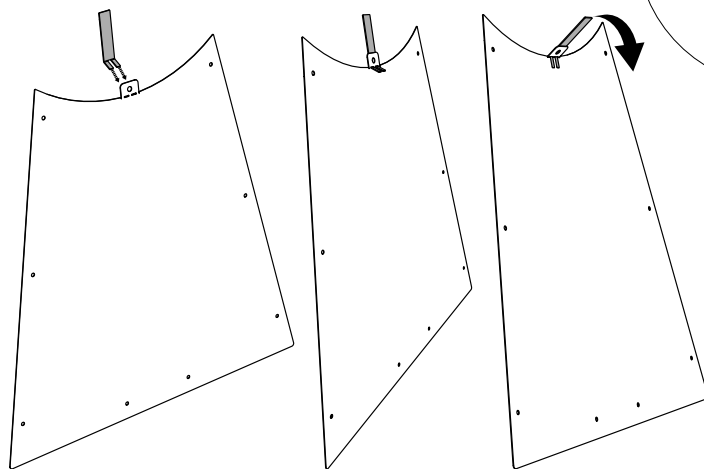
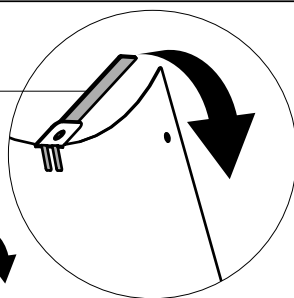
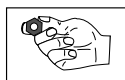
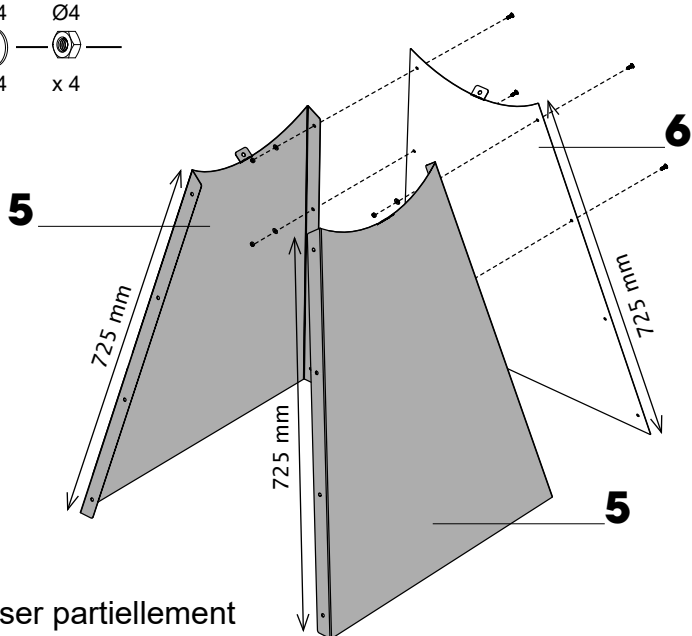
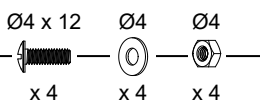
x1

1**2****1****2****3**

3**4**

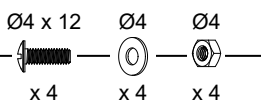
5

Plier sur chaque tôle la languette
avec la clé qui définit l'angle

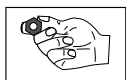
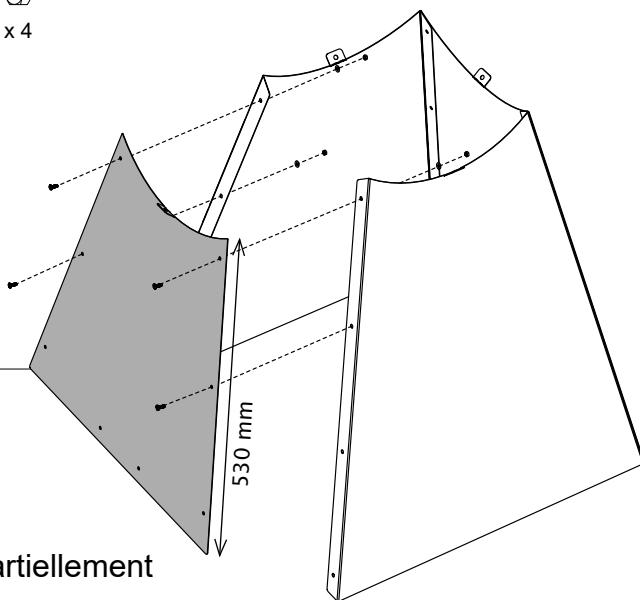
**18****6**

Visser partiellement
à la main

7

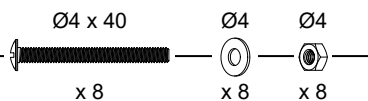


7

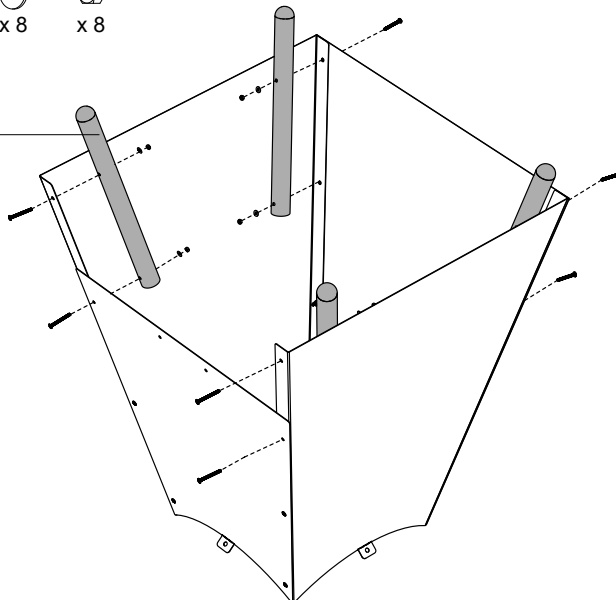


Visser partiellement
à la main



8



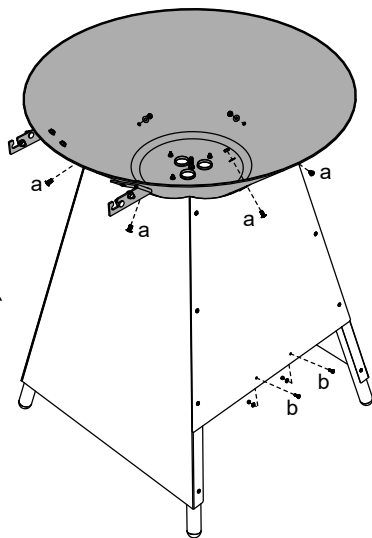
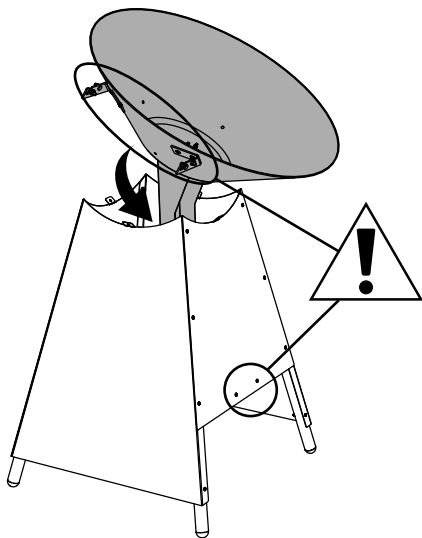


8 x 4



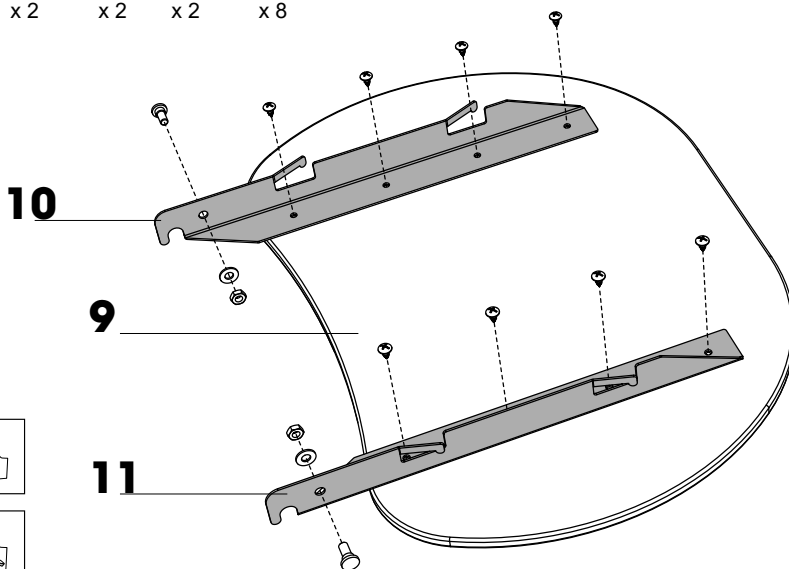


Visser toutes les
vis précédentes



9

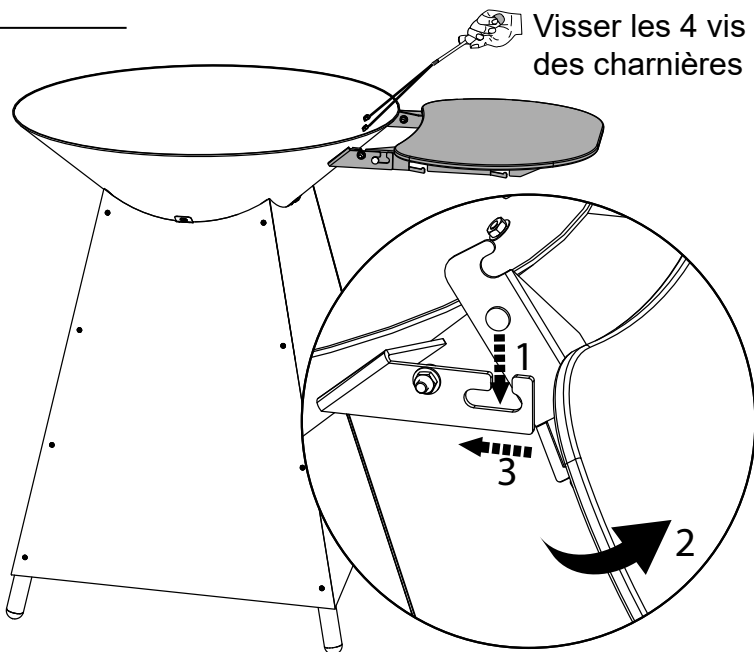

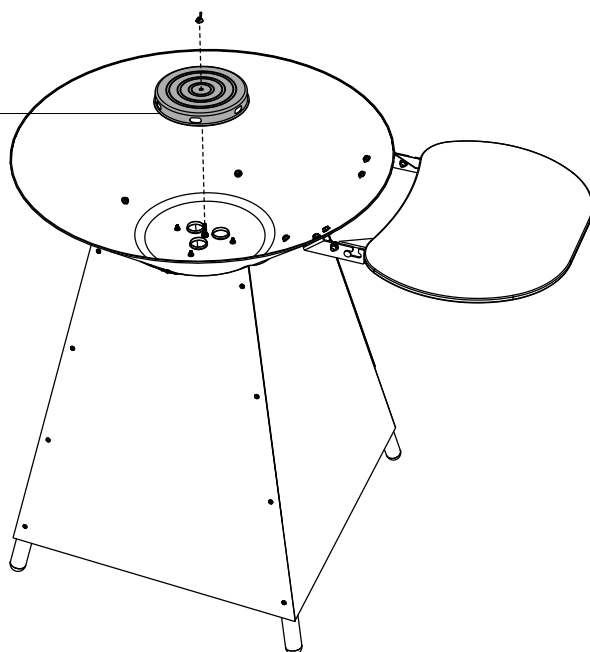


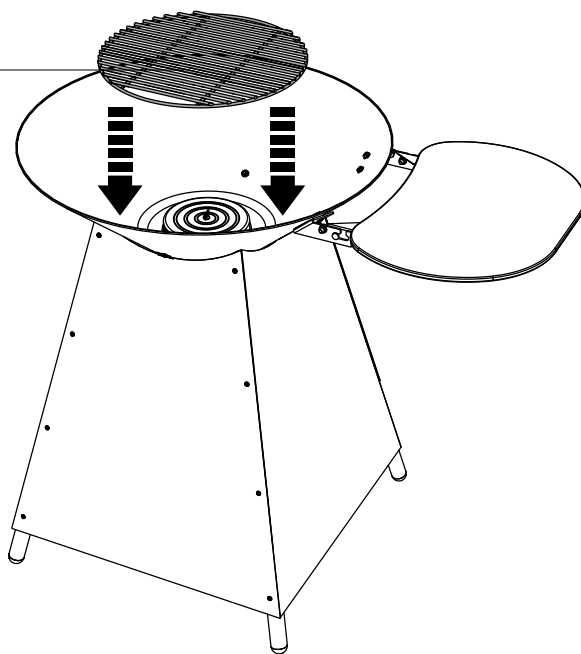
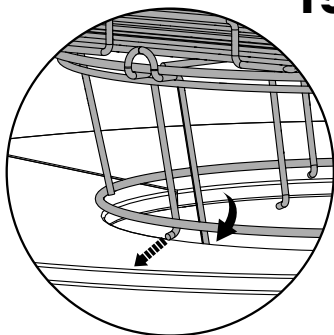
10

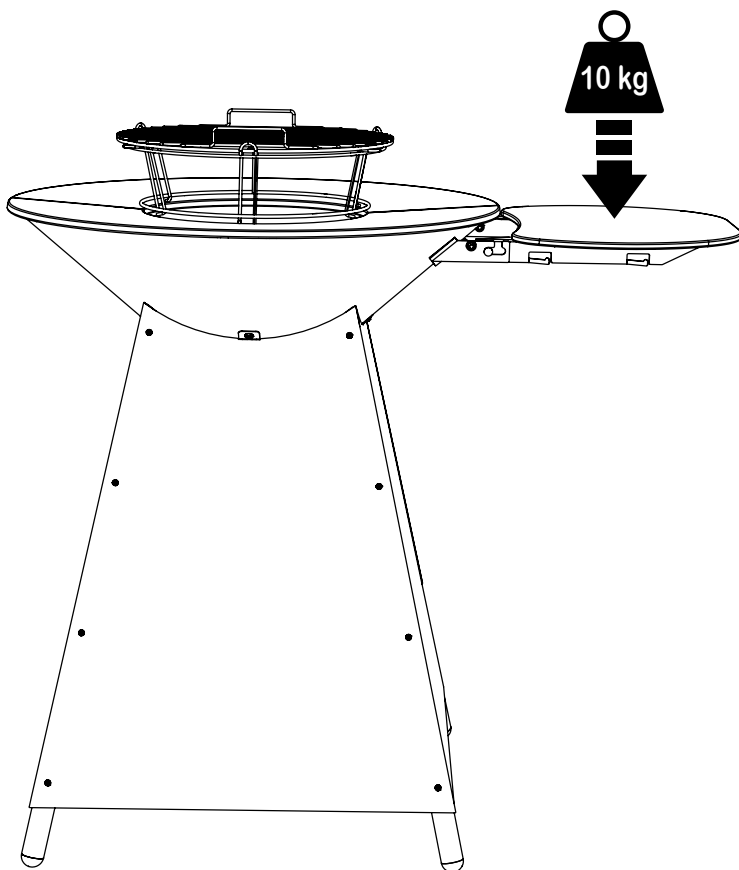


11

Visser les 4 vis
des charnières

**12****12**

13**13****14****16****15****3****2****1****14**



CONSEILS

- Pour vider votre barbecue de ses cendres dévisser l'écrou papillon de la pièce N°12 et faire glisser celles-ci par la goulotte pièce N°4 en mettant un réceptacle en dessous de celle-ci.