




C.R.S. D9QR836X

427 HILLCREST WAY • EMERALD HILLS • REDWOOD CITY, CALIFORNIA 94062 ■ (650) 369-1188 • Fax (650) 369-9988

Model 800

CONTINUING AIRWORTHINESS

The Model 800 requires a battery exchange every two years. Battery exchange is recommended on an annual basis. Not changing the battery in the two year shelf/use life, can result in the AA battery leaking and causing damage. If you put the unit on the shelf for future use, remove AA battery till you are ready to use the clock. Store batteries or units with batteries in a dry place at normal room temperature, around 59F. If no AA battery is used, no continuing airworthiness is required.

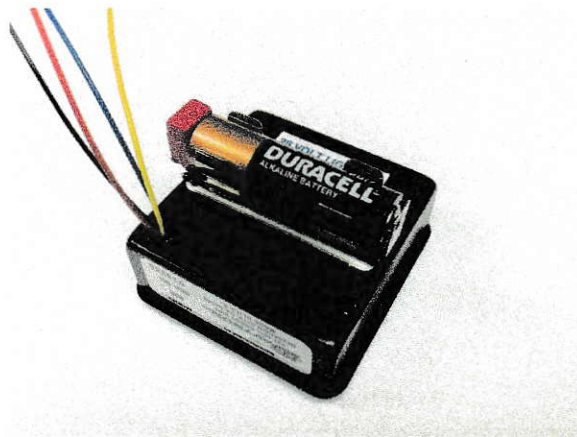

You can remove the AA battery while unit is still mounted in aircraft panel, or remove unit for better access. To remove battery, pry up on the ground, negative side till battery pops out of clips negative side and pull battery out of other side of clips. If you pull up on the positive side first, it can remove the red polarity cap. RTV polarity cap back in place is removed accidentally. Install fresh battery by pushing into the clips, positive side partly first then into negative side clip. In some cases, if the battery is not touching both terminals, you can push in on the negative side terminal a little bit before inserting battery. Use a 1.5v AA battery.