



LED SOLAR FLYING SAUCER LAMP

NEW



LED AB-TY13



LED AB-TY14

PARAMETER

Product material: ABS+PC
 Waterproof grade: IP65
 Net weight of product: AB-TY13:815G, AB-TY14:1185G.
 Internal battery: 18650 lithium battery.
 AB-TY13: 3.7V/6000mAh, AB-TY14: 3.7V/9000mAh.
 Number of lamp beads: AB-TY13:156LED.
 AB-TY14:236LED, 2835 lamp beads.
 Lighting method: solar light induction
 Switch mode: four modes
 Luminous flux: AB-TY13:1200lm, AB-TY14:1300lm.
 LED color temperature: 8000-9000K
 COB color temperature: 6000-6500K
 Photovoltaic panel wattage: AB-TY13:6V-8W-1.3A.
 AB-TY14:6V-10W-1.7A.
 Charging method: photovoltaic solar panel charging
 Charging time: approximately 6 hours
 Charging status: Green bright
 Power: AB-TY13:200W, AB-TY14:400W.

UK

THE REMOTE CONTROL BUTTONS ARE ADJUSTED AS FOLLOWS:

AB-TY13



LED+COB all on: NO, voltage: 4V, current: 4.2A, power: 17W.
 Turn off the light: OFF
 LED: fully lit, MODE1, voltage: 4V, current: 4, power: 16W.
 LED: semi bright, MODE2, voltage: 4V, current: 2, power: 8W.
 COB: soft light, MODE3, voltage: 4V, current: 0.2, power: 1W.
 Reduce brightness: (nine adjustable gears)
 Increase brightness: (nine levels adjustable)




Hang the solar panel in the outdoor sun exposure position, and the 5-meter extension line of the lamp holder can be hung at will to illuminate the indoor position.

AB-TY14



LED+COB all on: NO, voltage: 4V, current: 4.4A, power: 18W.
 Turn off the light: OFF
 LED: fully lit, MODE1, voltage: 4V, current: 4.3, power: 17.2W.
 LED: semi bright, MODE2, voltage: 4V, current: 2.2, power: 9W.
 COB: soft light, MODE3, voltage: 4V, current: 0.2, power: 1W.
 Reduce brightness: (nine adjustable gears)
 Increase brightness: (nine levels adjustable)

POWER DISPLAY SCREEN



PRECAUTIONS FOR SOLAR INSTALLATION!




The installation location of solar energy is generally chosen to be on the roof, and must be installed in a location with sufficient sunlight, with high charging efficiency.

PRODUCT ACCESSORIES



PRODUCT SIZE

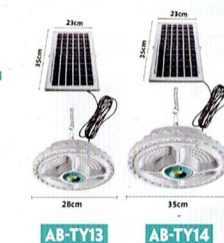

LED SOLAR FLYING SAUCER LAMP

NEW



LED AB-TY13



LED AB-TY14

LED Lampada solare a disco volante

IT

PARAMETRO

Materiale del prodotto: ABS + PC
 Grado impermeabile: IP65
 Peso netto del prodotto: AB-TY13:815G, AB-TY14:1185G.
 Batteria interna: batteria al litio 18650.
 Numero di perle della lampada: AB-TY13:3.7V/6000mAh, AB-TY14:3.7V/9000mAh.
 AB-TY14:236LED, 2835 perle di lampada.
 Metodo di illuminazione: induzione della luce solare
 Modalità interruzione: quattro modalità
 Flusso luminoso: AB-TY13:1200lm, AB-TY14:1300lm.
 Temperatura del colore del LED: 8000-9000K
 Temperatura del colore COB: 6000-6500K
 Potenza del pannello fotovoltaico: AB-TY13: 6V-8W-1.3A.
 AB-TY14:6V-10W-1.7A.
 Metodo di ricarica: carica del pannello solare fotovoltaico
 Tempo di ricarica: circa 6 ore
 Stato di ricarica: verde brillante
 Potenza: AB-TY13:200W, AB-TY14:400W.

I PULSANTI DEL TELECOMANDO SONO REGOLATI COME SEGUE:

AB-TY13



LED + COB completamente illuminato: NO, tensione: 4V, corrente: 4.2A, potenza: 17W.
 Spegner la luce: OFF
 LED: completamente illuminato, MODE1, tensione: 4V, corrente: 4, potenza: 16W.
 LED: semi luminoso, MODE2, tensione: 4V, corrente: 2, potenza: 8W.
 COB: luce morbida, MODE3, tensione: 4V, corrente: 0.2, potenza: 1W.
 Ridurre la luminosità: (nove marce regolabili)
 Aumentare la luminosità: (nove livelli regolabili)



Appendere il pannello solare nella posizione di esposizione esterna al sole e la linea di estensione di 5 metri del supporto della lampada può essere appesa a piacimento per illuminare la posizione interna.

I PULSANTI DEL TELECOMANDO SONO REGOLATI COME SEGUE:

AB-TY14



LED + COB completamente illuminato: NO, tensione: 4V, corrente: 4.4A, potenza: 18W.
 Spegner la luce: OFF
 LED: completamente illuminato, MODE1, tensione: 4V, corrente: 4.3, potenza: 17.2W.
 LED: semi luminoso, MODE2, tensione: 4V, corrente: 2.2, potenza: 9W.
 COB: luce morbida, MODE3, tensione: 4V, corrente: 0.2, potenza: 1W.
 Ridurre la luminosità: (nove marce regolabili)
 Aumentare la luminosità: (nove livelli regolabili)

SCHERMO DI VISUALIZZAZIONE DELL'ALIMENTAZIONE



PRECAUZIONI PER L'INSTALLAZIONE SOLARE!



Il luogo di installazione dell'energia solare è generalmente scelto per essere sul tetto, e deve essere installato in un luogo con sufficiente luce solare, con alta efficienza di carica.

ACCESSORI DI PRODOTTO



DIMENSIONE DEL PRODOTTO

