
Selection diagram

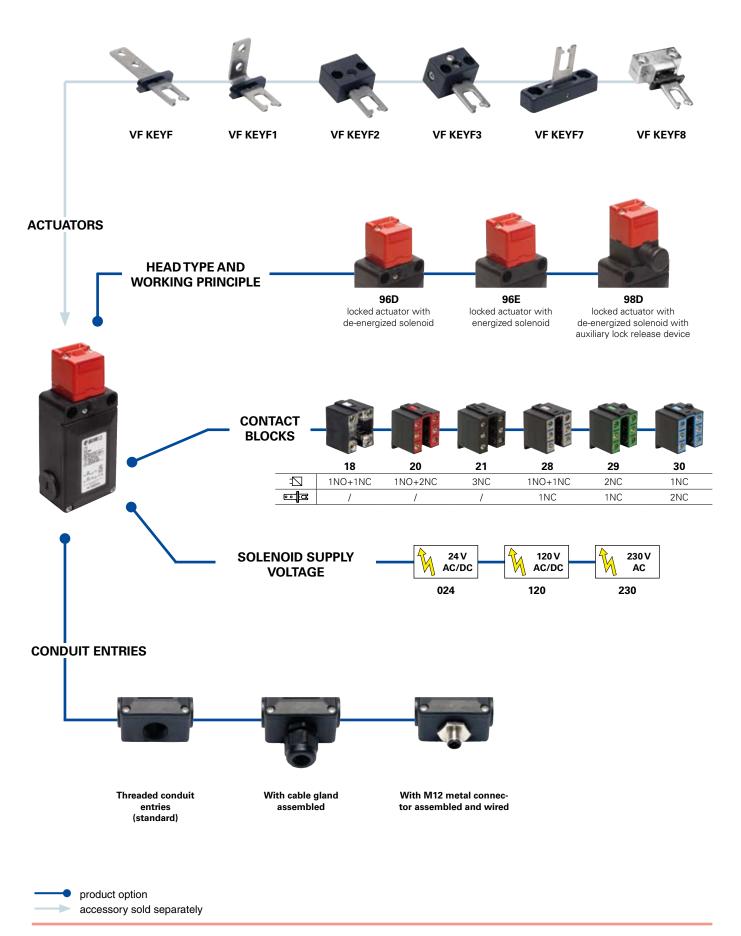

Code structure

Attention! The feasibility of a code number does not mean the effective availability of a product. Please contact our sales office.

FS 1896D024-F1GM2K40

Contact blocks		
	Solenoid operated	Actuator operated
18	1NO+1NC	
20	1NO+2NC	
21	3NC	
28	1NO+1NC	1NC
29	2NC	1NC

Working principle		
96D	locked actuator with de-energized solenoid	
96E	locked actuator with energized solenoid	
98D	locked actuator with de-energized solenoid with auxiliary lock release device	

Solenoid supply voltage		
024	24 Vac/dc (-10% +25%).	
120	120 Vac/dc (-15% +20%)	
220	220 \/aa / 150/ 100/ \	

•		
Preinstalled cable gland or connectors		
	no cable gland or connector (standard)	
K21	with assembled cable gland suitable for Ø 6 to Ø 12 mm cables range	
K40	with M12 metal connector assembled and wired, 8 poles	
For the complete list of all combinations, please contact our technical office.		

Threaded conduit entry
PG 13,5 (standard)

M2 M20x1,5

Contacts type		
	silver contacts (standard)	
G	silver contacts gold plated 1 µm	

•		
Actuators		
	without actuator (standard)	
F	with straight actuator	
F1	with right-angled actuator	
F2	with jointed actuator	
F3	with jointed actuator adjustable in two directions	
F7	with jointed actuator adjustable in one direction	
F8	with universal actuator	

Safety switches with solenoid and separate actuator



Main data

- Polymer housing, three conduit entries
- Protection degree IP66
- 6 contact blocks available
- 6 stainless steel actuators available
- Three supply voltages available
- Versions with auxiliary release device or auxiliary lock release device
- Versions with energized or de-energized solenoid

Markings and quality marks:











Approval IMQ: Approval UL: E131787 Approval CCC: 2007010305230011 Approval EZU: 1010151

Notes: Calculate the power supply using the average solenoid power. Please consider the inrush solenoid power in order to avoid intervention of overload-protection in case of electronic power supply.

Technical data

Housing

Housing made of glass-reinforced polymer, self-extinguishing, shock-proof thermoplastic resin and with double insulation

Three conduit entries

Protection degree: IP66 according to EN 60529 (electrical contacts)

General data

For safety applications up to SIL 3 / PL e

Safety parameters: see page 7/32 from -25°C to +60°C Ambient temperature: Max actuation frequency: 600 operations cycles¹/hour Mechanical endurance: 800.000 operations cycles1

Max actuating speed: $0.5 \, \text{m/s}$ Min. actuating speed: 1 mm/s

1100 N (head 96), 900 N (head 98) Max holding force:

Max backlash of the actuator: 4,5 mm Actuator extraction force: 30 N

Driving torque for installation: see pages 7/1-7/10

(1) One operation cycle means two movements, one to close and one to open contacts, as foreseen by EN 60947-

Cross section of the conductors (flexible copper wire)

Contact blocks 20, 21, 28, 29, 30: 1 x 0.34 mm² (1 x AWG 22) 2 x 1.5 mm² (2 x AWG 16) max. 1 x 0,5 mm² Contact blocks 18: min. (1 x AWG 20) 2 x 2,5 mm² (2 x AWG 14) max.

In conformity with standards:

IEC 60947-5-1, EN 60947-5-1, EN 60947-1, IEC 60204-1, EN 60204-1, EN 1088, EN ISO 12100-1, EN ISO 12100-2, IEC 60529, EN 60529, EN 61000-6-2, EN 61000-6-3, NFC 63-140, VDE 0660-200, VDE 0113, BG-GS-ET-15.

Approvals:

IEC 60947-5-1, UL 508, GB14048.5-2001.

In conformity with requirements requested by:

Low Voltage Directive 2006/95/EC, Machinery Directive 2006/42/EC and Electromagnetic Compatibility 2004/108/EC.

Positive contact opening in conformity with standards:

IEC 60947-5-1, EN 60947-5-1, VDE 0660-206.

Solenoid

Solenoid duty cycle: 100% ED

56 VA (0.1 s / 0.05 s for 230 V)Inrush solenoid power:

Steady-state solenoid power: 4 VA Average solenoid power: 20 VA

fuse 1 A type aM Solenoid protection 24 V:

Solenoid protection 120 V: fuse 630 mA, delayed type fuse 315 mA, delayed type Solenoid protection 230 V:

🛆 If not expressly indicated in this chapter, for the right installation and the correct utilization of all articles see requirements indicated from page 7/1 to page 7/10.

Electrical data Utilization categories Thermal current (Ith): Alternate current: AC15 (50...60 Hz) Rated insulation voltage (Ui): 500 Vac 600 Vdc Ue (V) 250 400 500 400 Vac 500 Vdc (contact blocks 20, 21, 28, 29, 30) without le (A) 6 4 Rated impulse withstand voltage (U_{imp}): 6 kV 4 kV (contact blocks 20, 21, 28, 29, 30) Direct current: DC13 Conditional shot circuit current: 1000 A according to EN 60947-5-1 125 250 Ue (V) 24 Protection against short circuits: fuse 10 A 500 V type aM 6 le (A) 1.1 0.4 Pollution degree: Alternate current: AC15 (50...60 Hz) Thermal current (Ith): 2 A Ue (V) 24 Rated insulation voltage (Ui): le (A) 2 30 Vac 36 Vdc Direct current: DC13 Protection against short circuits: fuse 2 A 500 V type gG Pollution degree: Ue (V) 24 2 le (A)

Data type approved by IMQ, CCC and EZU

Rated insulation voltage (Ui): 500 Vac

400 Vac (for contact blocks 20, 21, 28, 29, 30)

Thermal current (Ith): 10 A

Protection degree: IP66

Protection against short circuits: fuse 10 A 500 V type aM

Rated impulse with stand voltage (U_{imp}): 6 kV

4 kV (for contact blocks 20, 21, 28, 29, 30)

MV terminals (screw clamps) Pollution degree 3 Utilization category: AC15 Operation voltage (Ue): 400 Vac (50 Hz)

Operation current (le): 3 A

Forms of the contact element: 7b, Y+Y+X, Y+Y+Y, Y+X+X Positive opening of contacts on contact block 18, 20, 21, 28, 29, 30

In conformity with standards: EN 60947-1, EN 60947-5-1+ A1:2009, fundamental requirements of the Low Voltage Directive 2006/95/CE.

Please contact our technical service for the list of approved products.

Data type approved by UL

Utilization categories Q300 (69 VA, 125-250 Vdc) A600 (720 VA. 120-600 Vac)

Data of the housing type 1, 4X "indoor use only," 12, 13

For all contact blocks use 60 or 75 °C copper (Cu) conductor and wire size No. 12-14 AWG. Terminal tightening torque of 7,1 lb in (0.8 Nm).


In conformity with standard: UL 508

Please contact our technical service for the list of approved products.

Description


These switches are used on machines where the hazardous conditions remain for a while, even after the machine has been switched off, for example because of mechanical inertia of pulleys, saw disks, parts under pressure or with high temperatures. They can also be used when it is necessary to control machine guards, allowing the opening of protections only under specific conditions.

Rotating head and release device

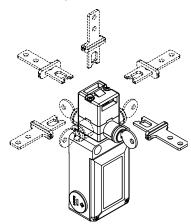


The head can be quickly rotated on each of the 4 sides of the switch by unfastening the two fixing screws. The mechanical lock release device can be rotated in 90° steps as well. This enables the switch to assume 32 different configurations.

Actuator regulation zone

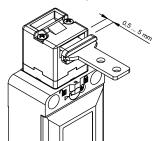


This switch has a wide backlash of the actuator into the head (4,5 mm) to avoid that door gaskets keep in traction the actuator on the solenoid. With closed door, check that the actuator doesn't knock straight against the head of the switch; it must be in the adjustment zone (0,5...5 mm)

Actuator holding force

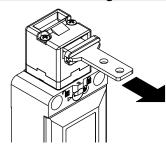

Thanks to recent mechanical improvement the strong interlocking system guarantees a maximum actuator holding force of 1100 N (head 96)

Safety screws for actuators



These new screws have tamper-resistant Torx buttonheads.

Devices fixed with this kind of screws cannot be removed or tampered by common tools. See accessories page 6/5.

Limits of utilization

Do not use where dust and dirt may penetrate in any way into the head and deposit there, in particular where metal dust, concrete or chemicals are spread


Do not use where explosive or inflammable gas is present.

Use Atex products in environments with explosion hazard (see page 2/137).

Installation of two or more switches connected to the same power supply

24 Vac/DC version only

- -This operation is intended to reduce the results of the solenoid inrush current on the power supply and has to be executed only if necessary and with special care.
- Switch off the power supply.
- Open the switch cover.
- Remove the black plastic protection that covers the solenoid by unscrewing the two screws which fix the protection to the switch body.
- Move the dip-switch with a tool so that each switch has a different combination (see figure beside). If more than four switches are installed, repeat the combinations for any next set of four switches.
- Reposition the black plastic protection and tighten the two screws with a torque of 0,8 Nm.

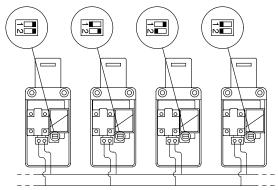

Safety switches with solenoid and separate actuator

Description


The working principle of these safety switches allows three different working states:

state A: with the actuator inserted and blocked by the solenoid

state B: with the actuator inserted but not blocked

state C: with the actuator extracted

All or some of these states may be controlled through the positive opening contacts of the internal contact block. In detail, contact blocks that have electric contacts marked with the symbol of the solenoid () are switched in the transition between the state A and state B, while the electric contacts marked with the symbol of the actuator () are switched between state B and state C:

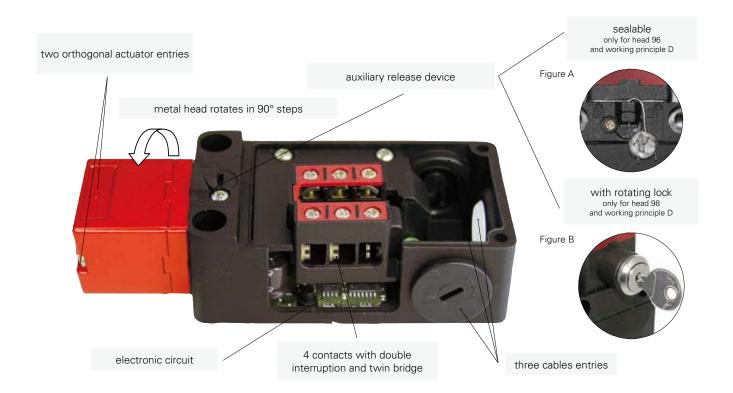

It is also possible to choose between two working principles for the actuator locking:

- Working principle D: Actuator blocked with de-energized solenoid. Actuator release is obtained by power supply to the solenoid (see example of working cycle steps).
- Working principle E: Actuator blocked with energized solenoid. The unlock of the actuator is obtained by power-off to the solenoid. It is advisable to use this version under special conditions because a blackout will allow the immediate opening of the protection.

This series of products includes many technical solutions that result flexible on installation and easy working:


- Six different types of stainless steel actuator, suitable to be fixed in several positions and with insertion radius arc equal to or over 80 mm.
- Swinging head, in 90° steps, with two actuator entries for easy installation of the switch.
- To extract the inserted but not blocked actuator, a 30 N force is necessary, that avoids the guard opening because of vibrations or impacts.
- When actuator is locked, it can still move a little (4,5 mm), to avoid that door gaskets keep in traction the actuator on the solenoid.
- Housing with three conduit entries for an easier installation or connection in series.
- Electronic control of the power supply, which allow a wide tolerance on supply voltage. This technical solution resolves the problems that may derive from not stable power supply (machine distance from main transformers, tension variation between night/day hours), allowing also a low solenoid power consumption and consequently enlarging the working temperatures range of the switch.
- No-loosing screws contact blocks, fingers protection, twin bridge contacts and double interruption for a higher contact reliability.

Versions with D working principle are supplied with a sealable auxiliary release device used by technicians during the installation or to access to inside the machine in case of black-out. The release device may be of sealable type (head 96, see figure A) or lock type (head 98, see figure B). In this last case the release device may also be used to allow authorized operators in possession of key to open small protections.

Attention! These switches alone are not suitable for applications where operators with key may physically enter the dangerous area, because an eventual closing of the door behind them could restart the machine working. In this case must be used the entry locking device VF KB1 that is visible on page 4/79.




Example of working cycle steps with FS 2896D024-F1 (switch with working principle D)

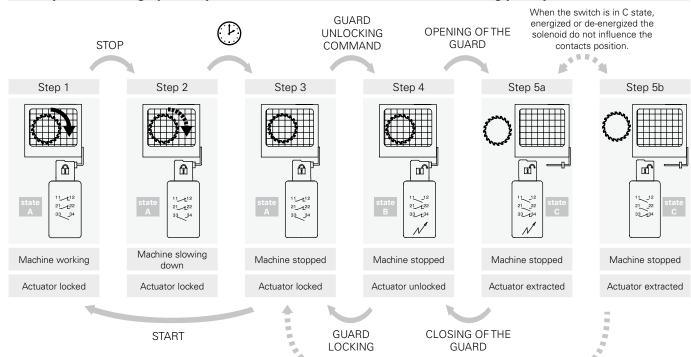

The GUARD CLOSING with de-energized solenoid brings the switch back in B state and then in A state in quick sequence


Contacts position in switch states Working principle D Working principle E locked actuator with de-energized solenoid locked actuator with energized solenoid Operation state Actuator Inserted and locked Inserted and unlocked Inserted and locked Inserted and unlocked Extracted Extracted Solenoid De-energized Energized Energized De-energized FS 18••••• 11 - 12 11 11 **-** 12 11 **-** 12 **-** 12 _ 12 1NC+1NO controlled _____ 24 23 — 24 _____ 24 23 — 24 23 ____ 24 23 23 ____ 24 23 by the solenoid \Box **L** 12 11 — 12 **-**12 12 12 _ 12 FS 20 ••••• 21 — 22 **≠** 22 2NC+1NO controlled **=** 21 22 21 22 21 22 21 22 by the solenoid **→** 34 **→** 34 **→** 34 **→** 34 33 33 34 33 33 \Box 11 — 12 11 12 11 <u>≁</u> 12 11 12 \Box _ 12 _ 12 FS 21 ••••• 21 — 22 **≁** 22 3NC controlled by the 21 21 __ 22 ∇ _ 22 22 _ 22 _ solenoid 31 — 32 **—** 32 _ 32 ∇ 31 31 **—** 32 FS 28••••• 11 - 12 **1** 12 11 **-** 12 11 _ 12 11 **–** 12 11 _____ 12 ∇ 1NO+1NC controlled 21 — 22 <u>≁</u> 22 Ł _ 22 <u>िव</u> 21 22 21 22 21 22 21 by the solenoid 1NC controlled by the **→** 34 Ł 33 --- 34 33 34 **-** 34 33 \Box actuator FS 29 ••••• **七** 12 11 -12 11 -_ 12 11 -**-** 12 11 11 ____ 12 11 -**–** 12 2NC controlled by the 21 — 22 21 21 _ 22 21 22 21 21 ___ 22 solenoid \Box _ 22 _ 22 1NC controlled by the 31 — 32 32 **—** 32 32 **⊡**|द 31 31 **—** 32 actuator FS 30 ••••• 11 -12 <u>–</u> 12 **-** 12 **-** 12 11 **-** 12 11 -11 **-** 12 11 . \Box 1NC controlled by the **≠** 22 21 - 22 <u>→</u> 22 <u>1</u> 22 solenoid **∞|**⊂ 21 21 -**-** 22 21 21 **-** 22 2NC controlled by the 31 - 32 **→** 32 31 31 actuator

Safety switches with solenoid and separate actuator

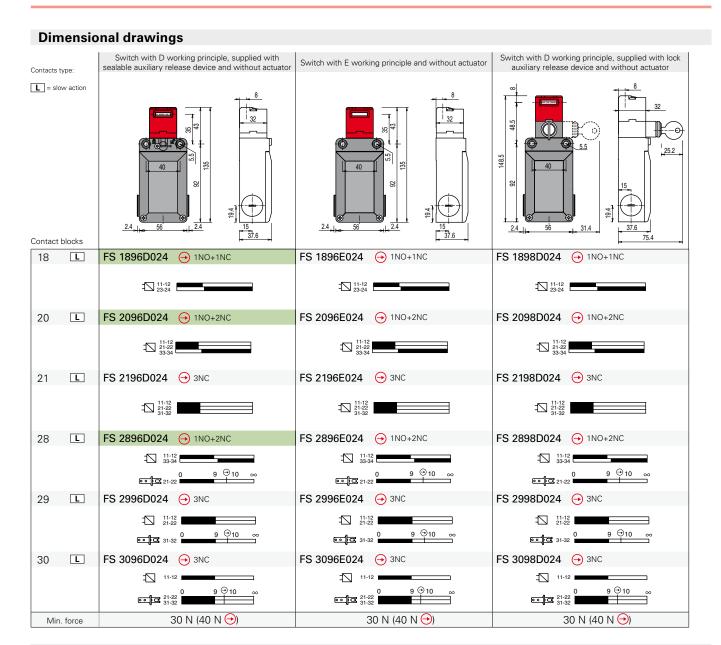

How to read travel diagrams


All measures in the diagrams are in mm

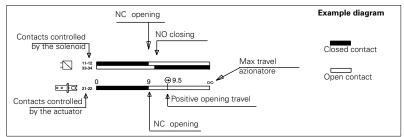

IMPORTANT:

NC contact has to be considered with inserted actuator and lock by the lock. **In safety applications** it is necessary to activate the switch **at least up to the positive opening point** indicated in the diagrams with the symbol \bigcirc . Operate the switch **at least with the positive opening force**, indicated between brackets, below each article, next the value of minimum force.

Accessories

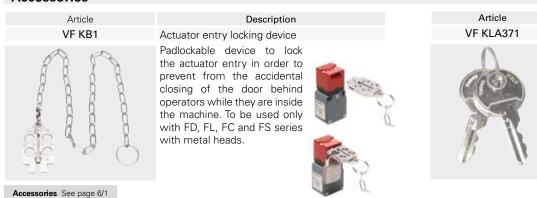



Set of 2 locking keys
Extra copy of the locking keys to be purchased if further keys are needed (standard supply 2 units).
All switches keys have the same code. Other codes on request.


Description

Stainless steel actuators


IMPORTANT: These actuators must be used with FD, FP, FL, FC or FS series only (e.g. FS 1896D024).

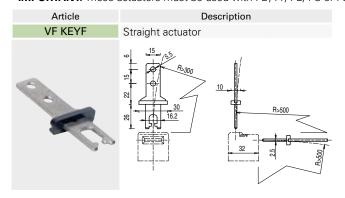

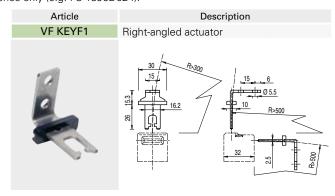


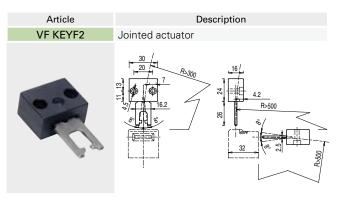


The actuator can flex in four directions for applications where the door alignment is not precise.

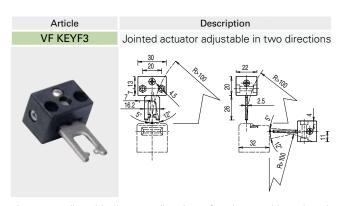

Actuator adjustable in two directions for doors with reduced dimensions.

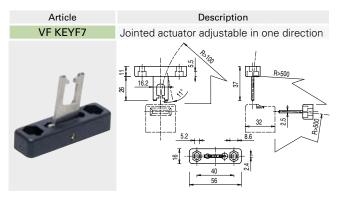

Actuator adjustable in one direction for doors with reduced dimensions

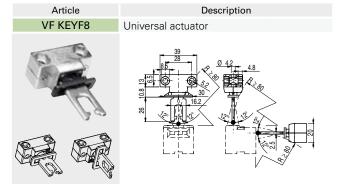

Joined and two directions adjustable actuator for doors with reduced dimensions. The actuator has two couples of fixing holes and it is possible to rotate the actuator-working plan (see picture).

Accessories for sealing



Article	Description
VF FSPB-200	Set of 200 lead seals
VF FSPB-10	Set of 10 lead seals
Article	Description
VF FSFI-400	400 m steel wire roll
VF FSFI-10	10 m steel wire roll
Article	Description
VF FSPZ	Plier without logo

Pliers, steel wire and lead seals used to seal the auxiliary release device (head 96D).

Items with code on the **green** background are available in stock