

LISTA KOMPONENTÓW H80

LISTA KOMPONENTÓW H120

LISTA KOMPONENTÓW H80+RELING

MONTAŻ PROWADNIC

WYMIARY MONTAŻOWE PANEL SPÓD ORAZ PANEL TYŁ

Size	H
H80	63mm
H120	101mm
H170	148mm

LW – SZEROKOŚĆ WEWNĘTRZNA SZAFKI
NL – DŁUGOŚĆ NOMINALNA PROWADNICY

WYMIARY MONTAŻOWE FRONTU DLA SZUFLADY H170

D – WEWNĘTRZNY WYMIAR SZAFKI

OTWORY WE FRONCIE

WYMIARY MONTAŻOWE FRONTU DLA SZUFLADY H80/H120

D – WEWNĘTRZNY WYMIAR SZAFKI

Size	Min. H	B
H80	115mm	18mm
H120	155mm	21mm

OTWORY WE FRONCIE

OTWORY WE FRONCIE


A type: 96 B type: any height

D – WEWNĘTRZNY WYMIAR SZAFKI

Min. 205

Min. 61.5

B type: any height

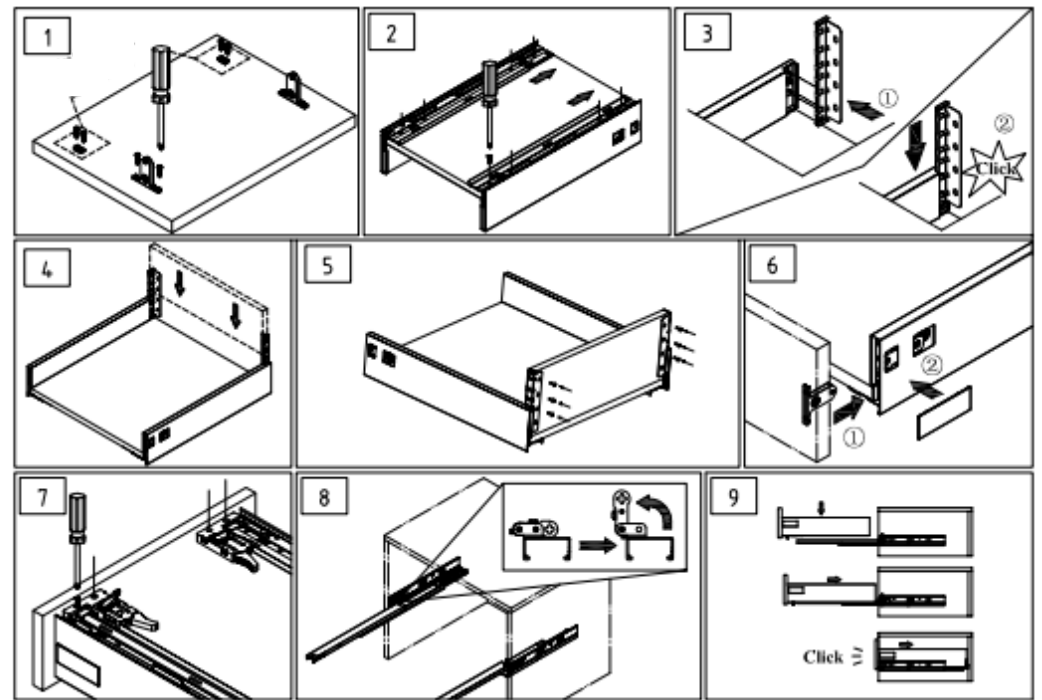

The diagrams are organized into four rows, each with two panels:

- Row 1:**
 - Left: Shows the initial mounting of the front panel to the drawer box. Callouts include "!" and "±2mm".
 - Right: Shows the front panel being aligned with the cabinet. Callouts include "!" and "±1.5mm".
- Row 2:**
 - Left: Shows the drawer front being inserted into the cabinet. Callouts include "!" and "±1.5mm".
 - Right: Shows the drawer front being fully inserted. Callouts include "!" and "1. Wciśnij rączkę sprzęgła 2. Wyjmij szufladę".
- Row 3:**
 - Left: Shows the final installation and adjustment of the front panel. Callouts include "!" and "Regulacja".
 - Right: Shows the removal of the front panel. Callouts include "!" and "DEMONTAŻ RELINGU".
- Row 4:**
 - Left: Shows the final adjustment of the front panel. Callouts include "!" and "Regulacja".
 - Right: Shows the removal of the front panel. Callouts include "!" and "DEMONTAŻ RELINGU".