
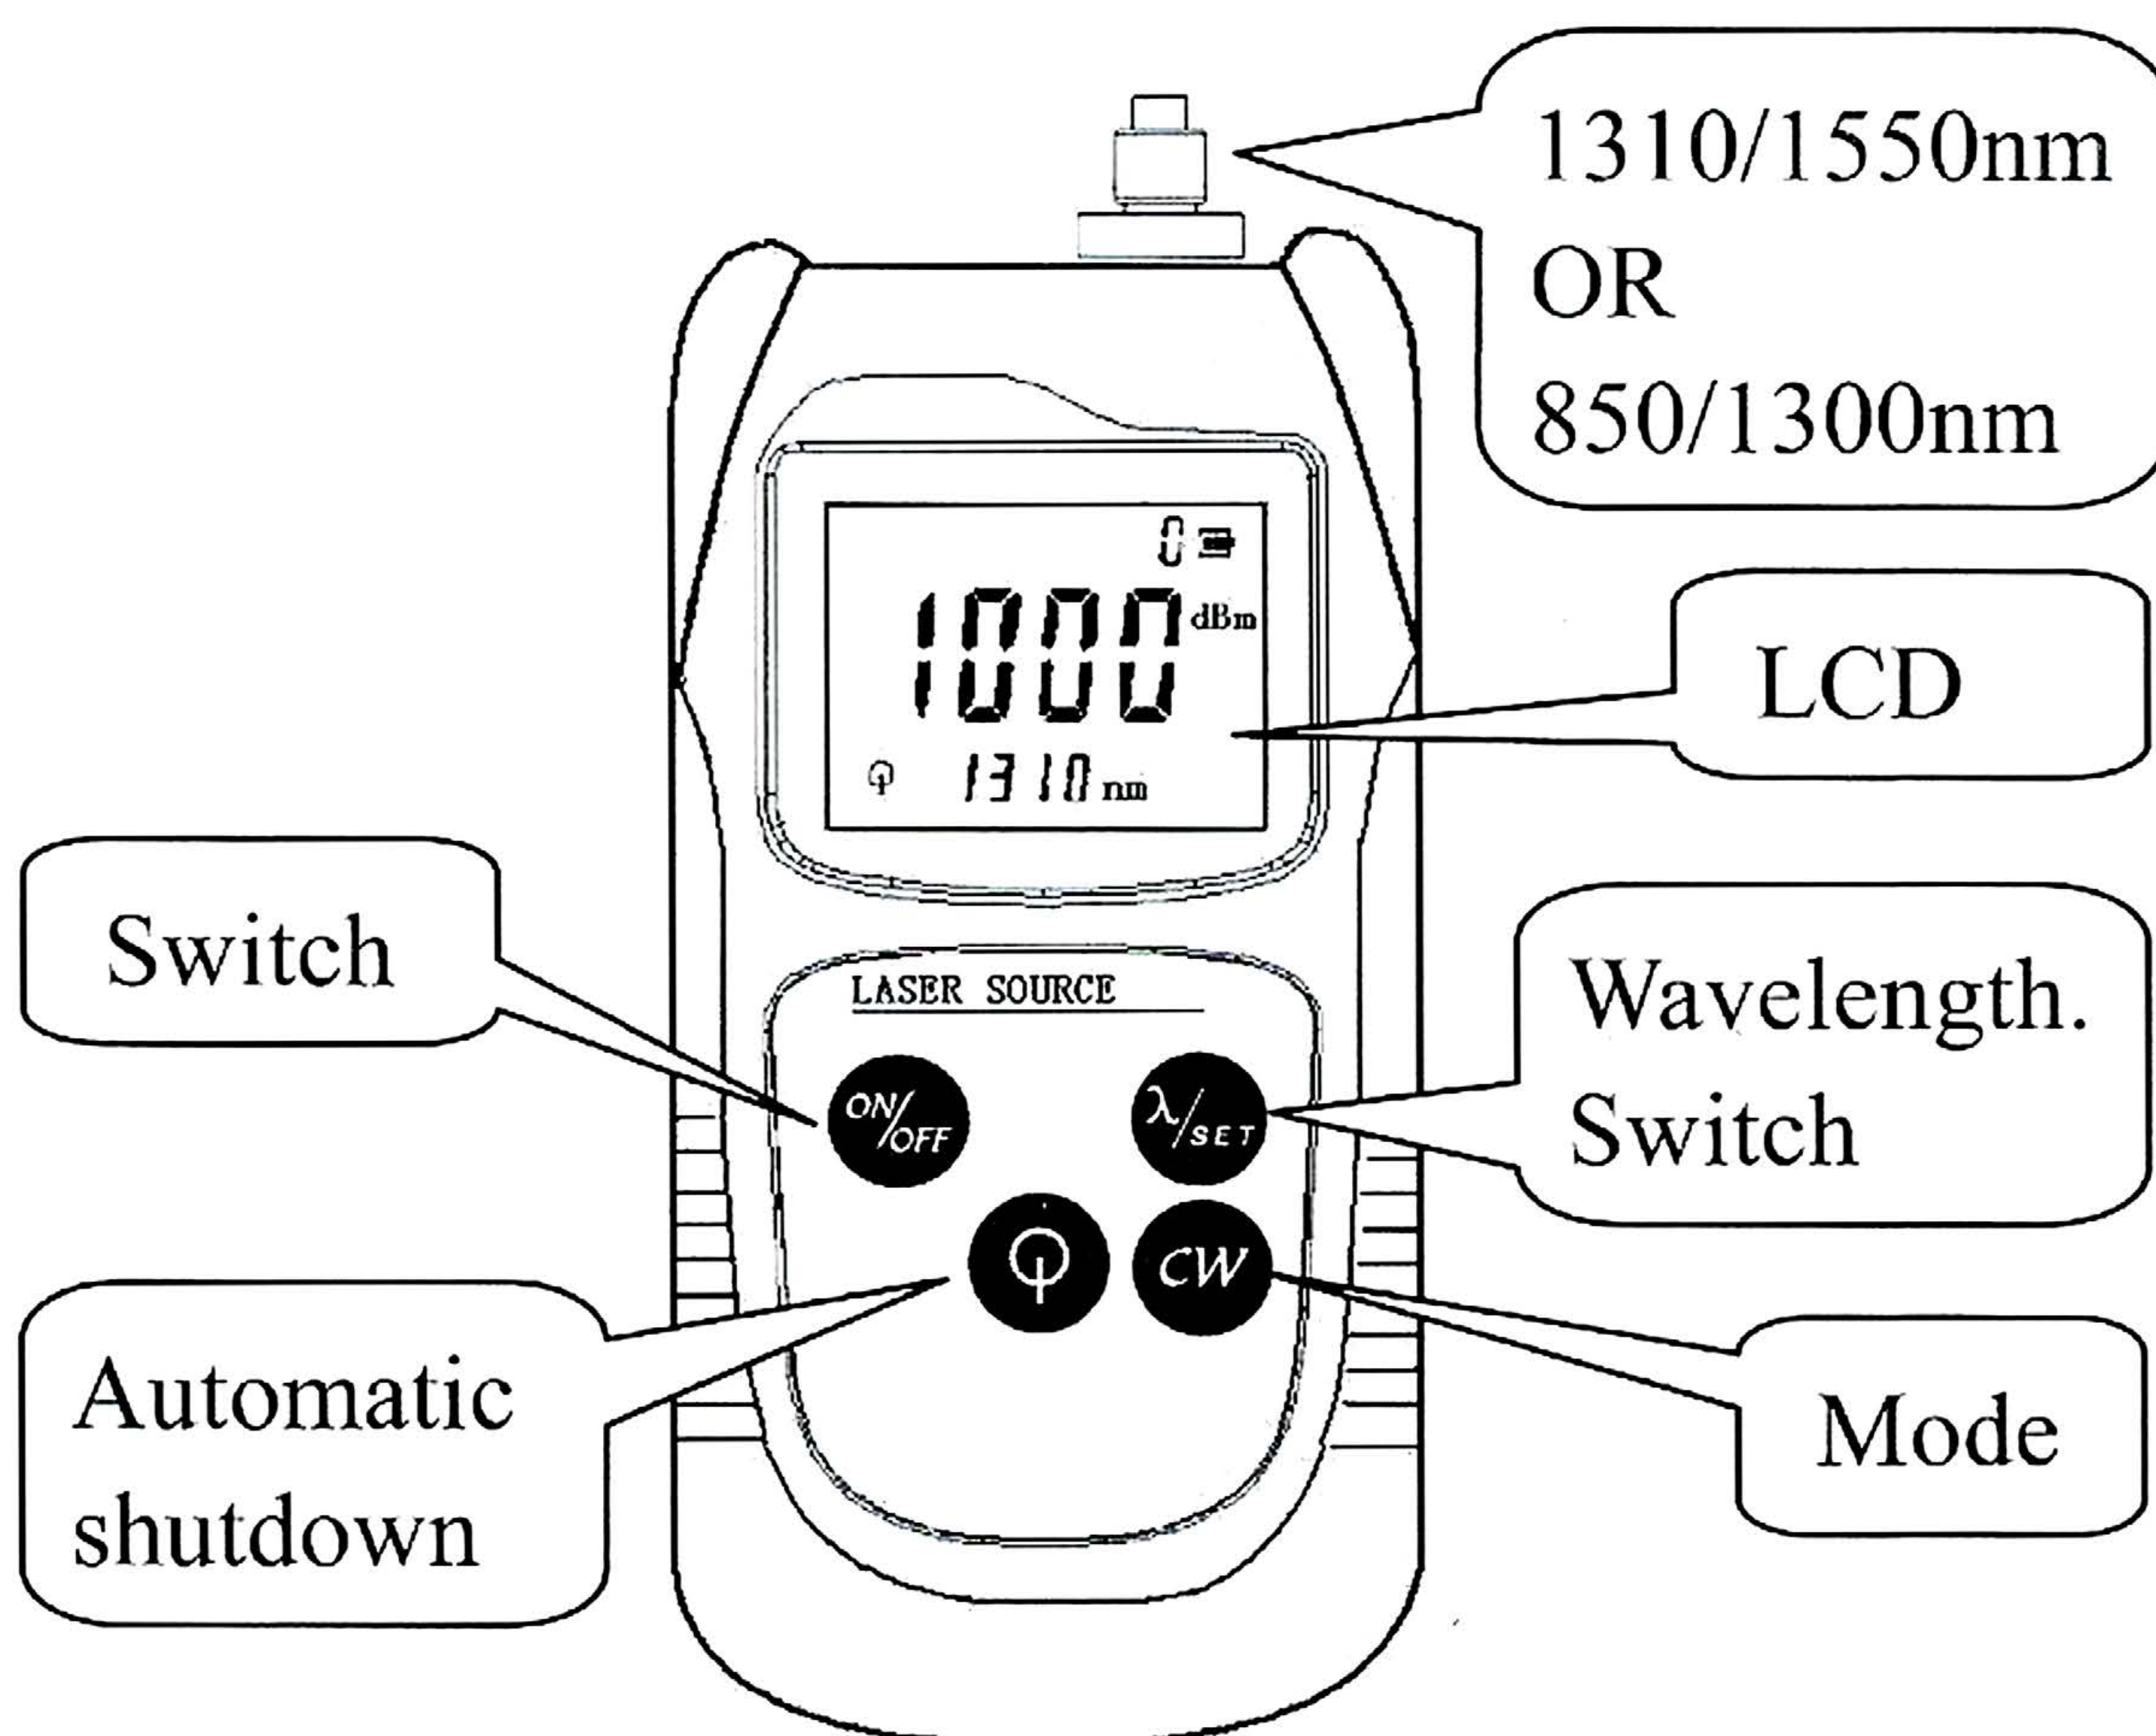


Panels

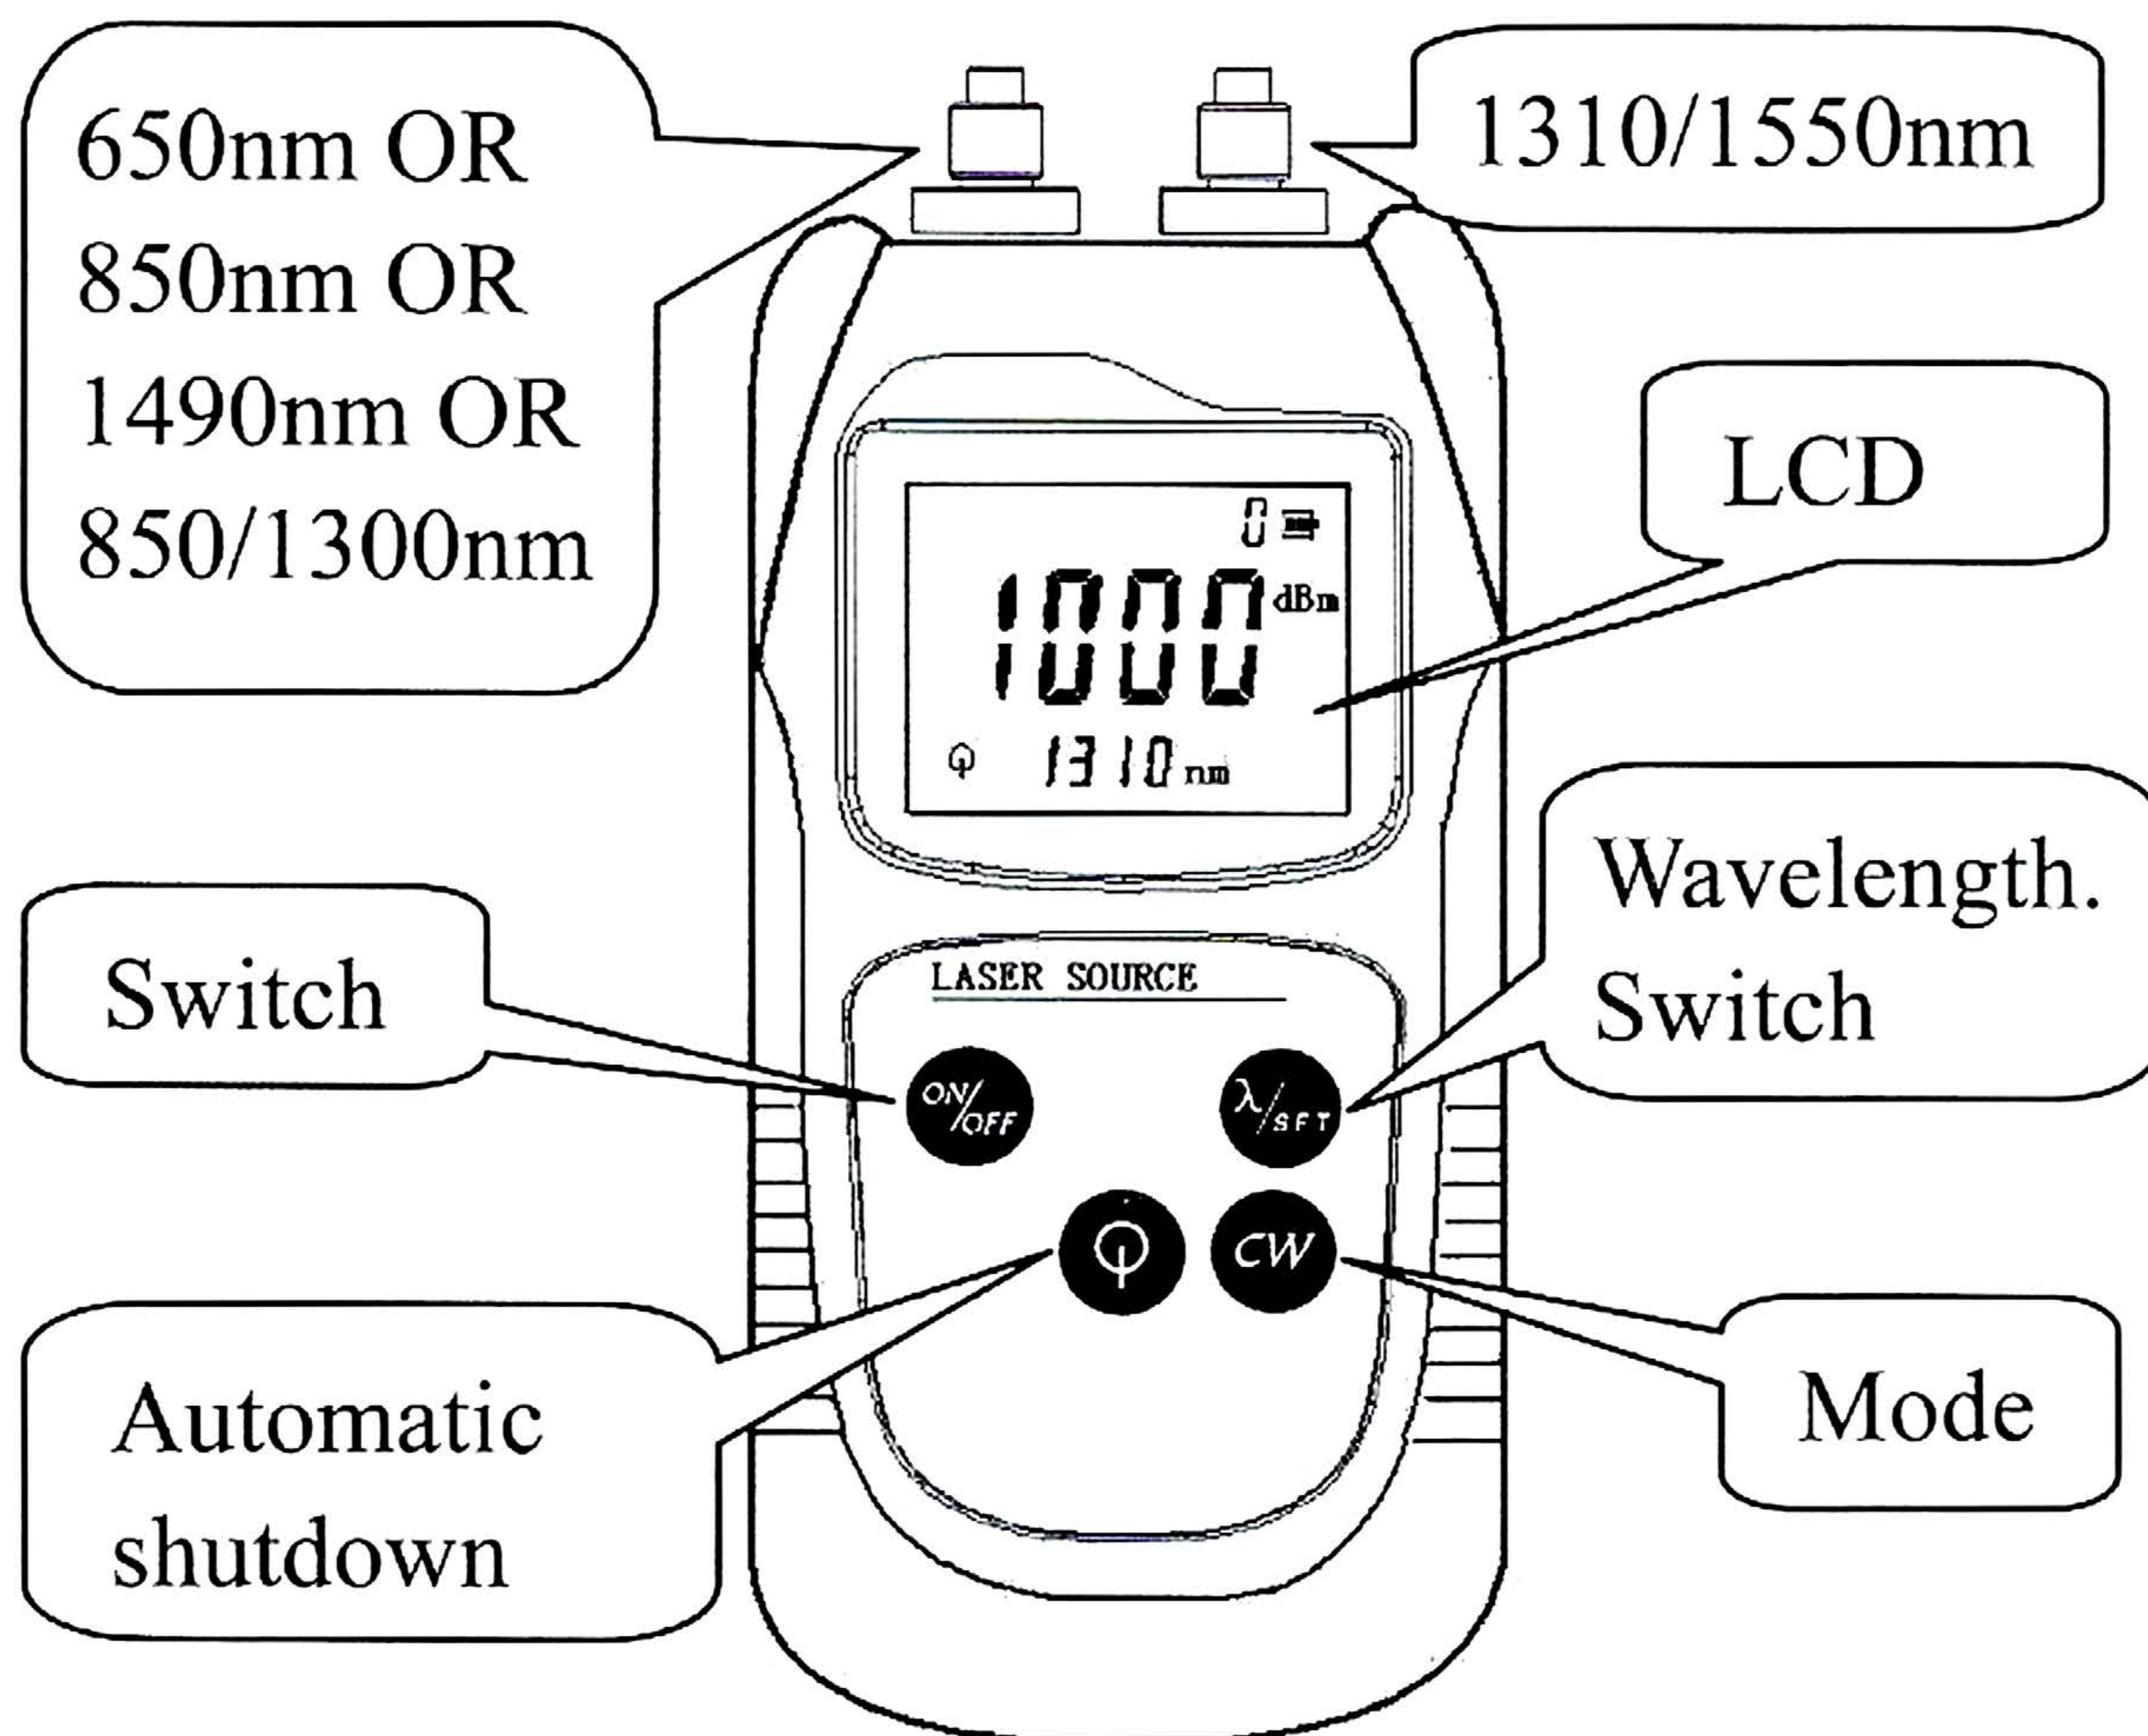


CABLEMATIC


**CABLEmatic**


Functions

(1) Output port: can connect the fiber connector with the signal receiving port of the tested unit.

(2)  “ON/OFF” Key: Press to turn the Light On or Off.

(3)  “λ SELECT” key: Press to select the working wavelength. the key is invalid when single-wavelength.

(4)  “CW/MOD”: Switching frequency modulation source. Be switch between CW, 270Hz, 1KHz, 2KHz., which will be display in the LCD, 650nm light output modulation frequency is 2KHz.

(5)  Hold down the key a long time, turn on or off automatic shutdown, the automatic shutdown time is 10min.



cablematic

Warranties and Servicing

Caution: we don't approve of repairing the light source by customers is not recommended.

1. Our company warrants that every Handheld Light Source will be free from defects in material and workmanship for a period of one year. This warranty covers the original user only and is not transferable. Should the device fail at any time during this warranty period, we will, at its sole discretion, replace, and repair or refund the purchase price of the product.
2. Should there will be any problem during the operation, according to common failures prompt solution does not solve, the user will be not allowed to open the case, please contact our marketing department or contact agents.
3. As for the malfunction caused by productional defect, We are responsible for maintenance or replacement of products free of charge.



CABLEmatic