

RED PARACHUTE ROCKET "OROC2" ITEM Nº 9990702

The Oroquieta red parachute rocket "Oroc2" is a long range aerial distress signal. Designed to withstand exceptional environmental exposure and to perform reliable even after immersion in water. The wire pull ignitor and improved grip provides easy handling. Ejecting a red flare on a parachute at 300 m (1.000 ft), burning for 40 seconds at 30.000 candelas.




Prestaciones

Day or night long range distress signal, for use on land or sea in an emergency situation.

Flare visible up to 30 miles away. Suitable for coastal and offshore use by all recreational craft including yachts, RIBs, dinghies and canoes.

Operation

1. Hold signal firmly by ribbed handle. Unscrew RED bottom cap. Do not point at people or property.
2. Hold rocket vertically above head pointing away from body.
3. Ensure hands remain clear of top. To fire – up red ball sharply down.

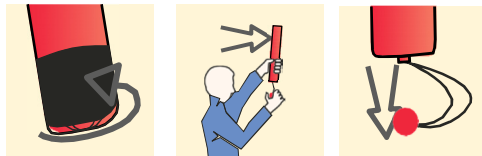

Packing and transport information

- 56 rockets in 2 metal tins in 1 fibreboard box.
- Gross weight per box: 16,4 kg. (36,16 lbs)
- Net weight per box: 13,72 kg. (30,25 lbs)
- Measurements of fibreboard: 48x27x37 cms (18,9x10,63x14,57 ins)
- Net explosive content per box: 5,152 kg. (11,36 lbs)
- Hazard class: 1.4G
- UN 0505
- Proper shipping name: Signals, distress, ship.
- Other information: Cargo aircraft only.

Storage


Ideally, should be stored in a robust, specially designed polybottle or in a dry, easily accessed location at ambient temperature.

Approvals

Conforms to SOLAS 74/88 as amended, res. MSC81 (70).

Specifications

- Height: 287 mm. (11,3 ins)
- Diameter at handle: 38 mm. (1,5 ins)
- Diameter: 32 mm. (1,25 ins)
- Weight max.: 245 g. (8,6 oz)
- NEC max: 92 g. (3,25 oz)
- Light intensity: 30.000 candelas.
- Burning time: 40 seconds.
- Colour of light: red.
- Ignition: pull-wire ignitor.
- Altitude: 300 m. (985 ft)

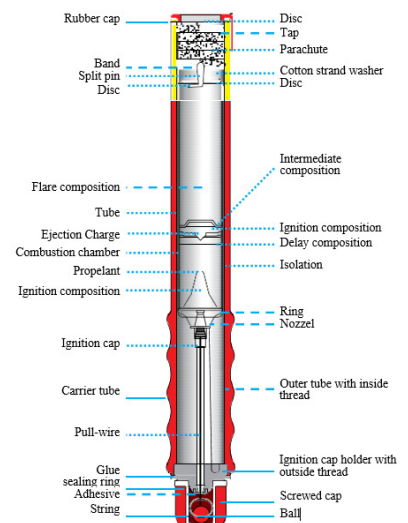

warning



- Ejects rocket projectile-do not point at people
- Do not fire in confined space
- Keep out of reach of children
- Only for emergency use at sea



- If damaged or dented do not use
- Do not dismantle
- Keep away from source of heat
- Do not use after expiry date

Disposal

- Pyrotechnics must be treated as hazardous items and must be disposed of responsibly in accordance with local regulations. For help and advice, visit our website www.p-oroquieta.com

