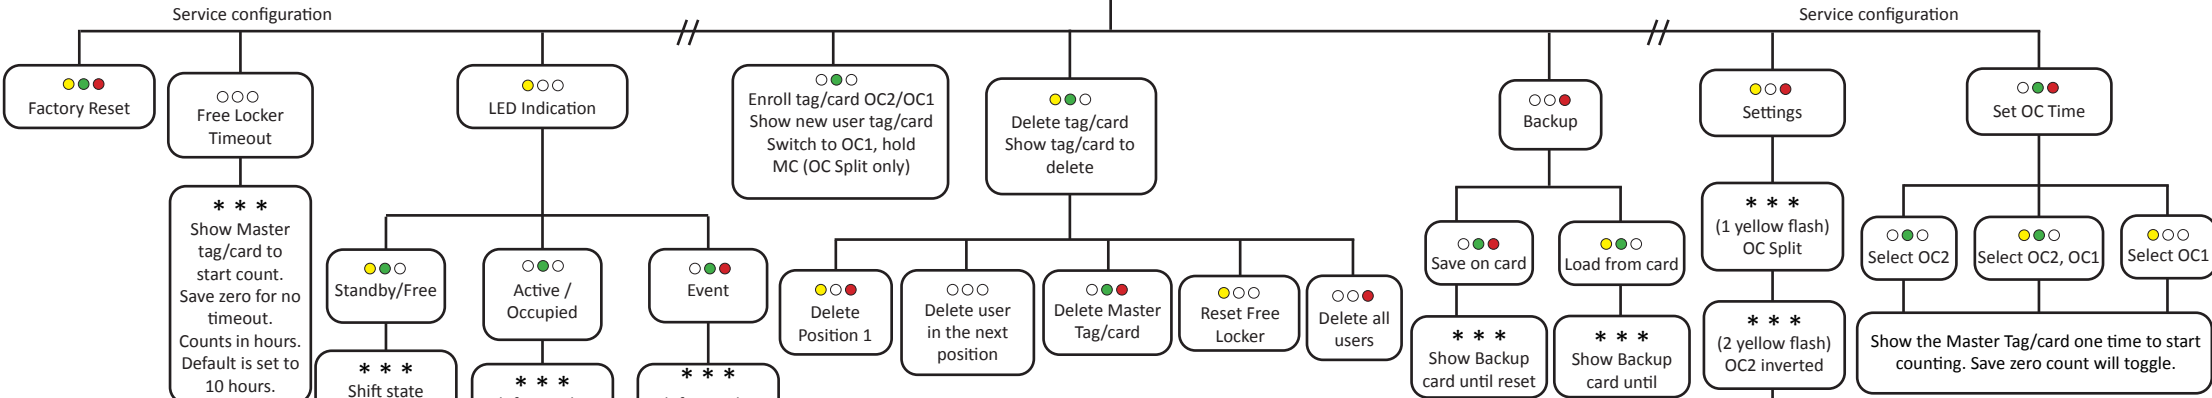# M1000 Configuration scheme - Version 1.14

Legend:
- = LED on
- = LED off
- ✱ = Variable/flashing LED

Hold Master Tag/card for 2 seconds to enter/save
Timeot: 30 seconds
Back: inactive in 10 seconds
Exit: Timeout or Power off

(Default)
Service configuration (withing 10 seconds after Power On)
Show Master Transponder

Service configuration

Factory Reset

Free Locker Timeout
✱ ✱ ✱
Show Master tag/card to start count. Save zero for no timeout. Counts in hours. Default is set to 10 hours.

LED Indication

- **Standby/Free**
  ✱ ✱ ✱
  Shift state between the LED's, 8 states

LED
○○○
●○○
○●○
●●○
○○●
●○●
○●●
●●●

- **Active / Occupied**
  ✱ ✱ ✱
  Shift state between the LED's and buzzer, 16 states

- **Event**
  ✱ ✱ ✱
  Shift state between the LED's and buzzer, 16 states

LED	Buzzer
○○○	off
●○○	off
○●○	off
●●○	off
○○●	off
●○●	off
○●●	off
●●●	off
○○○	beeps
●○○	beeps
○●○	beeps
●●○	beeps
○○●	beeps
●○●	beeps
○●●	beeps
●●●	beeps

Enroll tag/card OC2/OC1
Show new user tag/card
Switch to OC1, hold MC (OC Split only)

Delete tag/card
Show tag/card to delete

- **Delete Position 1**
- **Delete user in the next position**
- **Delete Master Tag/card**
- **Reset Free Locker**
- **Delete all users**

Backup

- **Save on card**
  ✱ ✱ ✱
  Show Backup card until reset

- **Load from card**
  ✱ ✱ ✱
  Show Backup card until

Settings

- ✱ ✱ ✱ (1 yellow flash) OC Split
- ✱ ✱ ✱ (2 yellow flash) OC2 inverted
- ✱ ✱ ✱ (3 yellow flash) OC1 inverted
- ✱ ✱ ✱ (4 yellow flash) Config timeout
- ✱ ✱ ✱ (5 yellow flash) Free Locker Mode - First user position will reset Free locker

Set OC Time

- **Select OC2**
- **Select OC2, OC1**
- **Select OC1**

Show the Master Tag/card one time to start counting. Save zero count will toggle.

Seconds	LED
0 - 29	○○○
30 - 59	●○○
60 - 89	○●○
90 - 119	●●○
120 - 149	○○●
150 - 179	●○●
180 - 209	○●●
210 - 239	●●●
240	○○○

CONLAN secure open