


● = LED on
 ○ = LED off
 * = Variable/flash LED
 Show tag/card to shift state
 Hold tag/card in 2 seconds enter next row or save
 Exit: 10 seconds

●○○ (Standard)
 Setup mode
 Show a tag/card 3 times within 10 seconds after power on

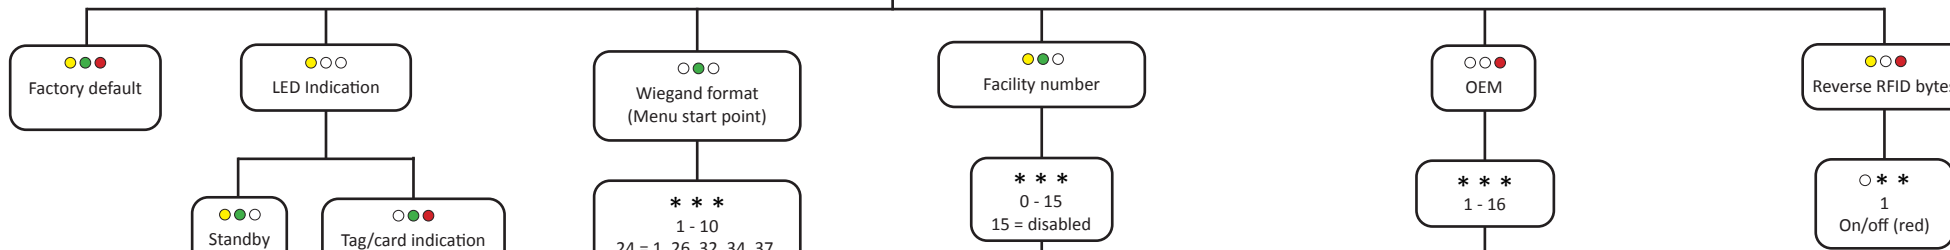

| Buzzer | LED | Value | Wiegand |
|--------|-----|-------|---------|
| Off | ●○○ | 1 | 24 |
| Off | ○●○ | 2 | 26 |
| Off | ●●○ | 3 | 32 |
| Off | ○○● | 4 | 34 |
| Off | ●○● | 5 | 37* |
| Off | ○●● | 6 | 40 |
| Off | ●●● | 7 | 42 |
| On | ○○○ | 8 | 48 |
| On | ●○○ | 9 | 50 |
| On | ○●○ | 10 | 56 |
| On | ●●○ | 11 | 58 |

| Buzzer | LED | Value |
|--------|-----|-------|
| Off | ○○○ | 0 |
| Off | ●○○ | 1 |
| Off | ○●○ | 2 |
| Off | ●●○ | 3 |
| Off | ○○● | 4 |
| Off | ●○● | 5 |
| Off | ○●● | 6 |
| Off | ●●● | 7 |
| On | ○○○ | 8 |
| On | ●○○ | 9 |
| On | ○●○ | 10 |
| On | ●●○ | 11 |
| On | ○○● | 12 |
| On | ●○● | 13 |
| On | ○●● | 14 |
| On | ●●● | 15 |

| Buzzer | LED | Value | OEM | | Actual set |
|--------|-----|-------|-------------------|---|------------|
| Off | ●○○ | 1 | Conlan | ✓ | |
| Off | ○●○ | 2 | NOX | ✓ | |
| Off | ●●○ | 3 | SPC | ✓ | |
| Off | ○○● | 4 | ATS | ✓ | |
| Off | ●○● | 5 | Paxton (W) | ✓ | |
| Off | ○●● | 6 | Satel | | |
| On | ○○○ | 8 | Nedap | ✓ | |
| On | ●○○ | 9 | Roger | ✓ | |
| On | ○●○ | 10 | S8600 | ✓ | |
| On | ●●○ | 11 | Paxton (C.D.) | ✓ | |
| On | ○○● | 12 | SPCv345 | ✓ | |
| On | ●○● | 13 | Paxton (EM) | ✓ | |
| On | ○●● | 14 | Unitek C/D | ✓ | |
| On | ●●● | 15 | Access Technology | ✓ | |
| Off | ○○○ | 16 | ABA Track 2 | ✓ | |

*Wiegand mode 37 applies only to CM1200 and not CP1200