multicomp PRO



RoHS **Compliant**

Specifications

Max. Current/Voltage Rating With Resistive Load : 400mA 32V AC - 200mA 50V DC - 125mA 125V AC

Initial Contact Resistance : $50m\Omega$ max.

Insulation Resistance : 1GΩmin. at 500V DC

Dielectric Strength : 1,500V AC rms. (initial value)

Electrical Life At Full Load : 500,000 cycles. : -30°C to 85°C. Operating Temperature Total Travel : 1.5 mm(.059) Operating Force : 3N~6N

Contact Bounce : 10 ms. Mechanical Life : 1,000,000 cycles.

Ingress Protection : IP68

Materials

Torque

Сар : Polyamide 6/6. : MPP12-6: PC Plunger

MPP12-7: Polyamide 6/6.

Rubber : Silicone. Bushing : Polyamide 6/6.

Case : Diallyl phthalate (DAP)(UL94v-0).

Contacts : Brass with gold over silver plated.

Switch Function

| | MODEL NO. | SWITCH FUNCTION | | CONNECTED TERMINALS / SCHEMATIC | | | |
|-----|--------------|-----------------|-------|---------------------------------|-----------------|-------|----------|
| NO. | | POS.1 | POS.2 | POS.1 | | POS.2 | |
| | | | | 1 | | | \ |
| SP | MPP12-6 | OFF | (ON) | OPEN | ↓ • • 1 2 | CLOSE | 1 2 |
| SP | MPP12-7 | ON | (OFF) | CLOSE | 1 2 | OPEN | 1 • • 2 |

: 0.5Nm max.


()=MOMENTARY




multicomp PRO

Cap Options

Flat STD





@.472 @12.00 .102 2.59




Terminal Options


M1 Solder lug (STD)

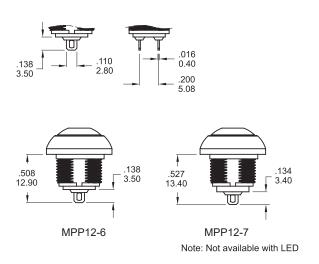

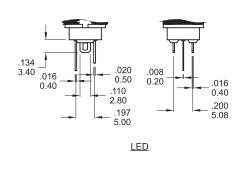

M2 Solder lug






M4 PC Thru-hole .138 3.50 .039 1.00 .200 5.08

Note: Terminal M2~M4 are only available with MPP12-6 without LED.

Panel Mounting



Panel thickness: 1.5 mm (.059inch) min. -4 mm (.157inch) max.


Dimensions: Millimetres




multicomp PRO

Dimension

SPST

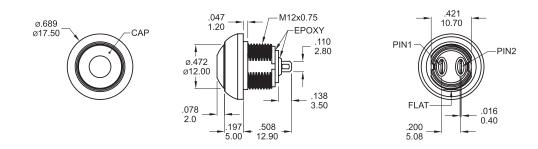


Model name. MPP12-6B207MM1CAS05L00

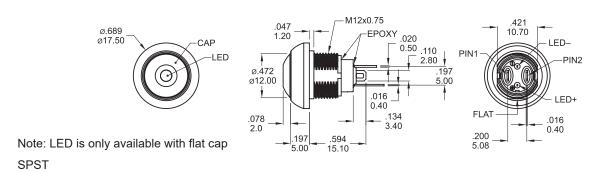

Model name. MPP12-6B205MM1CAS05L00

Wire Options

YXXX Wire leads 20 AWG

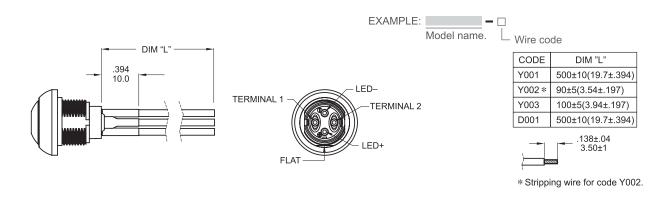


Dimensions: Millimetres






D001 Molding, 500mm wire leads 20 AWG *Available with flat cap type only.

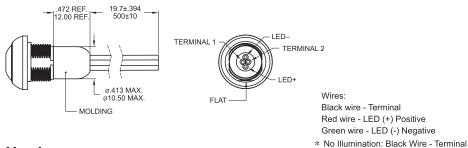


Hardware

- * Standard hardware: 1 nut, 1 O-ring, 1 lockwasher
- * For further information please consult sales representative.



Part Number Explanation

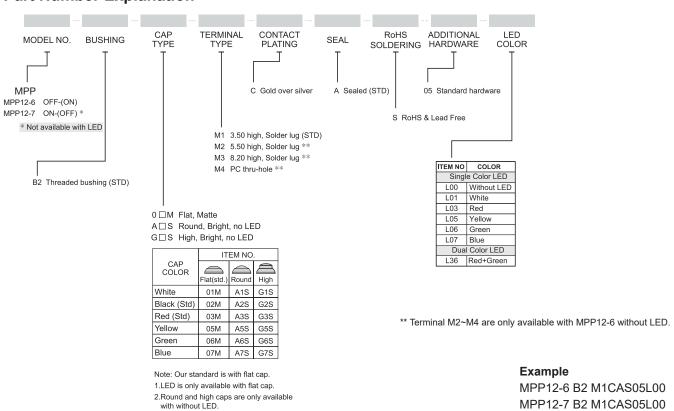





Part Number Table

| Description | Part Number |
|---------------------------------------|-----------------------------|
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B202MM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B202MM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B202MM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B202MM1CAS05L01 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B202MM1CAS05L01-S001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B202MM1CAS05L01-Y001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B202MM1CAS05L03 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B202MM1CAS05L03-S001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B202MM1CAS05L03-Y001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B202MM1CAS05L05 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B202MM1CAS05L05-S001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B202MM1CAS05L05-Y001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B202MM1CAS05L06 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B202MM1CAS05L06-S001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B202MM1CAS05L06-Y001 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B202MM1CAS05L07 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B202MM1CAS05L07-S001 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B202MM1CAS05L07-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B202MM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B202MM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B202MM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B203MM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B203MM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B203MM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B203MM1CAS05L01 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B203MM1CAS05L01-S001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B203MM1CAS05L01-Y001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B203MM1CAS05L03 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B203MM1CAS05L03-S001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B203MM1CAS05L03-Y001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B203MM1CAS05L05 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B203MM1CAS05L05-S001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B203MM1CAS05L05-Y001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B203MM1CAS05L06 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B203MM1CAS05L06-S001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B203MM1CAS05L06-Y001 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B203MM1CAS05L07 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B203MM1CAS05L07-S001 |





| | T |
|---------------------------------------|-----------------------------|
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B203MM1CAS05L07-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B203MM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B203MM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B203MM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B205MM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B205MM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B205MM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B205MM1CAS05L01 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B205MM1CAS05L01-S001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B205MM1CAS05L01-Y001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B205MM1CAS05L03 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B205MM1CAS05L03-S001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B205MM1CAS05L03-Y001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B205MM1CAS05L05 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B205MM1CAS05L05-S001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B205MM1CAS05L05-Y001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B205MM1CAS05L06 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B205MM1CAS05L06-S001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B205MM1CAS05L06-Y001 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B205MM1CAS05L07 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B205MM1CAS05L07-S001 |
| Pushbutton Switch, Off-On, Blue LED | MPP12-6B205MM1CAS05L07-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B205MM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B205MM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B205MM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B206MM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B206MM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B206MM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B206MM1CAS05L01 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B206MM1CAS05L01-S001 |
| Pushbutton Switch, Off-On, White LED | MPP12-6B206MM1CAS05L01-Y001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B206MM1CAS05L03 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B206MM1CAS05L03-S001 |
| Pushbutton Switch, Off-On, Red LED | MPP12-6B206MM1CAS05L03-Y001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B206MM1CAS05L05 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B206MM1CAS05L05-S001 |
| Pushbutton Switch, Off-On, Yellow LED | MPP12-6B206MM1CAS05L05-Y001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B206MM1CAS05L06 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B206MM1CAS05L06-S001 |
| Pushbutton Switch, Off-On, Green LED | MPP12-6B206MM1CAS05L06-Y001 |
| | |





| Pushbutton Switch, Off-On, Blue LED MPP12-6B206MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B206MM1CAS05L07-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B206MM1CAS05L00-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B206MM2CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B206MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B206MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B206MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, WIO LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L00-Y001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L03-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L00-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CA | | |
|--|---------------------------------------|-----------------------------|
| Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, Off-On, White LED Pushbutton Switch, Off-On, Red LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED Pushbutton Sw | Pushbutton Switch, Off-On, Blue LED | MPP12-6B206MM1CAS05L07 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B206MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B206MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B206MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-Y001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-Y001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-Y001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12- | Pushbutton Switch, Off-On, Blue LED | MPP12-6B206MM1CAS05L07-S001 |
| Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, Off-On, White LED Pushbutton Switch, Off-On, Red LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED Pushbutton Switc | Pushbutton Switch, Off-On, Blue LED | MPP12-6B206MM1CAS05L07-Y001 |
| Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, Off-On, White LED Pushbutton Switch, Off-On, Red LED Pushbutton Switch, Off-On, Pellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED Pushbutton Swi | Pushbutton Switch, Off-On, W/O LED | MPP12-6B206MM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-Y001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-Y001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-Y001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Sw | Pushbutton Switch, Off-On, W/O LED | MPP12-6B206MM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Swi | Pushbutton Switch, Off-On, W/O LED | MPP12-6B206MM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L00-Y001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-Y001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutto | Pushbutton Switch, Off-On, W/O LED | MPP12-6B207MM1CAS05L00 |
| Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01 Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L03-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00 Pushbutto | Pushbutton Switch, Off-On, W/O LED | MPP12-6B207MM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, White LED Pushbutton Switch, Off-On, White LED MPP12-6B207MM1CAS05L01-Y001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off | Pushbutton Switch, Off-On, W/O LED | MPP12-6B207MM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, White LED Pushbutton Switch, Off-On, Red LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED Pushbutton Switc | Pushbutton Switch, Off-On, White LED | MPP12-6B207MM1CAS05L01 |
| Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3 | Pushbutton Switch, Off-On, White LED | MPP12-6B207MM1CAS05L01-S001 |
| Pushbutton Switch, Off-On, Red LED MPP12-6B207MM1CAS05L03-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, WO LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off | Pushbutton Switch, Off-On, White LED | MPP12-6B207MM1CAS05L01-Y001 |
| Pushbutton Switch, Off-On, Red LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED | Pushbutton Switch, Off-On, Red LED | MPP12-6B207MM1CAS05L03 |
| Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-S001 Pushbutton Switch, Off-On, Yellow LED MPP12-6B207MM1CAS05L05-Y001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Red LED | MPP12-6B207MM1CAS05L03-S001 |
| Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, Off-On, | Pushbutton Switch, Off-On, Red LED | MPP12-6B207MM1CAS05L03-Y001 |
| Pushbutton Switch, Off-On, Yellow LED Pushbutton Switch, Off-On, Green LED Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Yellow LED | MPP12-6B207MM1CAS05L05 |
| Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Yellow LED | MPP12-6B207MM1CAS05L05-S001 |
| Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-S001 Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Yellow LED | MPP12-6B207MM1CAS05L05-Y001 |
| Pushbutton Switch, Off-On, Green LED MPP12-6B207MM1CAS05L06-Y001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Green LED | MPP12-6B207MM1CAS05L06 |
| Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Green LED | MPP12-6B207MM1CAS05L06-S001 |
| Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-S001 Pushbutton Switch, Off-On, Blue LED MPP12-6B207MM1CAS05L07-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B207MM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, Green LED | MPP12-6B207MM1CAS05L06-Y001 |
| Pushbutton Switch, Off-On, Blue LED Pushbutton Switch, Off-On, W/O LED | Pushbutton Switch, Off-On, Blue LED | MPP12-6B207MM1CAS05L07 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, Blue LED | MPP12-6B207MM1CAS05L07-S001 |
| Pushbutton Switch, Off-On, W/O LED | Pushbutton Switch, Off-On, Blue LED | MPP12-6B207MM1CAS05L07-Y001 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B207MM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B207MM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B207MM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A2SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A2SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A2SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A2SM4CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A2SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A2SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-S001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A2SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A3SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A3SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM3CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A3SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A3SM4CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A3SM2CAS05L00 |
| | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A3SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2A5SM1CAS05L00 | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A3SM4CAS05L00 |
| | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A5SM1CAS05L00 |





| - | I |
|------------------------------------|-----------------------------|
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A5SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A5SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A5SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A5SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A5SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A6SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A6SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A6SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A6SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A6SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A6SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A7SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A7SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A7SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A7SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A7SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2A7SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G2SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G2SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G2SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G2SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G2SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G2SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G3SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G3SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G3SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G3SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G3SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G3SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G5SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G5SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G5SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G5SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G5SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G5SM4CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G6SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G6SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G6SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G6SM2CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G6SM3CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G6SM4CAS05L00 |





| Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, On-Off, W/O LED Pushbutton Switc | | · |
|--|------------------------------------|-----------------------------|
| Pushbutton Switch, Off-On, W/O LED MPP12-6B2G7SM1CAS05L00-Y001 Pushbutton Switch, Off-On, W/O LED MPP12-6B2G7SM2CAS05L00 Pushbutton Switch, Off-On, W/O LED MPP12-6B2G7SM3CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-6B2G7SM4CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B202MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B202MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1C | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G7SM1CAS05L00 |
| Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, On-Off, W/O LED Pushbutton Switc | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G7SM1CAS05L00-S001 |
| Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, On-Off, W/O LED Pushbutton Switc | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G7SM1CAS05L00-Y001 |
| Pushbutton Switch, Off-On, W/O LED Pushbutton Switch, On-Off, W/O LED Pushbutton Switc | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G7SM2CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B202MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G7SM3CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B202MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED | Pushbutton Switch, Off-On, W/O LED | MPP12-6B2G7SM4CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED | Pushbutton Switch, On-Off, W/O LED | MPP12-7B202MM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B203MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O | Pushbutton Switch, On-Off, W/O LED | MPP12-7B202MM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B203MM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B205MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B203MM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED Pushbutton Switch, On-Off, W/O | Pushbutton Switch, On-Off, W/O LED | MPP12-7B205MM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B206MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B205MM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED Pushbutton Switch, On-Off, W/O LED MPP12-7B207MM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B206MM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B206MM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED Pushbutton Switch, On-Off, W/O | Pushbutton Switch, On-Off, W/O LED | MPP12-7B207MM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B207MM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A2SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED Pushbutton Switch | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A2SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A3SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A3SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A5SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A5SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2A7SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A6SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A6SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A7SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G2SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2A7SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G2SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G3SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G2SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G3SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G5SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G3SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G5SM1CAS05L00 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G6SM1CAS05L00-Y001 Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G5SM1CAS05L00-Y001 |
| Pushbutton Switch, On-Off, W/O LED MPP12-7B2G7SM1CAS05L00 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G6SM1CAS05L00 |
| | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G6SM1CAS05L00-Y001 |
| Pushbutton Switch On-Off W/O LED MPP12-7B2G7SM1CAS05L00-V001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G7SM1CAS05L00 |
| 1 deliberted a witch, on-on, who led a with 12-162016WTGA305E00-1001 | Pushbutton Switch, On-Off, W/O LED | MPP12-7B2G7SM1CAS05L00-Y001 |

Important Notice: This data sheet and its contents (the "Information") belong to the members of the AVNET group of companies (the "Group") or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but the Group assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where the Group was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict the Group's liability for death or personal injury resulting from its negligence. Multicomp Pro is the registered trademark of Premier Farnell Limited 2019.

