# soft starter-ATS22-control 220V-power 230V(18.5kW)/400...440V(37kW)



Main	
Range of product	Altistart 22
Product or component type	Soft starter
Product destination	Asynchronous motors
Product specific application	Pumps and fans
Component name	ATS22
Network number of phases	3 phases
[Us] rated supply voltage	230440 V - 1510 %
Motor power kW	37 KW 400 V 37 KW 440 V 18.5 kW 230 V
Factory setting current	69 A
Power dissipation in W	63 W for standard applications
Utilisation category	AC-53A
Type of start	Start with torque control (current limited to 3.5 In)
IcL starter rating	75 A for connection in the motor supply line for standard applications
IP degree of protection	IP20

#### Complementary

With heat sink	
Internal bypass	
195484 V	
5060 Hz - 1010 %	
4566 Hz	
In the motor supply line To the motor delta terminals	
230 V - 1510 % 50/60 Hz	
20 W	
2	
Relay outputs R1 230 V running, alarm, trip, stopped, not stopped, starting, ready C/O Relay outputs R2 230 V running, alarm, trip, stopped, not stopped, starting, ready C/O	
100 mA at 12 V DC (relay outputs)	
5 A 250 V AC resistive 1 relay outputs 5 A 30 V DC resistive 1 relay outputs 2 A 250 V AC inductive 0.4 20 ms relay outputs 2 A 30 V DC inductive 7 ms relay outputs	
3	
(LI1, LI2, LI3) logic, 5 mA 4.3 kOhm	
24 V <= 30 V	
Positive logic Ll1, Ll2, Ll3 at State 0: < 5 V and <= 2 mA at State 1: > 11 V, >= 5 mA	
0.41 lcl adjustable	
750 Ohm	
Modbus	
1 RJ45	
Serial	

Physical interface	RS485 multidrop	
Transmission rate	4800, 9600 or 19200 bps	
Installed device	31	
Protection type	Phase failure: line Thermal protection: motor Thermal protection: starter	
Marking	CE	
Type of cooling	Forced convection	
Operating position	Vertical +/- 10 degree	
Height	295 mm	
Width	145 mm	
Depth	207 mm	
Net weight	12 kg	
Motor power range AC-3	1525 KW at 200240 V 3 phases 3050 kW at 380440 V 3 phases	
Motor starter type	Soft starter	

#### Environment

Electromagnetic compatibility	Conducted and radiated emissions level A conforming to IEC 60947-4-2 Damped oscillating waves level 3 conforming to IEC 61000-4-12 Electrostatic discharge level 3 conforming to IEC 61000-4-2 Immunity to electrical transients level 4 conforming to IEC 61000-4-4 Immunity to radiated radio-electrical interference level 3 conforming to IEC 61000-4-3 Voltage/current impulse level 3 conforming to IEC 61000-4-5	
Standards	IEC 60947-4-2	
Product certifications	CSA[RETURN]UL[RETURN]GOST[RETURN]CCC[RETURN]C-Tick	
Vibration resistance	1 gn (f= 13200 Hz) conforming to IEC 60068-2-6 1.5 mm (f= 213 Hz) conforming to IEC 60068-2-6	
Shock resistance	15 gn for 11 ms conforming to IEC 60068-2-27	
Noise level	45 dB	
Pollution degree	Level 2 conforming to IEC 60664-1	
Relative humidity	095 % without condensation or dripping water conforming to IEC 60068-2-3	
Ambient air temperature for operation	-1040 °C (without derating) 4060 °C (with current derating 2.2 % per °C)	
Ambient air temperature for storage	-2570 °C	
Operating altitude	<= 1000 m without derating > 1000< 2000 m with current derating of 2.2 % per additional 100 m	

#### Packing Units

r doking office	
Unit Type of Package 1	PCE
Number of Units in Package 1	1
Package 1 Height	31.0 cm
Package 1 Width	23.5 cm
Package 1 Length	36.0 cm
Package 1 Weight	8.221 kg
Unit Type of Package 2	P06
Number of Units in Package 2	6
Package 2 Height	73.5 cm
Package 2 Width	80.0 cm
Package 2 Length	60.0 cm
Package 2 Weight	63.136 kg

# Offer Sustainability


REACh Regulation	REACh Declaration	
EU RoHS Directive	Pro-active compliance (Product out of EU RoHS legal scope)	
Mercury free	Yes	
China RoHS Regulation	☐ China RoHS Declaration	
RoHS exemption information	₽¥Yes	
WEEE	The product must be disposed on European Union markets following speciwaste collection and never end up in rubbish bins	

#### Contractual warranty

Warranty	18 months
vvarianty	16 monus

#### Frame Size B

#### **Dimensions**

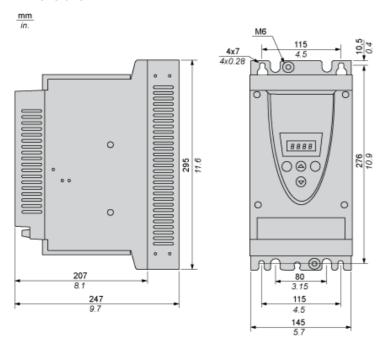

#### **Precautions**

#### Standards

The Altistart 22 soft starter is compliant with pollution Degree 2 as defined in NEMA ICS1-1 or IEC 60664-1.

For environment pollution degree 3, install the Altistart 22 soft starter inside a cabinet type 12 or IP54.

#### DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

ATS22 soft starters are open devices and must be mounted in a suitable enclosure.

Failure to follow these instructions will result in death or serious injury.

#### Air Circulation

Leave sufficient free space to help the air required for cooling purposes to circulate from the bottom to the top of the unit.

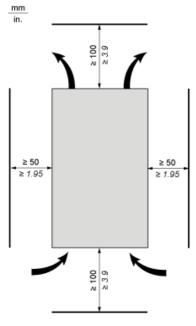


#### Overheating

To avoid the soft starter to overheat, respect the following recommendations:

- Mount the Altistart 22 Soft Starter within ± 10° of vertical.
- Do not locate the Altistart 22 Soft Starter near heat radiating elements.
- Electrical current through the Altistart 22 Soft Starter will result in heat losses that must be dissipated into the ambient air immediately
  surrounding the soft starter. To help prevent a thermal fault, provide sufficient enclosure cooling and/or ventilation to limit the ambient
  temperature around the soft starter.
- If several soft starters are installed in a control panel, arrange them in a row. Do not stack soft starters. Heat generated from the bottom soft starter can adversely affect the ambient temperature around the top soft starter.

#### Mounting

#### Connection Between the Fan and the Altistart 22 Soft Starter

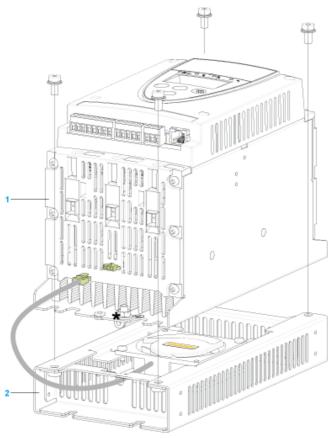

- 1 Altistart 22 Soft Starter
- 2 Fan

# Wall mounted or Floor-standing Enclosure with IP 23 Degree of protection


#### Introduction

To help proper air circulation in the soft starter, grilles and forced ventilation can be installed.

#### **Ventilation Grilles**





#### Forced Ventilation Unit

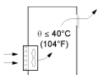

#### **Power Terminal**

#### Cage Style

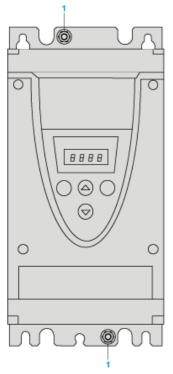

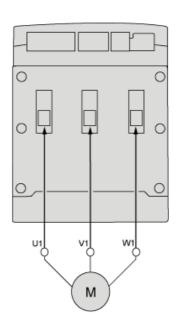

1 Ground connection

#### Power connections, minimum and maximum wiring capabilities, tightening torque


			IEC cable	UL cable
Power supply and output to motor	Size/gauge	min	4 mm (a)	10 AWG (a)
max	50 mm	1/0 AWG		
Tightening torque	min	8 N.m	70 lb.in	
max	8 N.m	70 lb.in		•
Strip length		15 mm	0.6 in.	

#### Power connections, minimum required wiring section


IEC cable	UL cable
mm² (Cu 70°C/158°F) (1)	AWG (Cu 75°C/167°F) (1)
25	3

#### 230 Vac control, logic Inputs (LI) 24 Vdc, 3-wire control

#### With Line Contactor, Freewheel or Controlled Stop

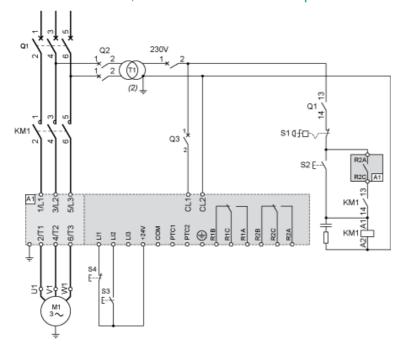

#### 230 Vac control, logic Inputs (LI) 24 Vdc, 2-wire control, freewheel stop

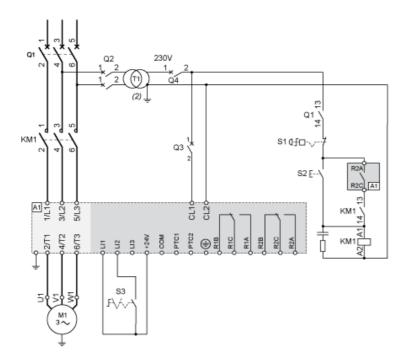



### Connection in the motor delta winding in series with each winding

#### Wiring

ATS22 soft starters connected to motors with the delta connections can be inserted in series in the motor windings.

The following wiring requieres particular attention. It is documented in the Altistart 22 Soft start - soft stop unit user manual. Please contact Schneider Electric commercial organisation for further informations.

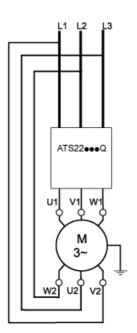

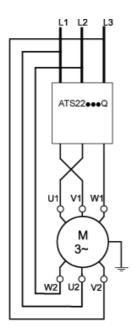


# Example

A 400 V - 110 kW motor with a line current of 195 A (nominal current for the delta connection). The current in each winding is equal to 195/1.5 or 130 A. The rating is determined by selecting the soft starter with a permanent nominal current (ICL) just above this current.

#### Motor Thermal Protection - Cold Curves

#### Curves

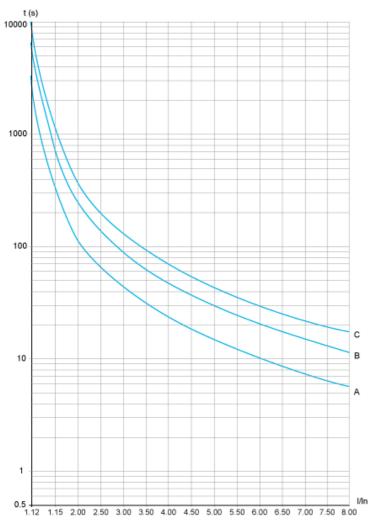

A Class 10

B Class 20

C Class 30

## Trip time for a Standard Application (Class 10)

3.5 ln

32 s

#### Trip time for a Severe Application (Class 20)

3.5 ln


63 s

#### Trip time for a Severe Application (Class 30)

3.5 ln

95 s



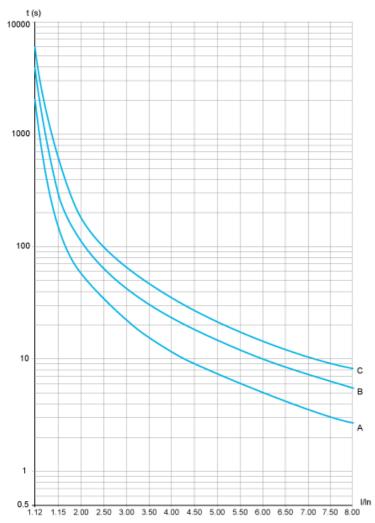

- Class 10 Class 20
- A B C
- Class 30

#### Trip time for a Standard Application (Class 10)

3.5 ln		
16 s		

#### Trip time for a Severe Application (Class 20)

3.5 ln	
32 s	

# Trip time for a Severe Application (Class 30)

3.5 ln	
48 s	