


Box relay Dali

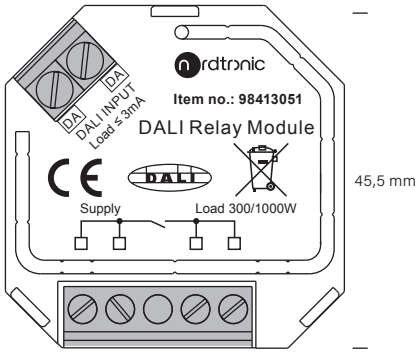

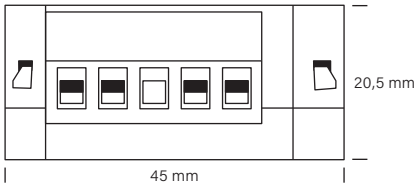

DALI signal input

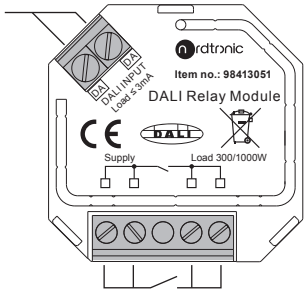

Relay(N.C.)
Factory default power on status: contact closed

Input			
DALI control input	**DALI consumption**	**Number of DALI addresses**	**Max. thermal loss**
1	< 3mA	1	1.2W


Output, relay			
Switching voltage AC	**Switching voltage DC**	**Current**	**Type of contact**
Max. 250V	Max. 30V	Resistive load: max. 4.3A Capacitive load: max. 1.3A Inductive load: max. 4.3A	1 changeover

Compatible Load Types		
Load symbol	**Load type**	**Maximum load**
	Resistive loads Conventional incandescent and halogen light sources	1000W @ 230VAC 500W @ 110VAC
	Capacitive loads Fluorescent tube lamp (compact / with electronic ballast), electronic transformer, LED	300W @ 230VAC 150W @ 110VAC
	Inductive loads Ferromagnetic transformers	1000W @ 230VAC 500W @ 110VAC

Wiring diagram


1. Switching of 100-240VAC load

DALI PS

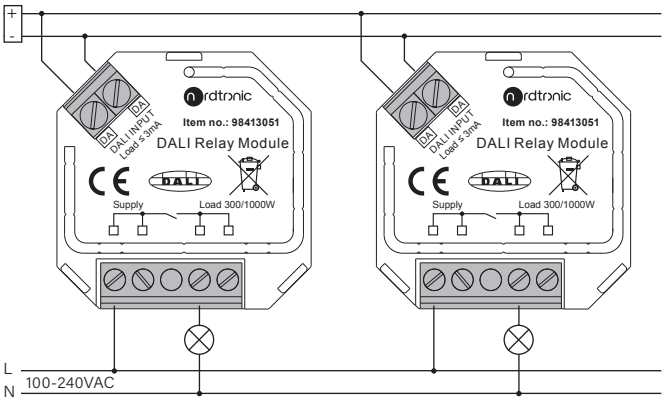

2. Switching of 12/24VDC load

DALI PS

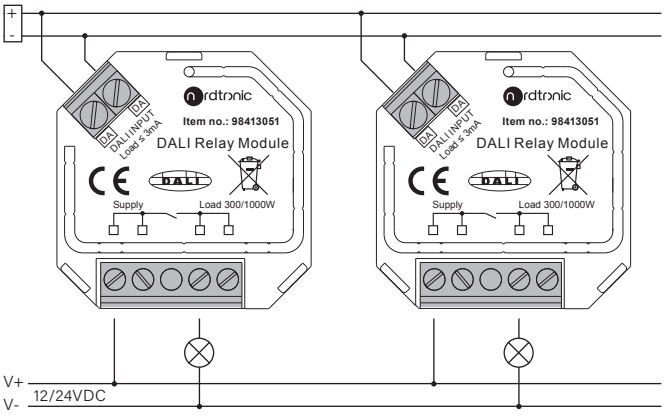

Operation

Setting DALI Address

1 DALI address can be assigned by DALI Master controller automatically, please refer to user manuals of compatible DALI Masters for specific operations.

DALI | 100-240 VAC | 0-1000W | Relay | IP20 | 200 | CE | RoHS

Find the updated manual on our website – nordtronic.com
With reservation for typing errors

Nordtronic A/S | Silovej 8, 12th floor | DK-9900 Frederikshavn | Denmark | CVR: 29808708
Tel: +45 7020 9531 | nordtronic.com

Manual
98413051 | 10-2026