

Luxafor Cube



User Manual

Luxafor Cube Package Contents



Product Specifications

Dimensions: 52 x 52 x 27 mm

(2.05 x 2.05 x 1.06")

Weight: 56g

Light: 6 x RGB LEDs

Consumption: Rated power up to 26 mA

Charging: With a standard micro USB data cable

Built-in 1200mAh battery


Working time: 46 h - 90 h non-stop use.¹

Charging Instructions

1. Prior to use, charge the Cube unit by connecting the included charging cable into a USB power outlet such as a USB charger and plug the other end into the Cubes' micro USB charging port.
2. The Luxafor Cube will turn on immediately when the charging has begun.²
3. You can use the Luxafor Cube unit safely during the charging process - it will operate normally.

Getting Started

1. When the Cube has been fully charged, it's ready to use.
2. Remove the plastic from the double-sided tape that is on the magnet and attach the magnet to the surface on which you would like to place the Luxafor Cube, or place it on the surface of your liking, such as a desk.
3. Short press the button at the back of the Luxafor Cube unit to turn on the device.
4. Change the colors by placing the Switch Cube sideways, as shown below:

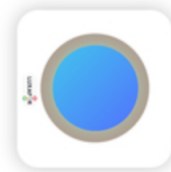

5. Enjoy!

Turning the Cube Unit Off

To turn the Luxafor Cube off, press and hold the button at the back. Release when Purple color is indicated.

Sleep Mode

If you place the Cube in a face-up position, it is not turned off. It instead enters “Sleep Mode”, where it is ready to be used as soon as it is positioned upright again.

Eco Mode

To use Eco Mode, press and hold the button at the back of the Luxafor Cube. Release when Orange color is indicated.

The same applies to exiting the Eco Mode.

When Eco mode is enabled the Cube will indicate the colors in pulsating (slowly blinking) fashion. When Eco mode is not enabled, the Cube will indicate in solid colors.

Reading the Battery Levels on the Cube

Place the Luxafor Cube in a face-up position to check the battery levels. The Cube will indicate Cyan Blue color, and the total amount of LEDs shining will indicate approximate power left on the Switch Cube device. LEDs are placed as shown in the following scheme:



- The battery is fully charged when all 6 LEDs are shining.
- The power level indicators will start to drop, starting from LED No. 1 going clockwise.
- Consequently, when the battery level is critically low, it will indicate only the LED No. 6 shining. Immediate charging is needed.

Understanding the Color Indicators

- **Purple** upon long-pressing the button: You can now release the button and the Switch Cube will turn off.
- **Orange** upon long-pressing the button: You can now release the button and the Eco Mode will be turned on/ off.

Additional Remarks

¹ Working time: average 66 h: 46 h on continuous use for yellow color (58 h in Eco mode), 73 h on continuous use in green, red, or blue colors (90 h in Eco mode).

² If the battery level for the Switch Cube is extremely low, it is possible that when starting the charging process, the device will not turn on immediately. It will charge for a short period of time and once it has enough power, will turn on and operate normally.