


Front upright ×2
前輪座



Brake calipers mount ×2
剎車卡鉗座




Brake calipers ×2
剎車卡鉗

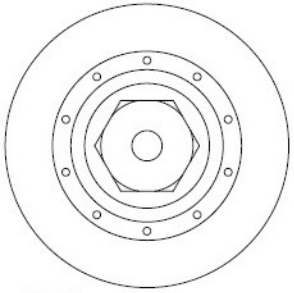

Wheel hubs (large)
(brake disc shaped) ×2
六角輪座(大)(剎車碟型)



Wheel hubs ×2
六角輪座



2WD Axle ×2
二驅輪軸



5.8×6 Ball connector L ×4
球頭螺絲(長)



4.8×4.5 Ball connector ×2
球頭螺絲



3×5.5×2 Spacer ×4
墊片

Bag 2



M2×4 screw ×2
圓頭螺絲



M2×6 screw ×2
沉頭螺絲



2×9.8 Shaft ×2
插銷




5×8 Ball bearing ×4
培林




5×7×0.3 Spacer ×2
墊片


STEP 1 Front axle assembly
前輪座組裝

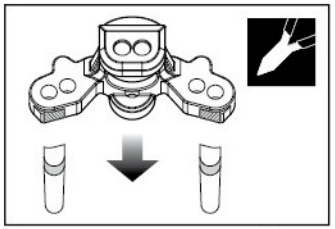



STEP 1 Wheel hubs assembly (Brake disc shaped)
煞車碟盤型輪座組裝

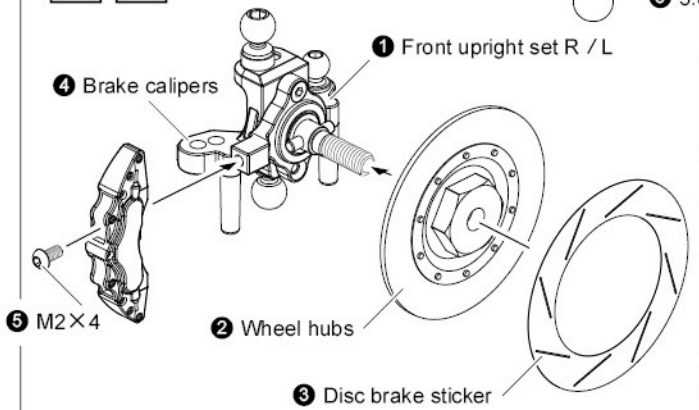

STEP 2 Attaching front axle
安裝前輪座

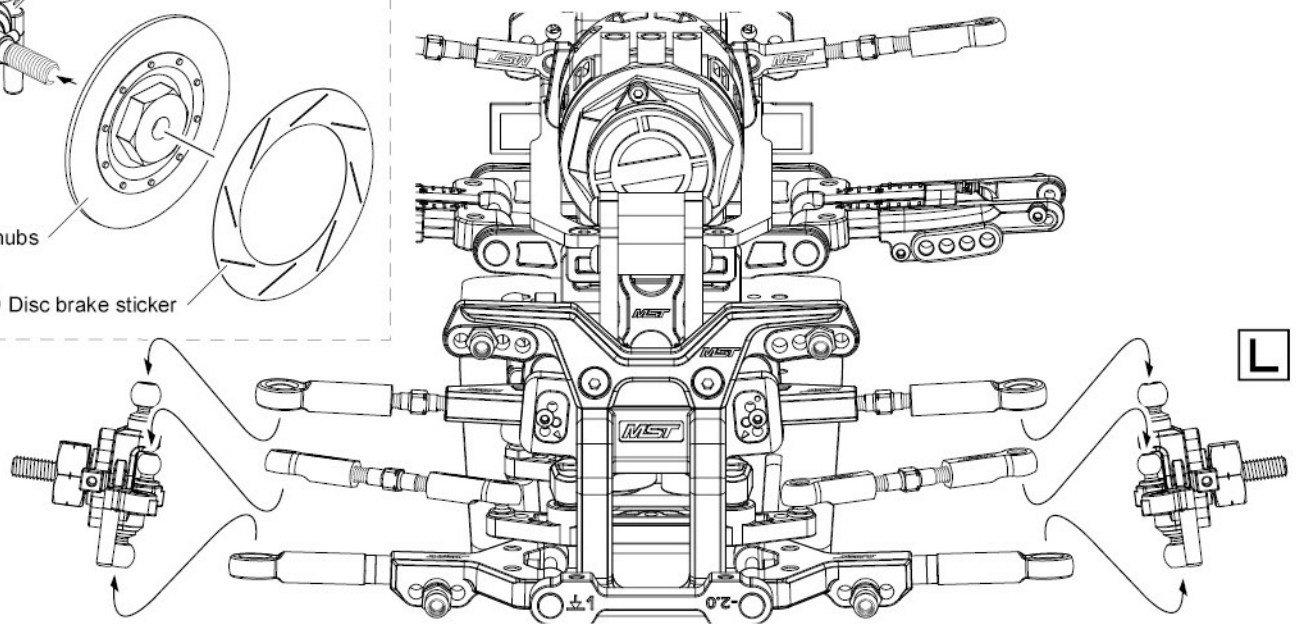

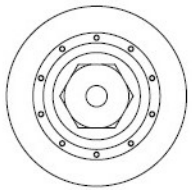

Wheel hubs (small)
(brake disc shaped) ×2
六角輪座(小)(剎車碟型)

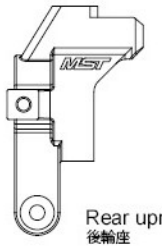

Rear upright X2
後輪座




Steel CVD universal shaft 38.5 ×2
鋼製CVD傳動軸 38.5


Wheel axle ×2
萬向接杯


2×22 Shaft ×2
插銷


4.8 Ball connector L ×2
外六角球頭 (長)


Wheel hubs ×2
六角輪座


Brake calipers ×2
剎車卡鉗


M2×3 screw ×4
圓頭螺絲


M2×4 screw ×2
圓頭螺絲


M3×2.6 screw ×2
止付螺絲


M3×12 screw ×2
止付螺絲


2×9.8 Shaft ×2
插銷


2×9.8 Shaft ×2
插銷

3×5.5×2 Spacer ×2
墊片

Bag 1


Cross joint ×2
連接軸


5×7×0.1 Spacer ×2
墊片



5×10 Ball bearing ×4
培林

STEP 1 Rear axle assembly
後輪座組裝


X2 Make 2

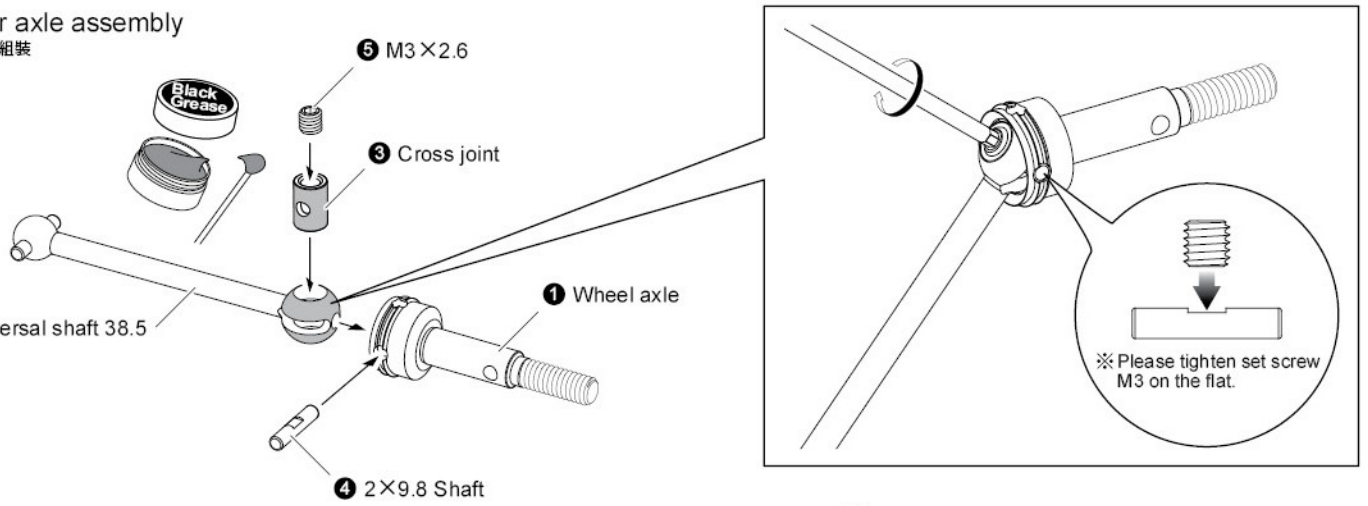


STEP 2

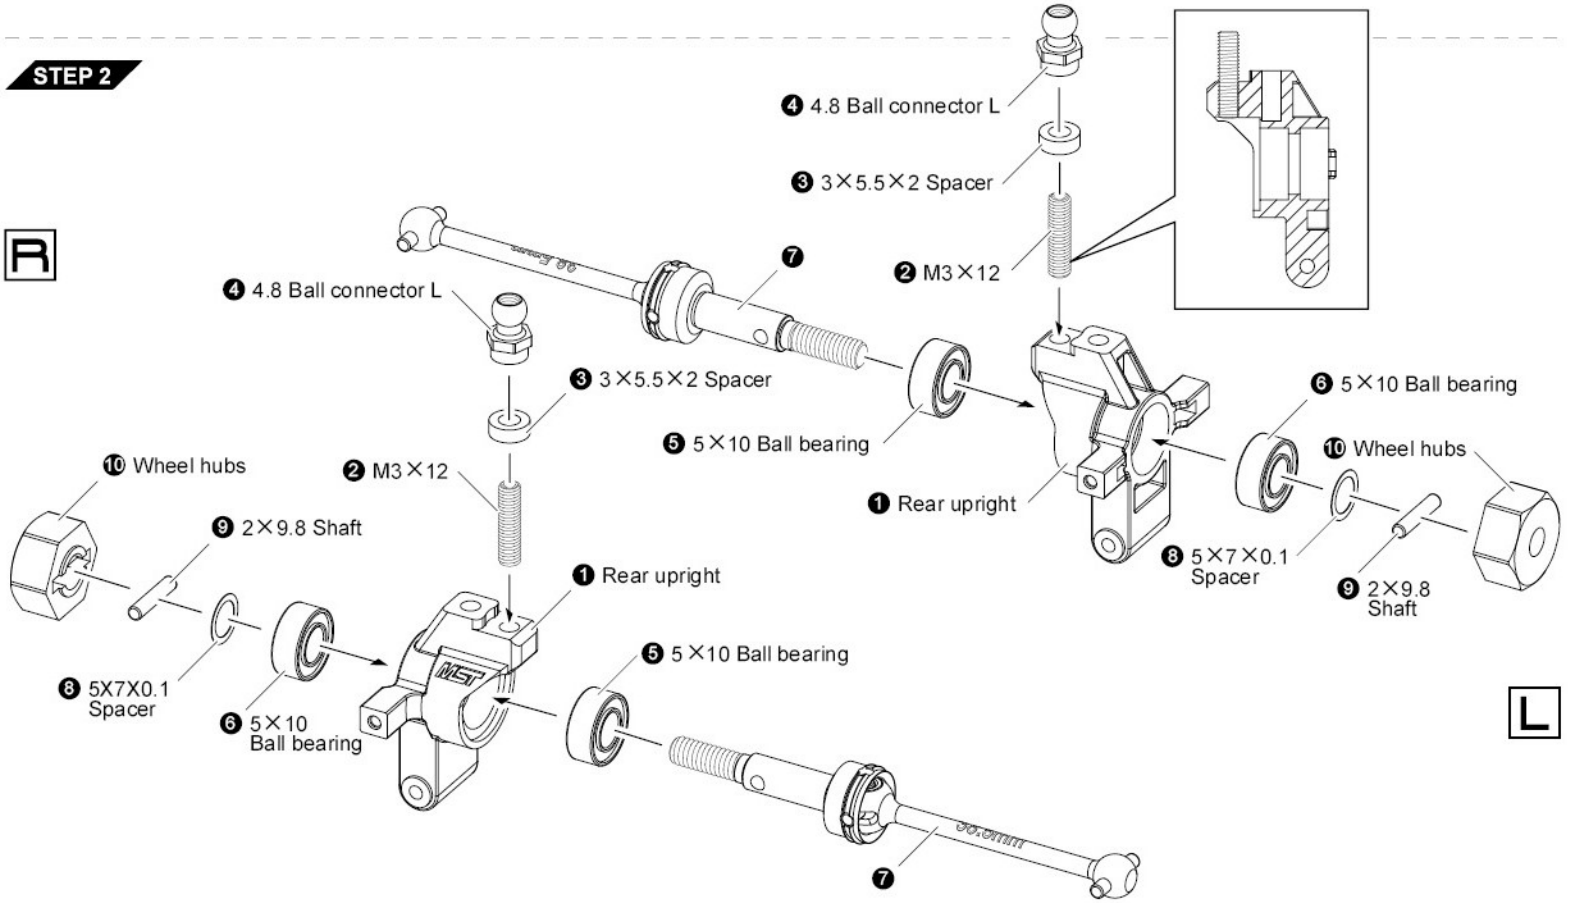



STEP 3 Attaching rear axle
安裝後輪座

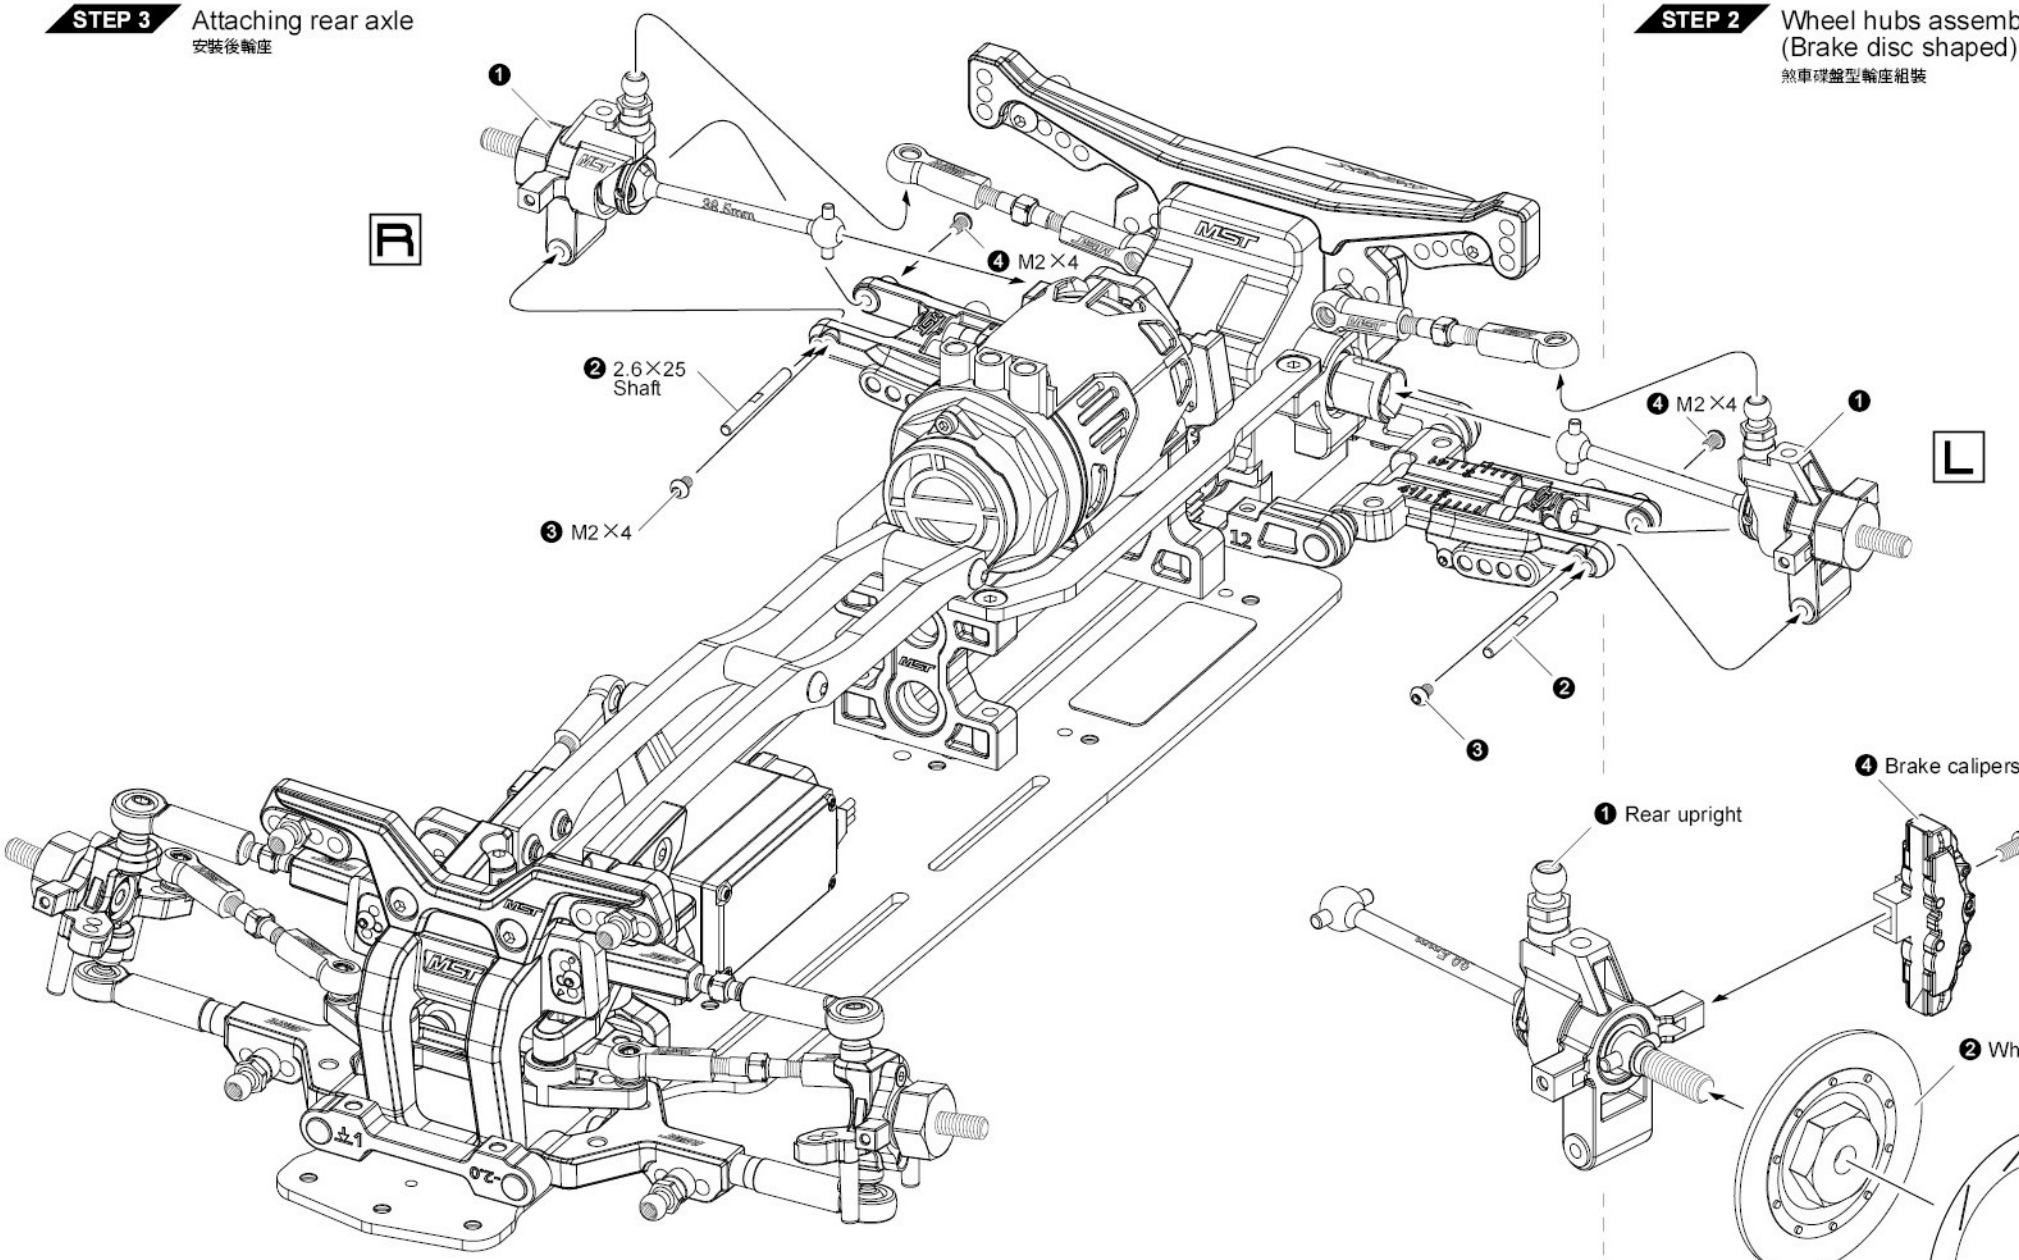


STEP 2 Wheel hubs assembly
(Brake disc shaped)
煞車碟盤型輪座組裝

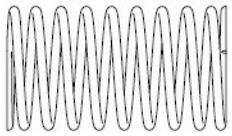
Hard coil spring 31mm ×2 (red)
硬避震彈簧 31mm (紅)

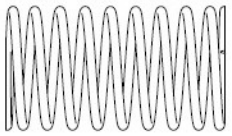

Soft coil spring 31mm ×2 (purple-green)
軟避震彈簧 31mm (紫綠)


Damper cylinder ×4
避震筒身

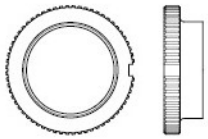

Spring retainer (red) ×4
避震器調整環 (紅)


Piston rod ×4
避震軸心



Piston ×4
避震活塞

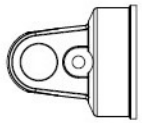

Cylinder cap ×4
避震器上蓋



Damper adjuster ×4
避震器拉桿


Rod guide cap ×4
避震器下蓋


10.8×0.9 O-ring ×4
O環

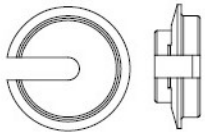
Damper retainer ×4
避震器彈簧座


12×1 O-ring ×4
O環


Oil seal ×4
避震器氣室



Damper O-ring P3 ×4
避震器O環


E-clip ×8
E形扣



Rod guide ×4
避震器下蓋墊片


M3×4 screw ×4
沉頭螺絲

STEP 1 Damper assembly
避震器組裝

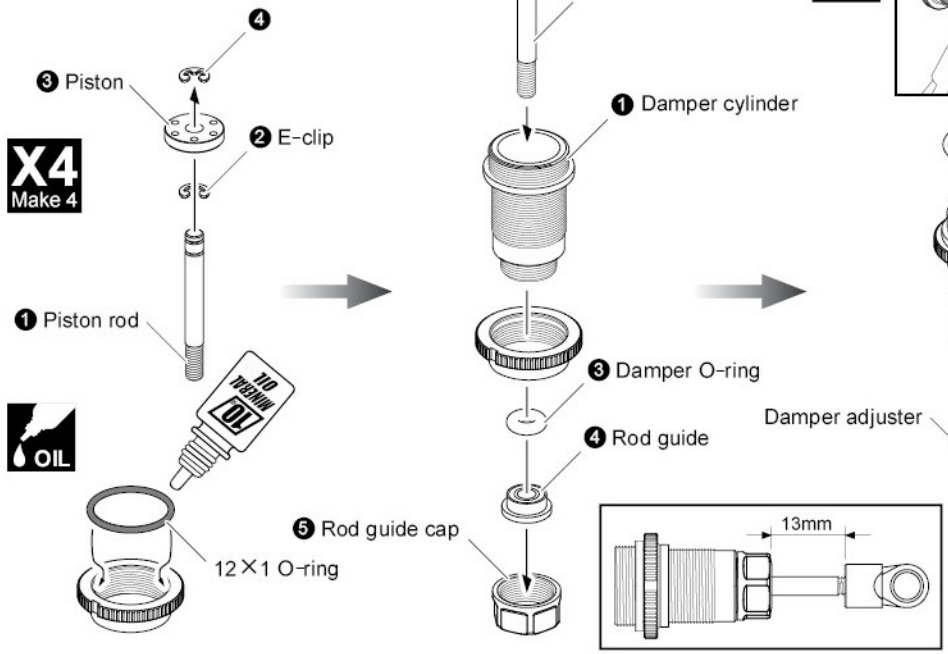


Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

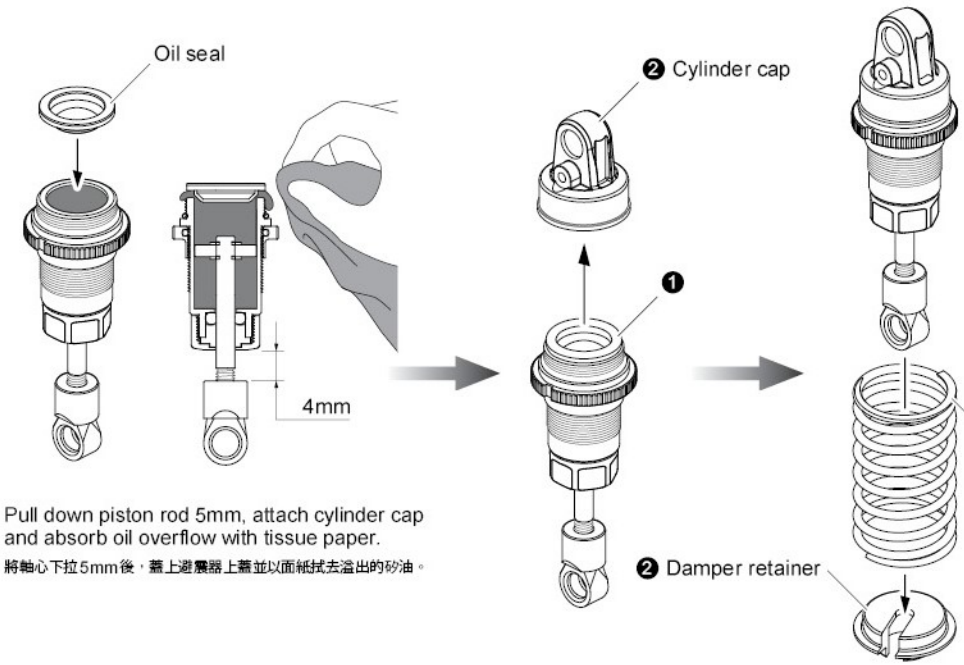


Pull down piston rod 5mm, attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉5mm後，蓋上避震器上蓋並以面紙拭去溢出的矽油。


※The height of the shock absorber adjusting ring is for reference only! Please make F10mm / R4mm as the actual vehicle height after installing the electric components completely.
避震器調整環預壓僅供參考!
請安裝完整電裝後以實際車高前10mm後4mm為準。

STEP 2 Attaching damper
安裝避震器

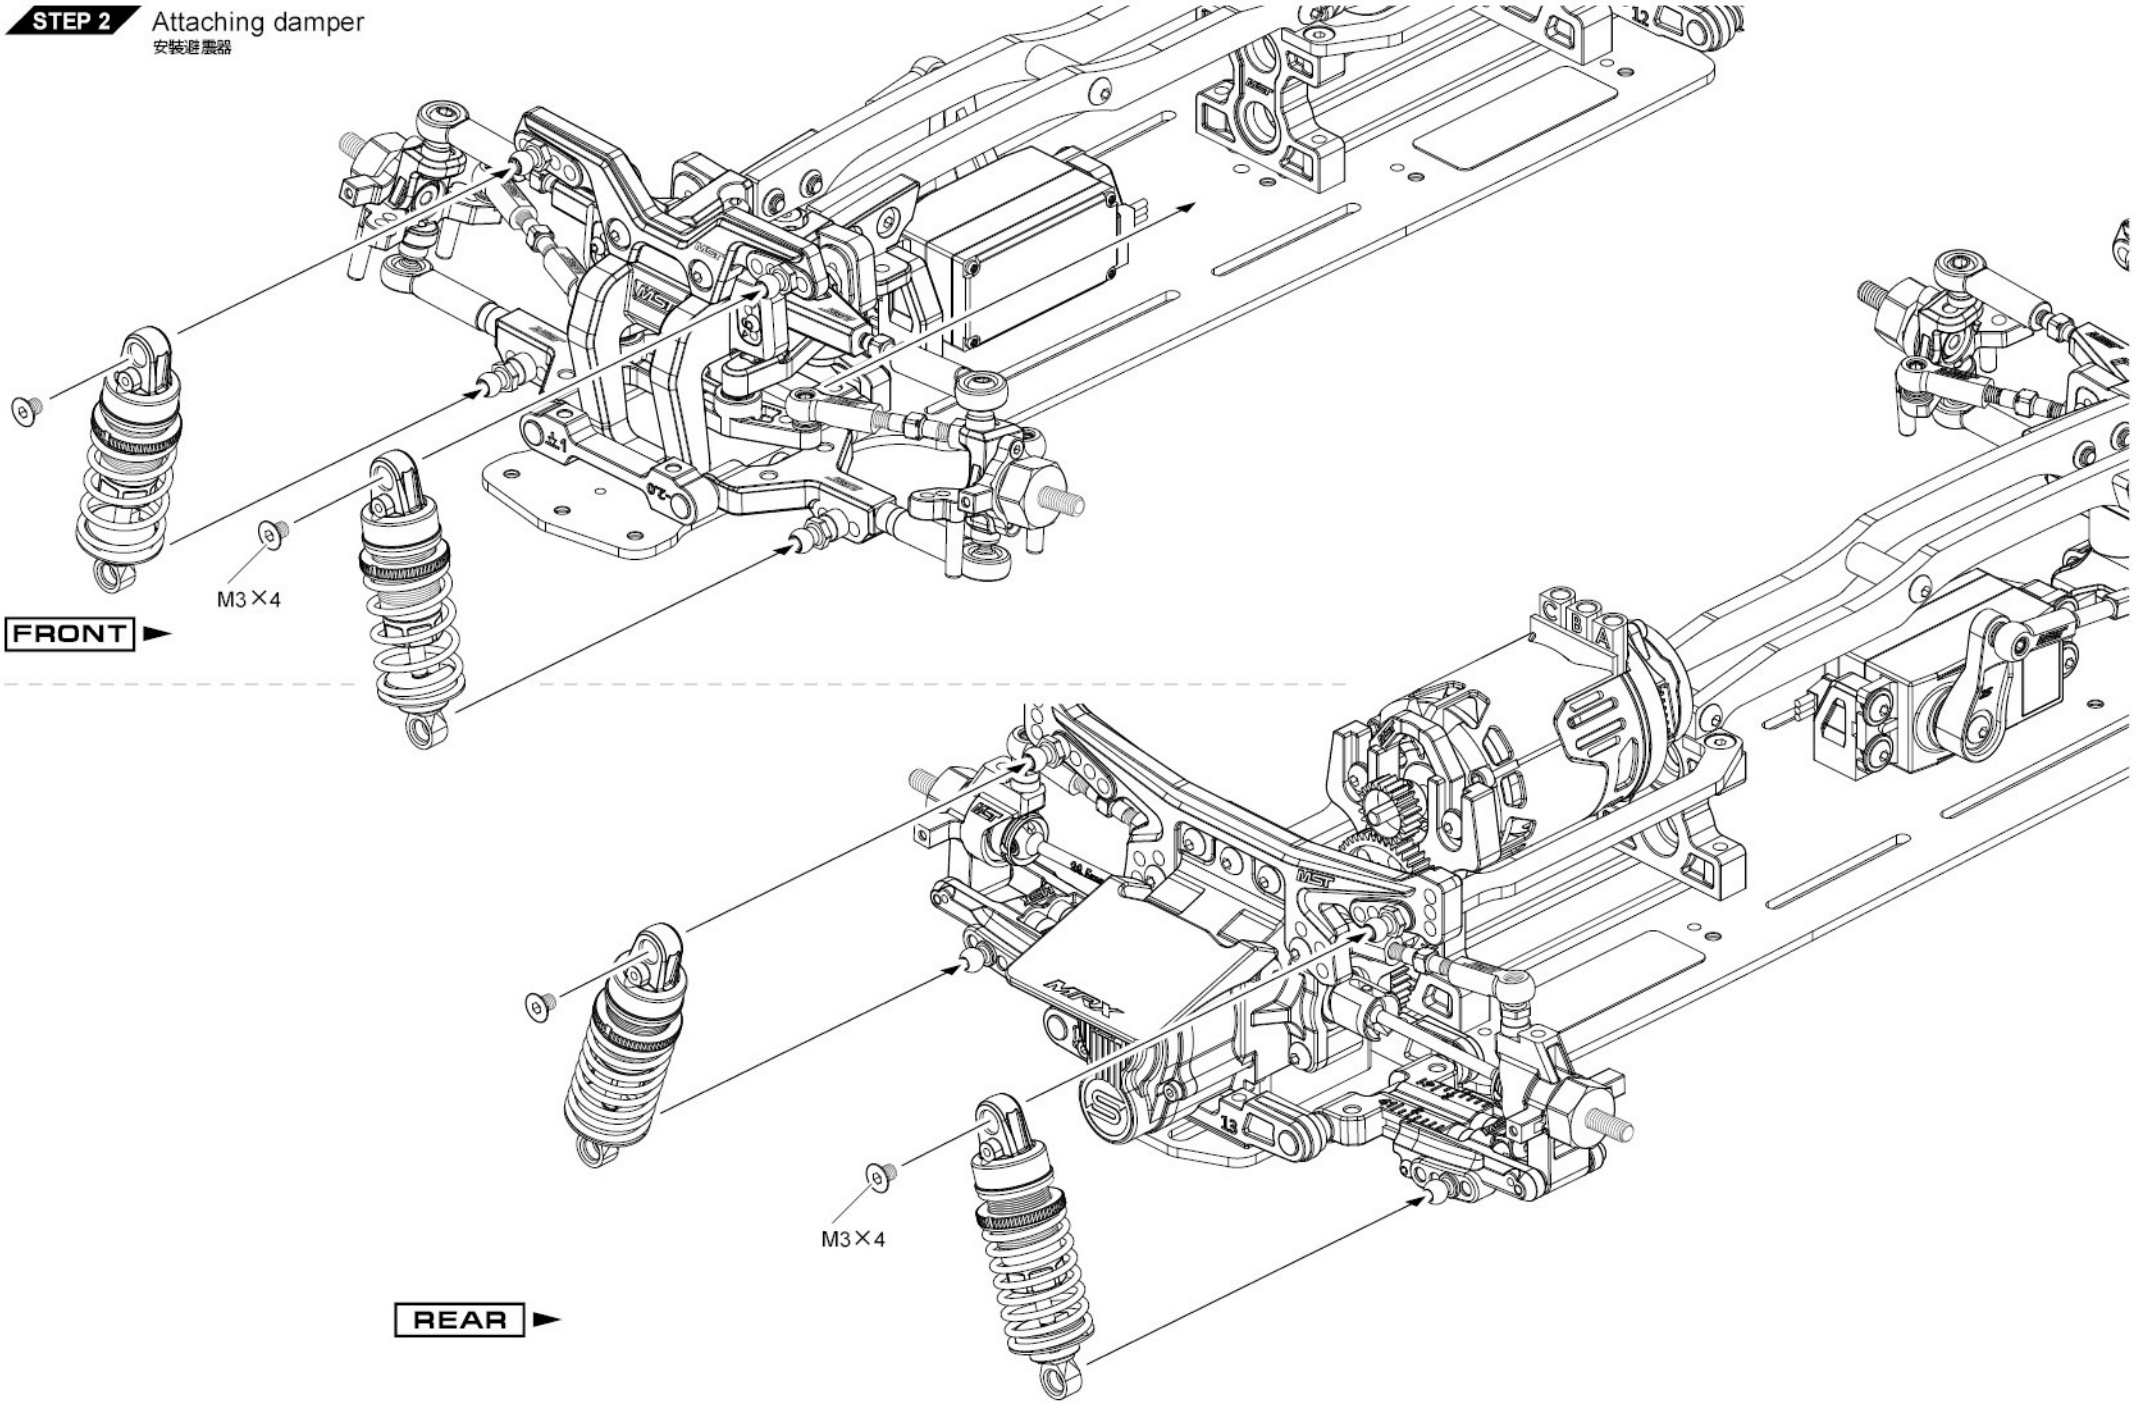


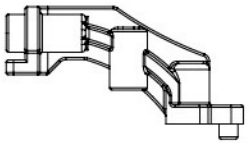


Battery mounts A (R) ×1
電池座 A(R)

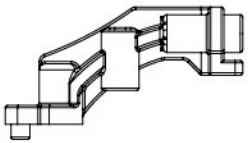

Battery mounts A (L) ×1
電池座 A(L)

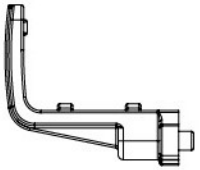

Battery mounts B (L) ×1
電池座 B (L)

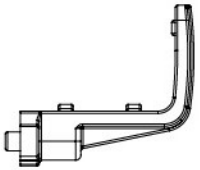

Battery mounts B (R) ×1
電池座 B (R)



Heightened spacer R ×1
增高墊片 R



Heightened spacer L ×1
增高墊片 L



5×7×1.5 Spacer ×2
墊片



Battery baffle ×2
電池擋片



M3×8 screw ×4
沉頭螺絲



M3×14 screw ×2
沉頭螺絲




M3×10 screw ×2
圓頭螺絲



PVC Deck protective film ×2
PVC底盤防刮貼紙

STEP 1 Attaching battery mounts
安裝電池固定座

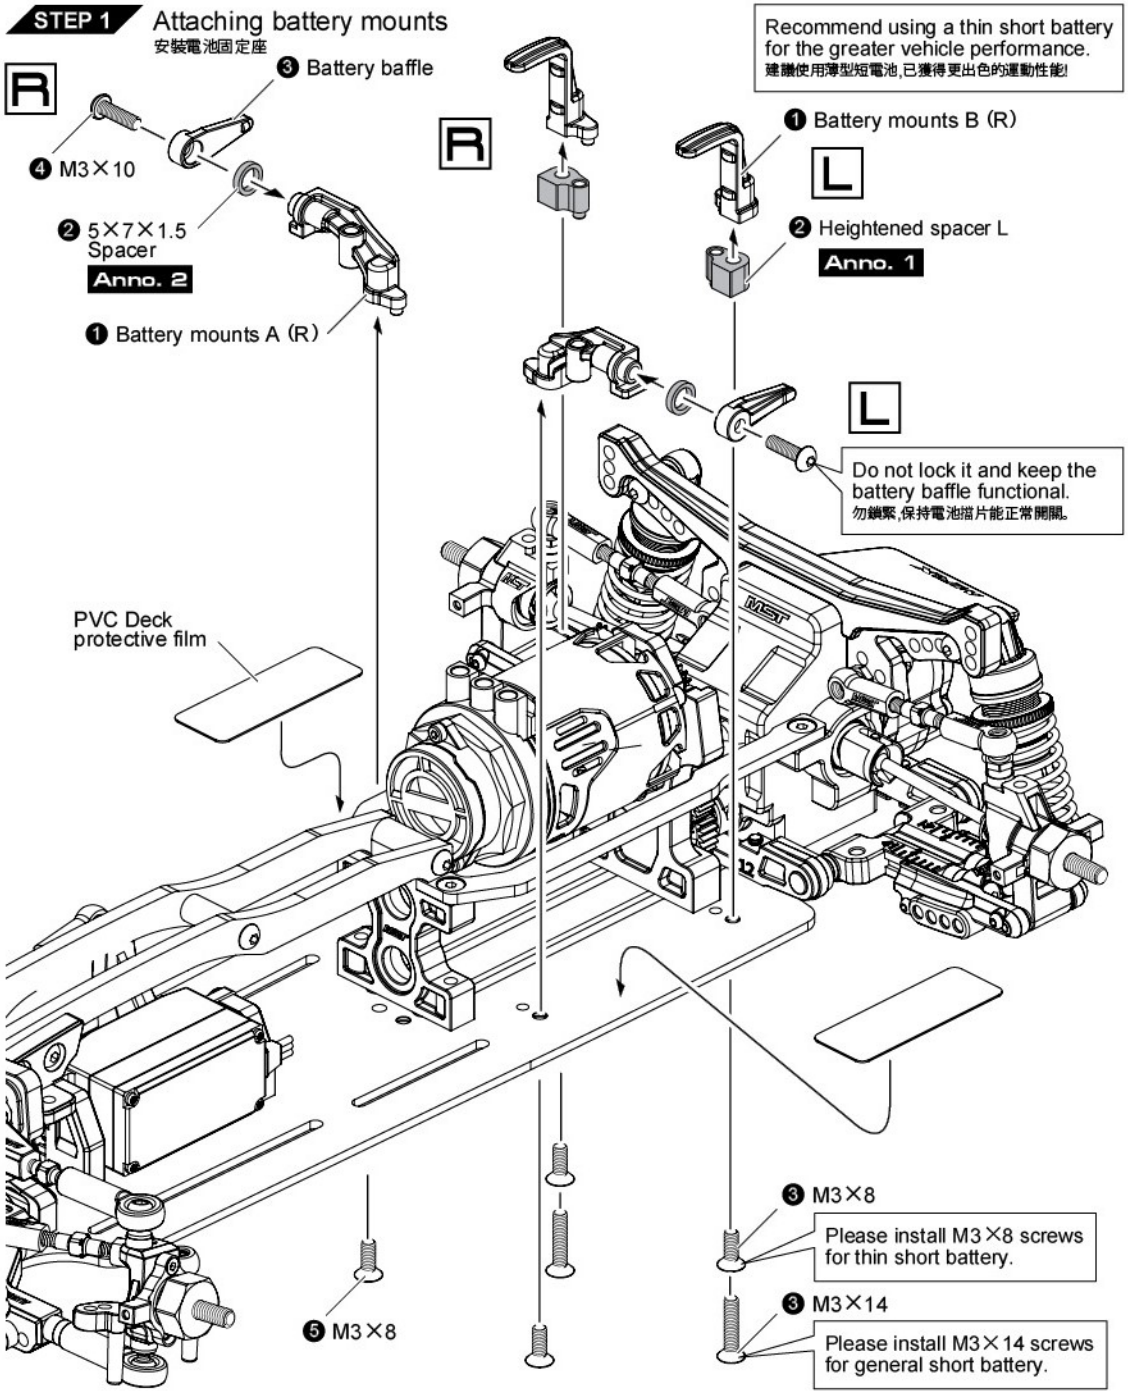

Recommend using a thin short battery for the greater vehicle performance.
建議使用薄型短電池,已獲得更出色的運動性能!


BATTERY HOLDER HEIGHT / LINGTH ADJUSTMENT INSTRUCTIONS

Anno. 1
註1

Remove heightened spacer for a thin short battery
薄型短電池請移除增高墊片




Add heightened spacer for a general short battery
一般型短電池請加裝增高墊片

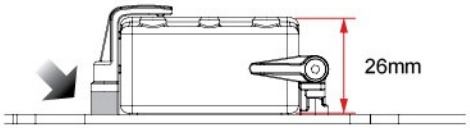


Anno. 2
註2

Remove 5×7×1.5 spacer for a short battery within 93.5mm length
短型電池長度93.5mm以下請移除5×7×1.5墊片

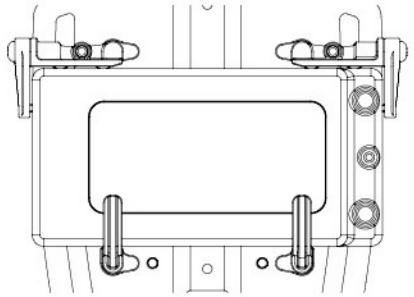


Add 5×7×1.5 spacer for a short battery above 93.5mm length
短型電池長度93.5mm以上請加裝5×7×1.5墊片

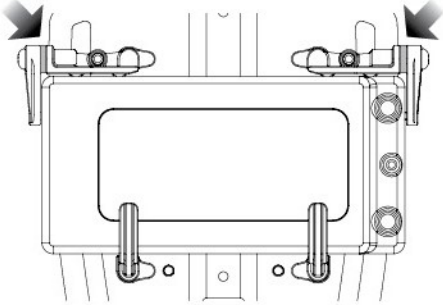

PARTS BAG 10 ◄ BATTERY MOUNT
電池座

STEP 1 Attaching Battery
安裝電池

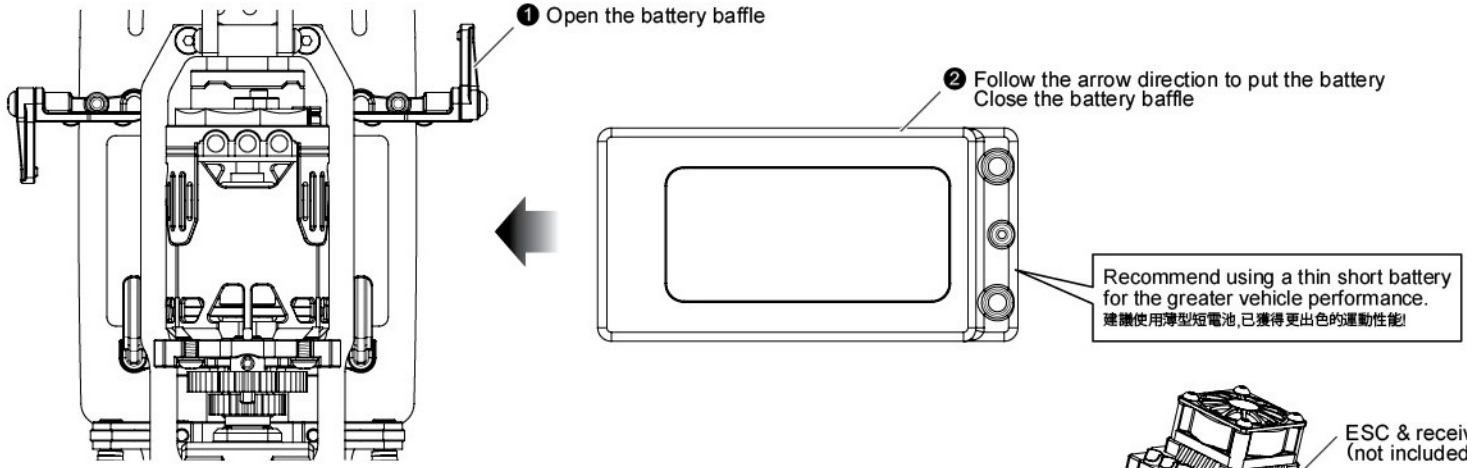

PARTS ◄ WHEELS
輪胎



Flange nut M4 ×4
凸緣螺帽M4

Bag 8




Wheel hub spacer 1.0 ×2
輪座墊片 1.0


Bag 8




※NOT including.
Please refer to MST website for the wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]

STEP 1 Attaching wheels / ESC / Gyro
安裝輪胎 / ESC / 陀螺儀

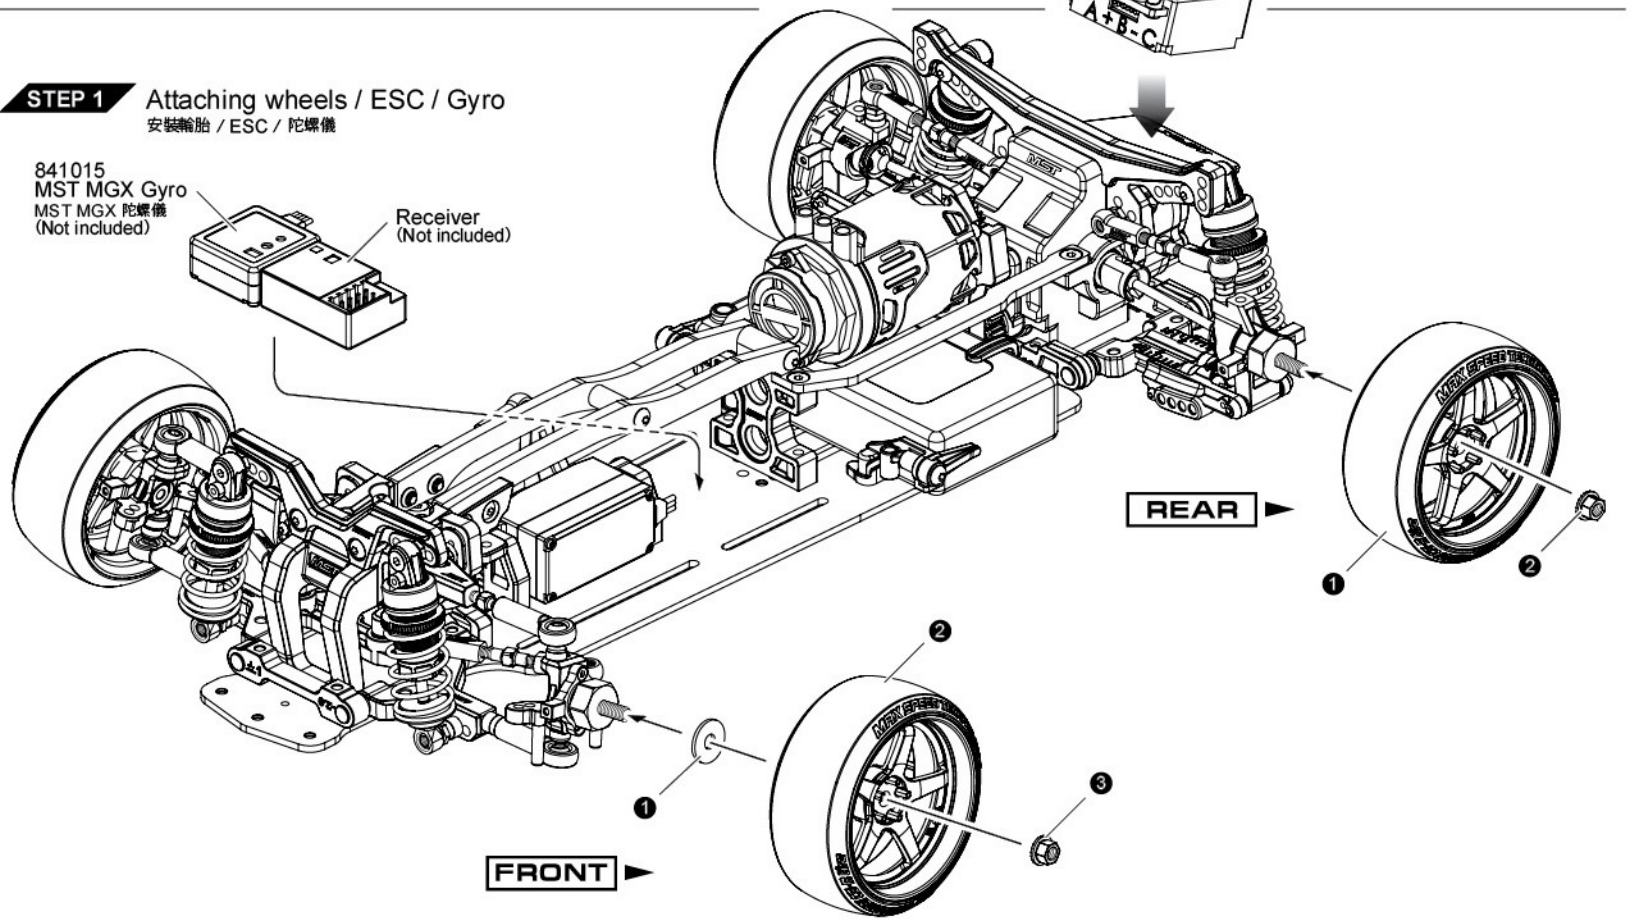


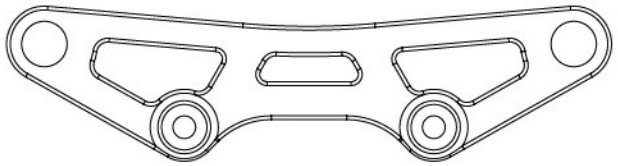


Bumper support ×1
防撞板上蓋

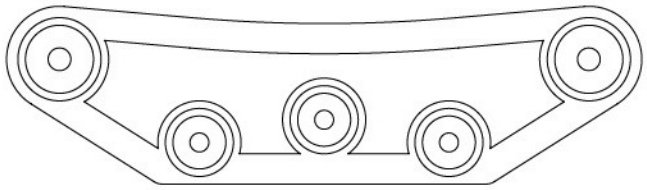


Bumper mount ×1
防撞板下座




Rear body mount ×2
後車殼支柱



Front body mount ×2
前車殼支柱



Body mount cover M ×2
支柱套 M



Body mount cover L ×2
支柱套 L



M3×10 screw ×2
圓頭螺絲



M3×8 screw ×2
圓頭螺絲



M3×8 screw ×3
沉頭螺絲




M3×10 screw ×2
沉頭螺絲




M2×8 screw ×4
圓頭螺絲

STEP 1 Attaching body mounts
安裝車殼固定座

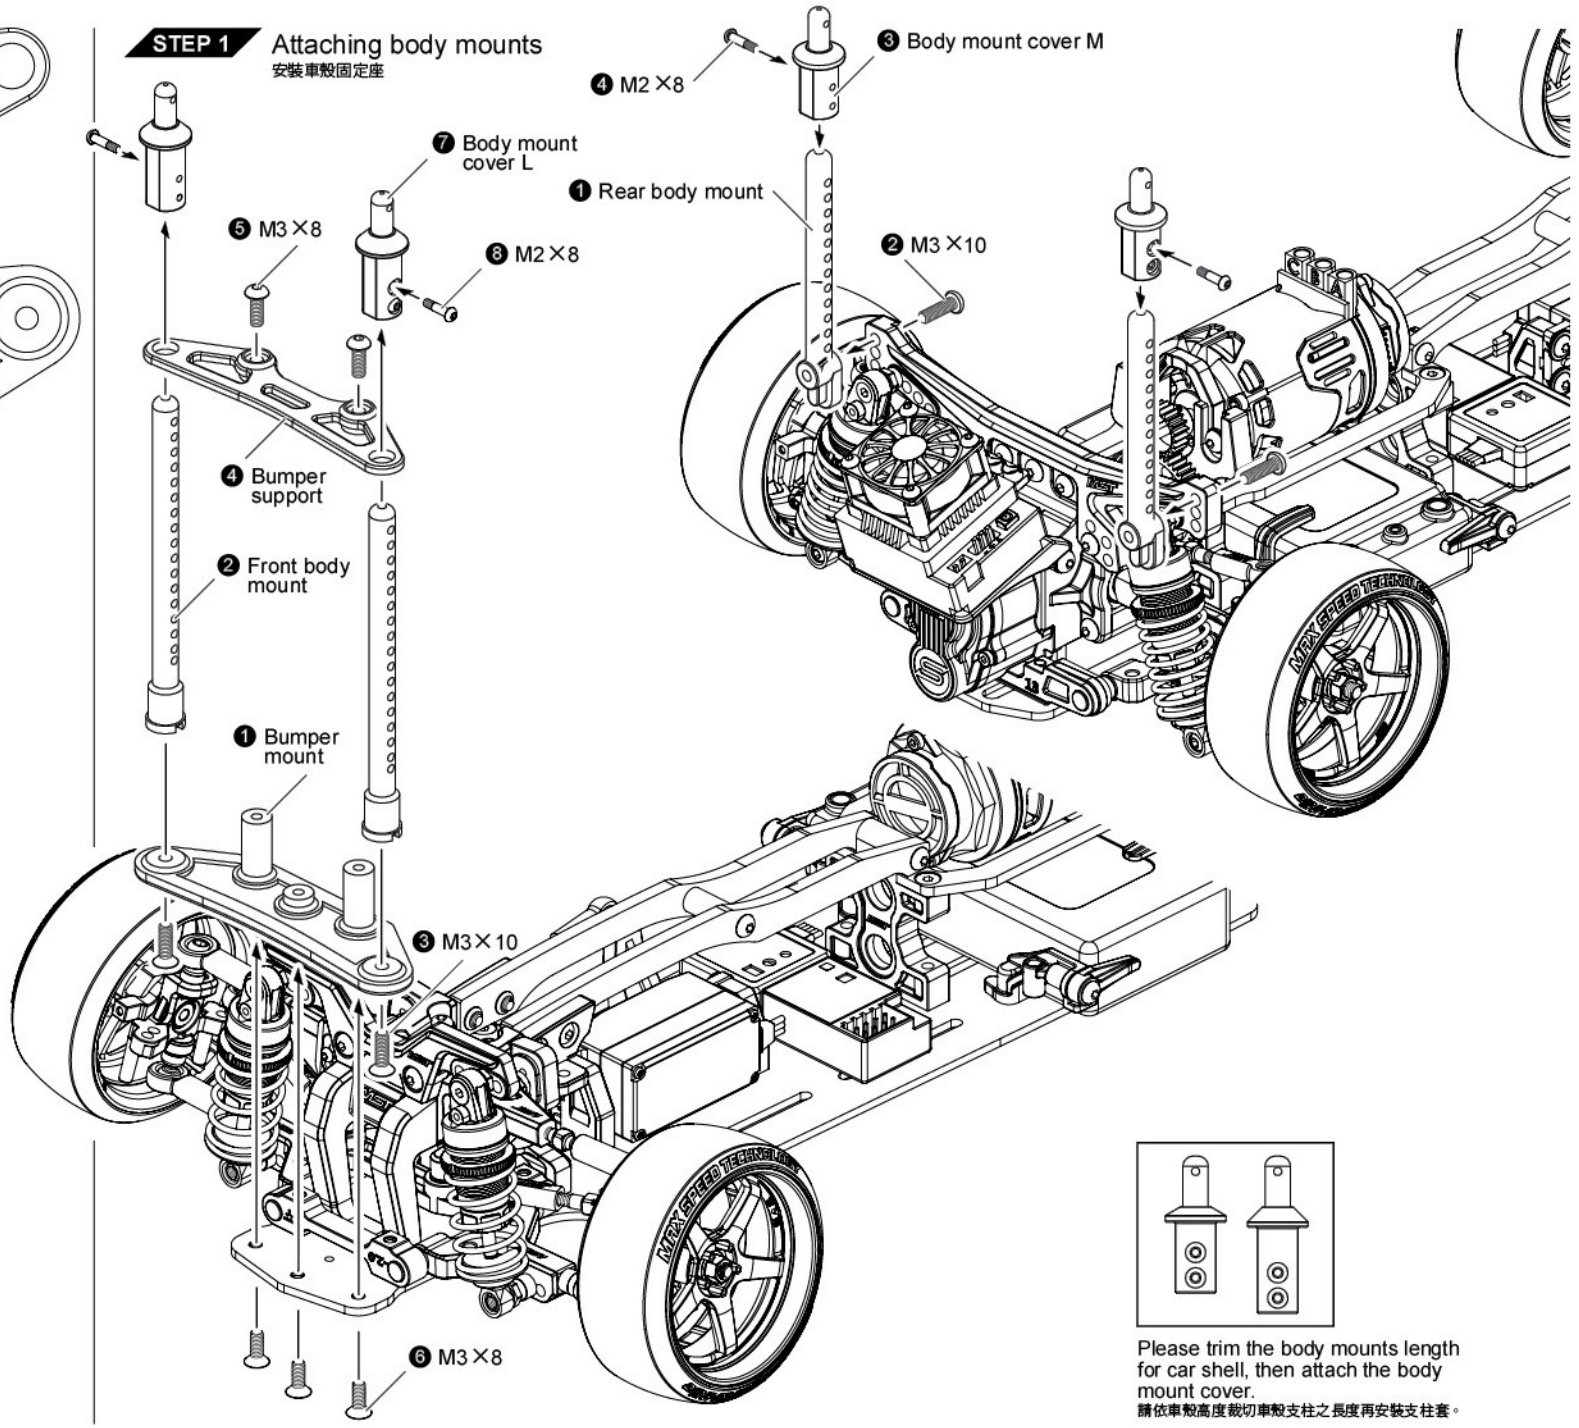



Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。

STEP 1 Front upper arm setting
前上擺臂設定

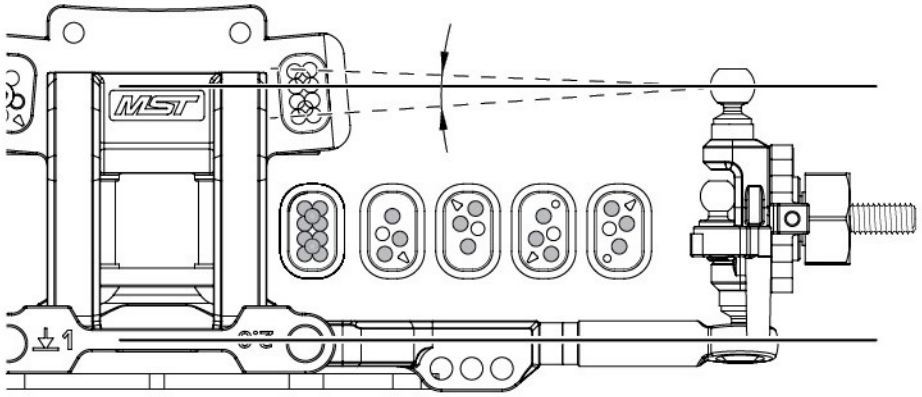

STEP 2 Steering setting
轉向設定

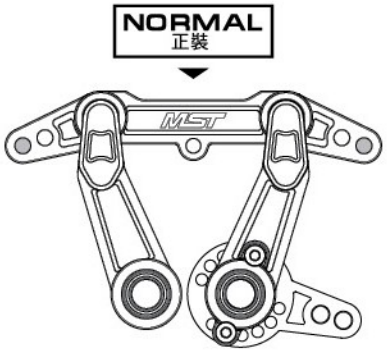

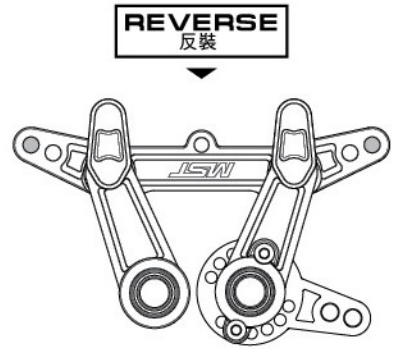

Shorten the steering arm stroke (Shorter EPA stroke)
縮短轉向搖臂行程 (EPA行程較短)


The parallel time of the two rounds at the beginning of the steering movement is longer and the end of the increase in the Ackerman angle is shorter.


轉向運動初期兩輪平行時間較長，進入末期加大阿克曼角時間較短。


Extend the steering arm stroke (Longer EPA stroke)
延長轉向搖臂行程 (EPA行程較長)


The parallel time of the two rounds at the beginning of the steering movement is shorter and the end of the increase in the Ackerman angle is longer.

轉向運動初期兩輪平行時間較短，進入末期加大阿克曼角時間較長。

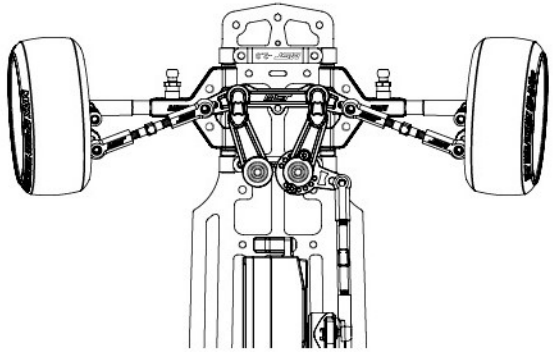


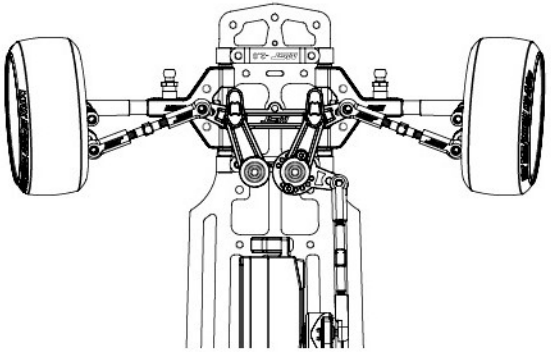

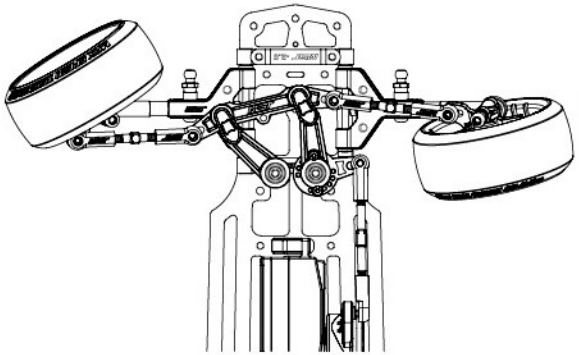

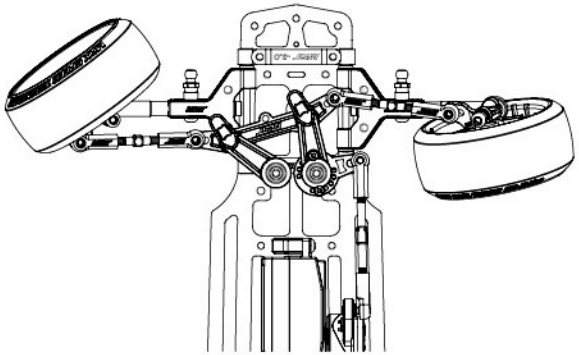

STEP 3 Rear caster angle setting
後傾角設定

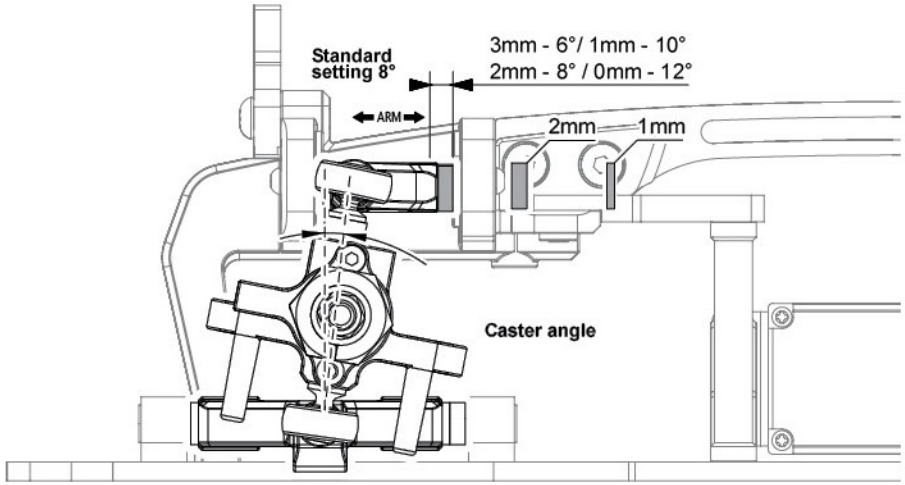

MRX S PRO


1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

SETUP SHEET
ORIGINAL SETTING


DATE : _____ SURFACE : Plastic tiles

TRACK : MST Station NOTE : _____

Caster
- ☐ 6°
- ■ 8°
- ☐ 10°
- ☐ 12°

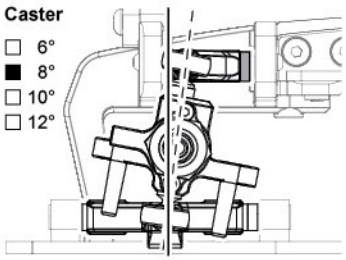

Steering

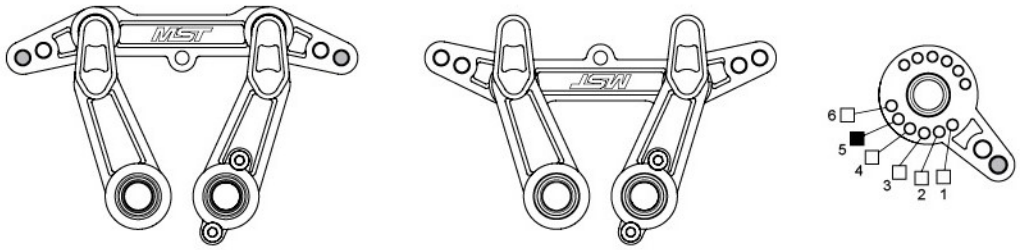


FRONT / REAR

FRONT
Tire: Silver
Wheel: GT
Offset: +5




REAR
Tire: Silver
Wheel: GT
Offset: +5

Front upright

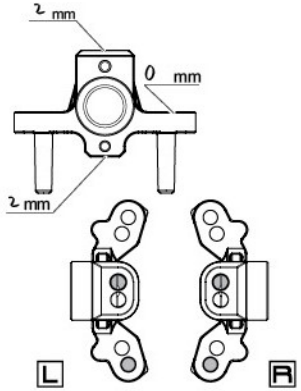

Front suspension


Camber: 7.5°
Toe-out: 3.6

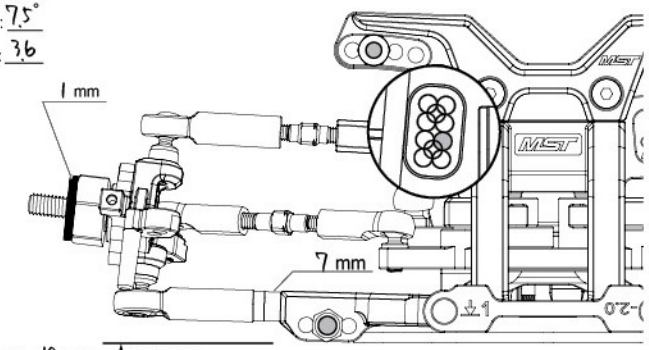

Ride height: 10 mm GROUND


Rear suspension

Camber: 2.5
Toe-in: 1

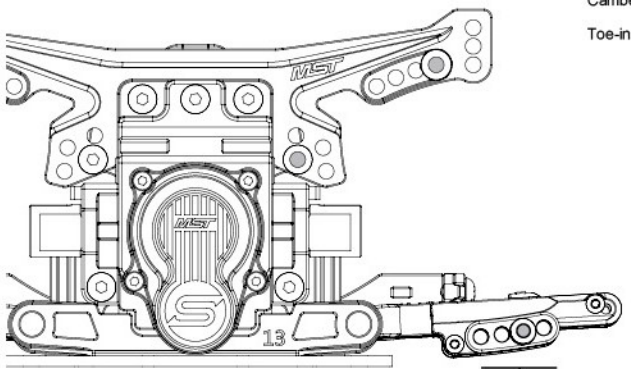


GROUND Ride height: 4 mm


Rear upright

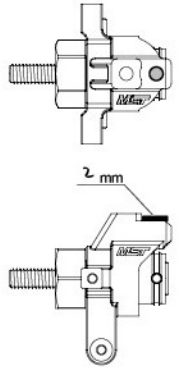

Front
Suspension mount
Rollcenter

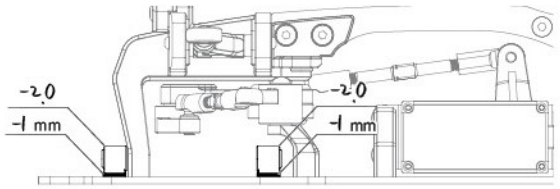


Rear diff

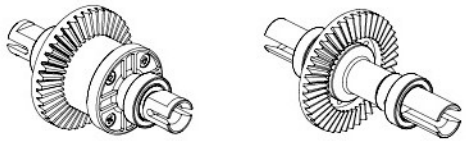


■ Gear diff.
Diff oil #3000

☐ Ball diff.

Rear
Suspension mount
Rollcenter

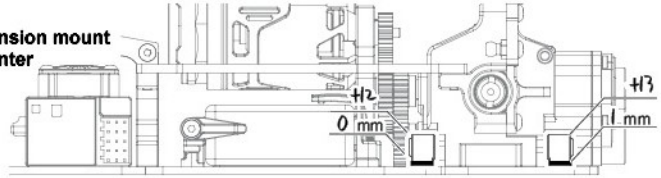

Front damper

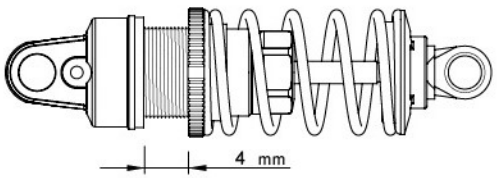

Shock oil: #10
Spring: 31 mm Ø1.1
Spring color: Red
Piston: Ø1.2 mm
Piston hole: 3

※FORMULA
終傳比計算式


Spur Gear 48T ÷ Pinion Gear × Gear A ÷ Gear B × Tail Gear A ÷ Tail Gear B × Big Bevel Gear ÷ Small Bevel Gear = Transmission ratio
大直齒 48T ÷ 馬達齒 × 齒輪 A ÷ 齒輪 B × 尾齒 A ÷ 尾齒 B × 大傘齒 ÷ 小傘齒 = 終傳

48T ÷ (22T) × 30T ÷ 28T × (38T) ÷ (19T) × (42T) ÷ (11T) = (14.38)

Motor & ESC: _____ **Battery:** _____

Transceiver: _____ **Gyro:** _____

Rear damper

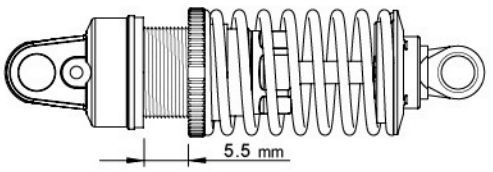

Shock oil: #10
Spring: 31 mm Ø1.1
Spring color: Purple-Green
Piston: Ø1.2 mm
Piston hole: 3

※ Please download the blank setup sheet at [www.rc-mst.com].

PARTS

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK



M2X3 screw ×4
圓頭螺絲
110082



M2×8 screw ×4
圓頭螺絲(半牙)
110045



M2×4 screw ×8
圓頭螺絲
110004



M2×8 screw ×6
圓頭螺絲
110063



M3X20 Screw ×4
圓頭螺絲
110088



M3×8 screw ×17
圓頭螺絲
110002



M3×10 screw ×14
圓頭螺絲
110026



M3×12 screw ×2
圓頭螺絲
110029



M3×14 screw ×4
圓頭螺絲
110061



M3×16 screw ×2
圓頭螺絲
110086



M3X8 screw ×4
圓頭螺絲(帶墊片)
110120



4.8 Ball connector ×5
外六角球頭
210161



4.8 Ball connector L ×6
外六角球頭(長)
210344



4.8×4.5 Ball connector ×7
球頭螺絲
310001



5.8×6 Ball connector ×4
球頭螺絲
210625



M3×2.6 screw ×2
止付螺絲
110060



M3×12 screw ×2
止付螺絲
110056



M2×8 Taping screw ×8
自攻沉頭螺絲
110058



M2X6 Screw ×2
沉頭螺絲
110042



M3×8 screw ×35
沉頭螺絲
110005



M3×10 screw ×2
沉頭螺絲
110052




M3×12 Screw ×2
沉頭螺絲
110043




M3×14 Screw ×2
沉頭螺絲
110081



M3×20 Screw ×2
沉頭螺絲
110101




2WD Axle ×2
二驅輪軸
820095



Wheel axle ×2
萬向接杯
310065



M2X8 Screw ×4
有頭螺絲
110027



M3×40 Screw ×2
有頭螺絲(半牙)
110091



Driven shaft ×1
傳動軸
310123



1.5×7.8 Shaft ×5
插銷
110059



1.6×9 Shaft ×1
插銷
110071



2×9.8 Shaft ×4
插銷
110017



2×9.8 Shaft ×2
插銷
110046



2X11.8 Shaft ×1
插銷
110019



2×28 Shaft ×2
插銷
310103



2.5×46 Arm shaft ×4
擺臂插銷
310048



2X22 Shaft ×2
插銷
310047



Cross joint ×2
連接軸
820030



M3×25 Steel reinforced turnbuckle ×2
鋼製強化可調拉桿
810029



M3×28 Alum. turnbuckle (black) ×4
鋁製可調拉桿(黑)
810009BK

M3×44 Alum. turnbuckle (black) ×1
鋁製可調拉桿(黑)
810013BK

2.5×9×0.1 Spacer ×4
墊片
310040

3×6×0.5 Spacer ×6
墊片
110047

3×8×0.5 Spacer ×1
墊片
110048

Wheel nut m4 ×4
輪框螺帽
820074

E-Clip 3.0 ×6
E扣 3.0
110070

R-clip 5.0 ×6
R-銷 5.0
820075

Main shaft ×1
主齒軸
310124

Bevel gear diff O-ring ×1
傘差O環
130024

Bevel gear shaft ×1
傘齒軸
310125

Bevel gear diff. joint set ×1
傘插接杯組
210271

Steel CVD universal shaft 38.5 (40°) ×2
鋼製CVD傳動軸 38.5 (40°)
210267

4×6×0.3 Spacer ×2
墊片
820017

4×14×0.1 Spacer ×2
墊片
310039

5X7X0.1 Spacer ×2
墊片
820018

5×7×0.3 Spacer ×2
墊片
820020

10×12×0.3 Spacer ×2
墊片
820024

3×6 Ball bearing ×4
培林
120005

4×8×3 Ball bearing ×3
培林
120013

5×8 Ball bearing ×8
培林
120003


4×10 Ball bearing ×2
培林
120018

5×10 Ball bearing ×6
培林
120002


8×14 Ball bearing ×1
培林
120007


10×15 Ball bearing ×2
培林
120001

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

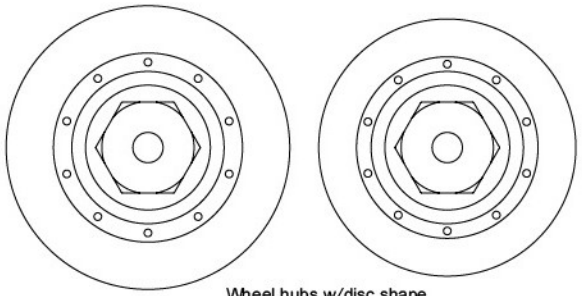

Wheel hubs w/disc shape (large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

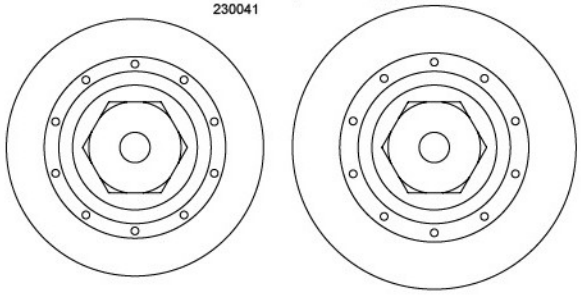


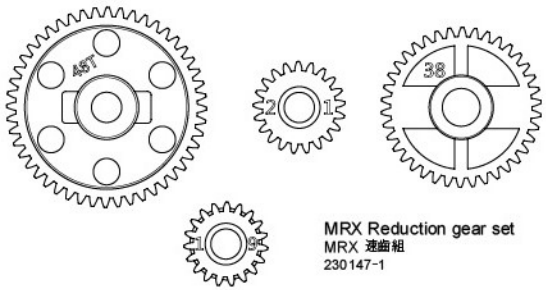


MRX Reduction gear set
MRX 速齒組
230147-1




FXX Reduction gear set
FXX 速齒組
210080

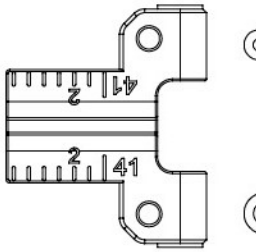

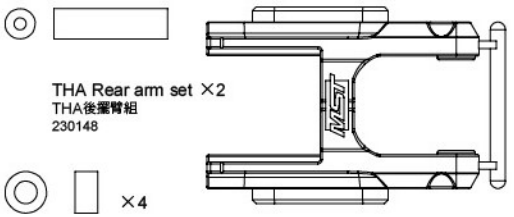


THA Rear arm set ×2
THA後擺臂組
230148

×4

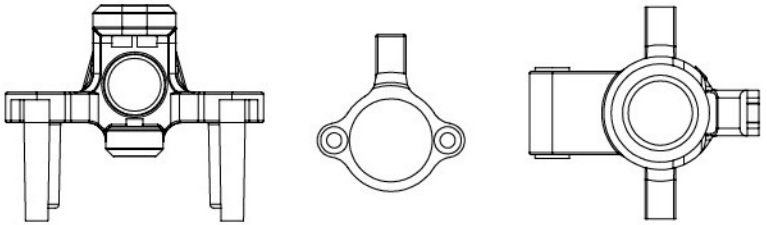


ATK V2 Front wheel hubs & THA rear hubs ×2
ATK V2 前輪座組 & THA 後輪座
230153



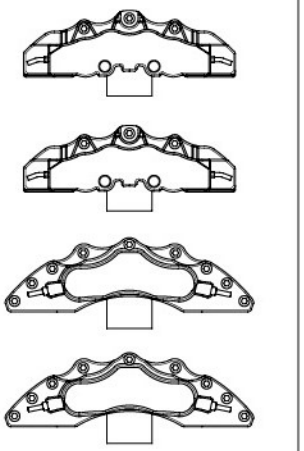

Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

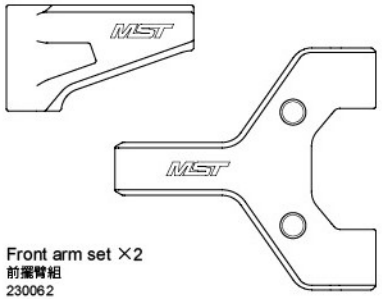

Front arm set ×2
前擺臂組
230062




×1




×1




×2

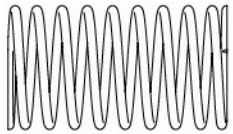

Hard coil spring 31mm ×2 (red)
硬避震彈簧 31mm (紅)
820103

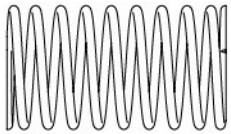


Soft coil spring 31mm ×2 (purple-green)
軟避震彈簧 31mm (紫綠)
820104




Damper cylinder ×4
避震筒身
210071




Piston rod ×4
避震軸心
310008

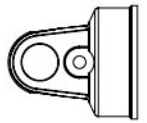

Cylinder cap ×4
避震器上蓋
210057




Piston ×4
避震活塞
210235




Damper adjuster ×4
避震器拉桿
820079




Rod guide cap ×4
避震器下蓋
210057



10.8×0.9 O-ring ×4
O環
130032

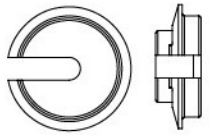

Damper retainer ×4
避震器彈簧座
820079



12×1 O-ring ×4
O環
130049



Oil seal ×4
避震器氣室
130004



Spring retainer (red) ×4
避震器調整環 (紅)
310106R



Rod guide ×4
避震器下蓋墊片
210235



E-clip ×10
E形扣
110013




M3×4 screw ×4
沉頭螺絲
110099




Damper O-ring P3 ×4
避震器O環
130059


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

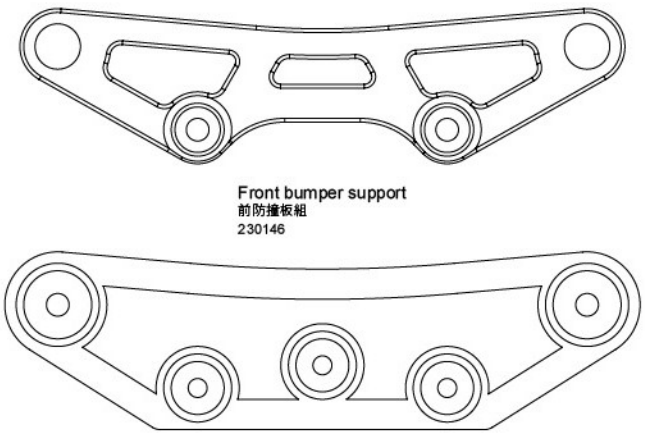


Front bumper support
前防撞板組
230146

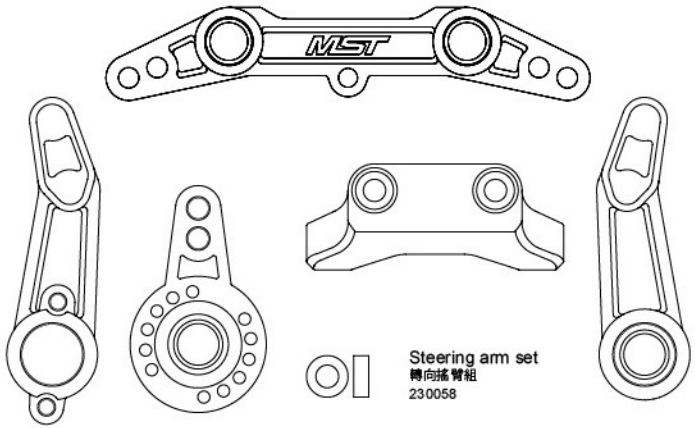


Steering arm set
轉向搖臂組
230058

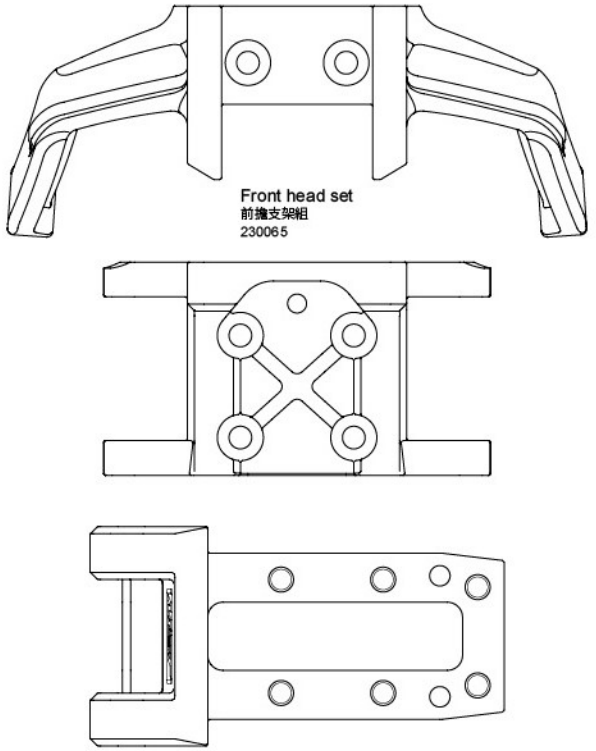


Front head set
前擋支架組
230065

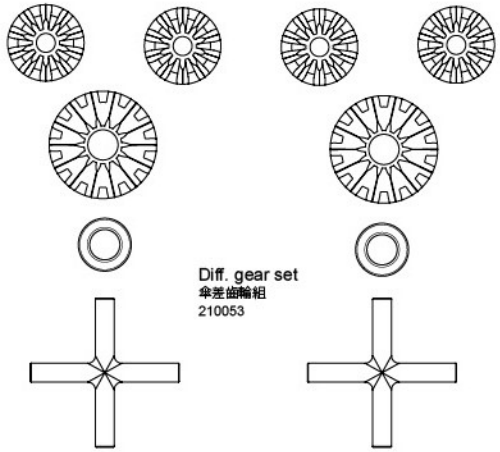


Diff. gear set
傘差齒輪組
210053

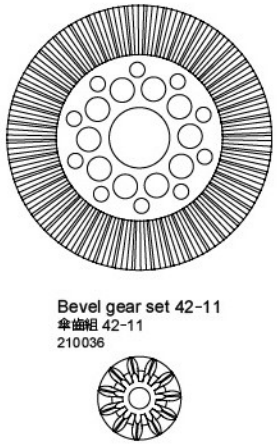

Bevel gear set 42-11
傘齒組 42-11
210036

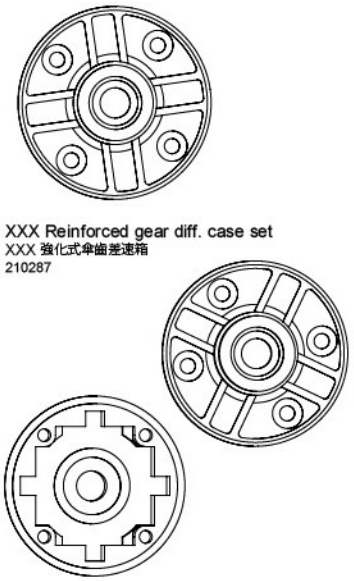


XXX Reinforced gear diff. case set
XXX 強化式傘齒差速箱
210287

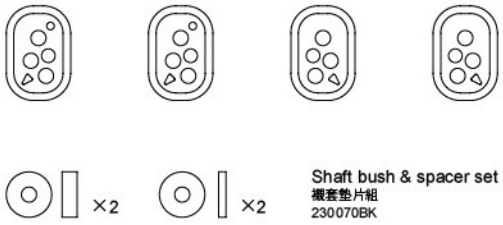


×2 ×2

Shaft bush & spacer set
襯套墊片組
230070BK

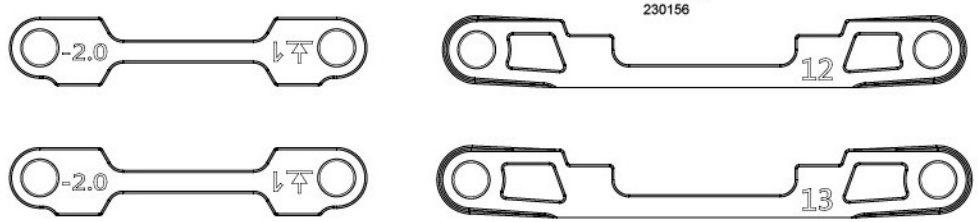


Lower suspension mount set
下擺臂座組
230156

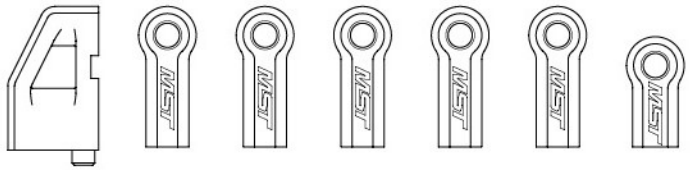


4.8 Rod ends set (M/S) ×2
4.8 拉桿頭組 (M/S)
230067


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

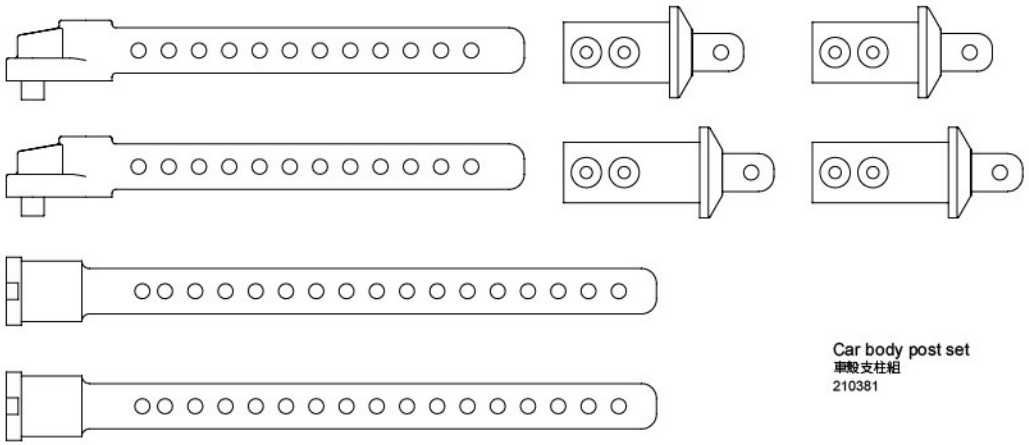

Car body post set
車殼支柱組
210381

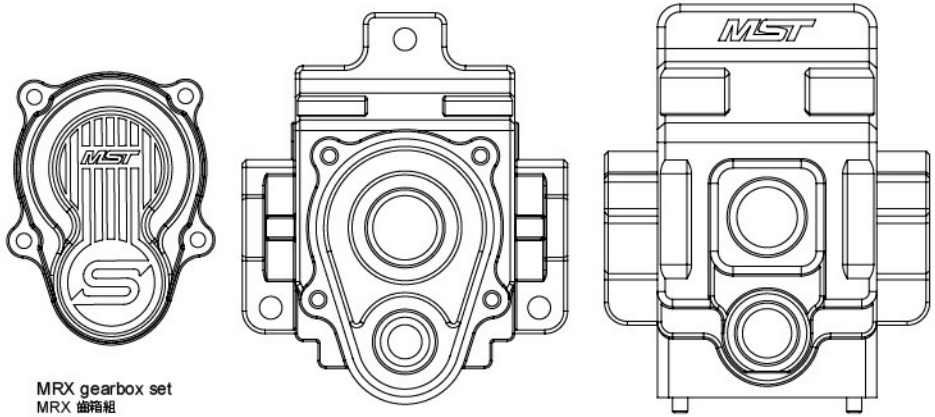


MRX gearbox set
MRX 齒箱組
230154

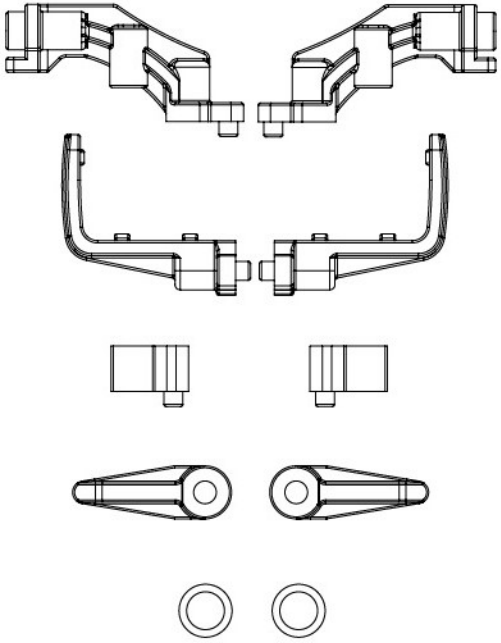

Quick-release battery mount
快拆式電池座組
230145





PVC Deck protective film ×2
PVC 底盤防刮貼
820152

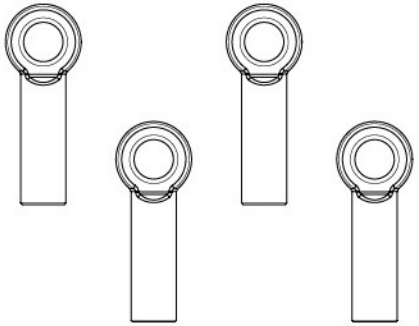

5.8×26 Reinforced adjuster set
強化拉桿頭組
210031


MRX motor mount
MRX 馬達座組
230157

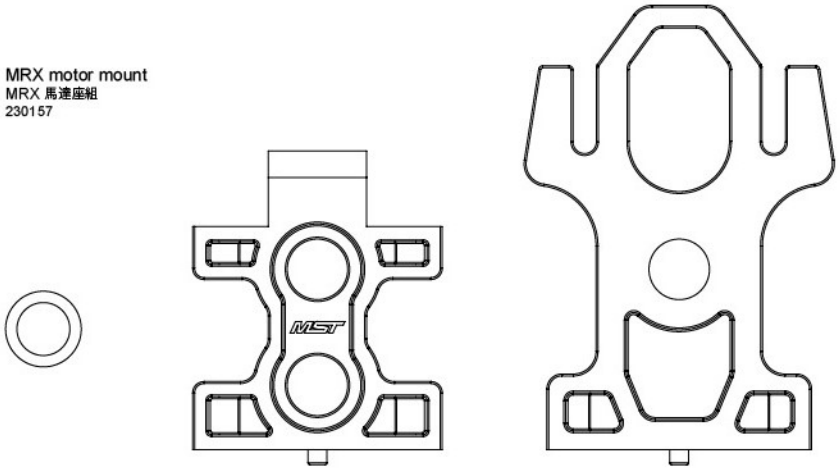

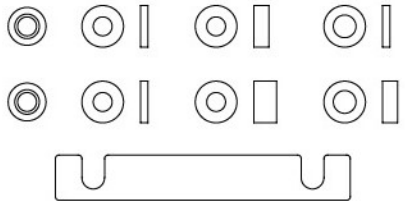


Suspension ball & spacer set ×4
插銷球頭 & 墊片組
230159


Servo horn set (long) (23T/25T)
伺服機舵片組-長 (23T/25T)
210033

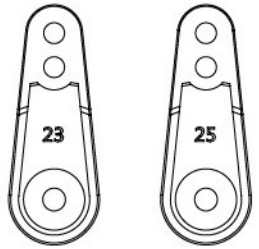



Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

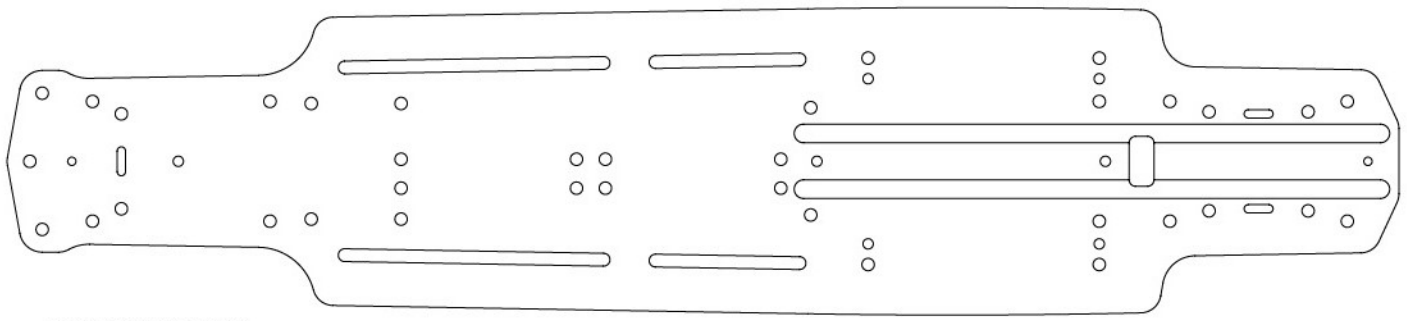


MRX FRP lower deck 2.0
MRX FRP 底盤 2.0
210678

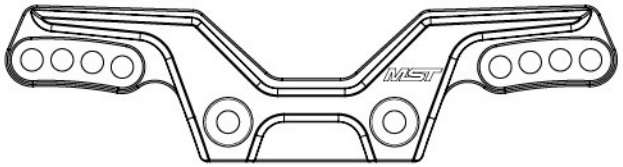

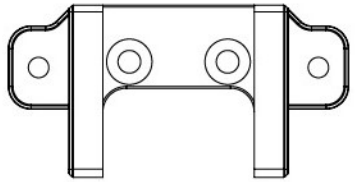


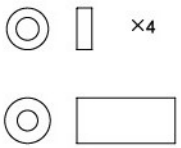


MRX damper stay set
MRX 避震架組
230155

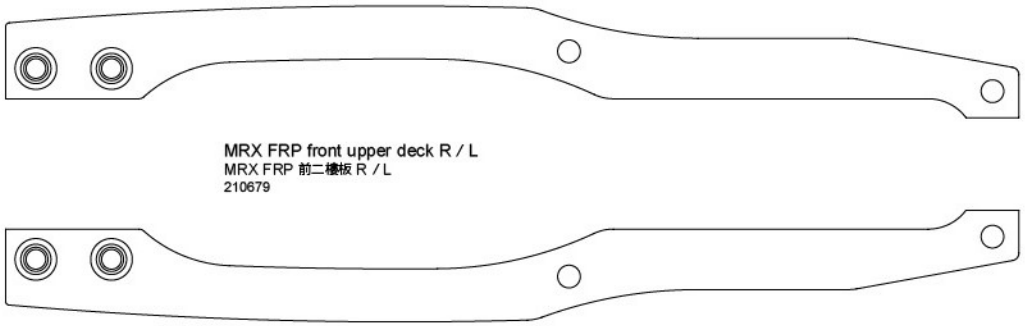

MRX FRP front upper deck R / L
MRX FRP 前二樓板 R / L
210679

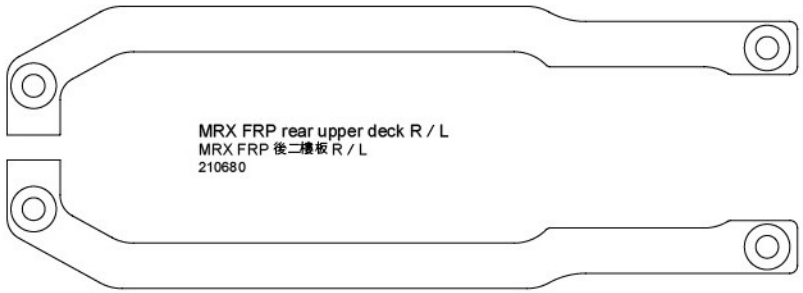

MRX FRP rear upper deck R / L
MRX FRP 後二樓板 R / L
210680

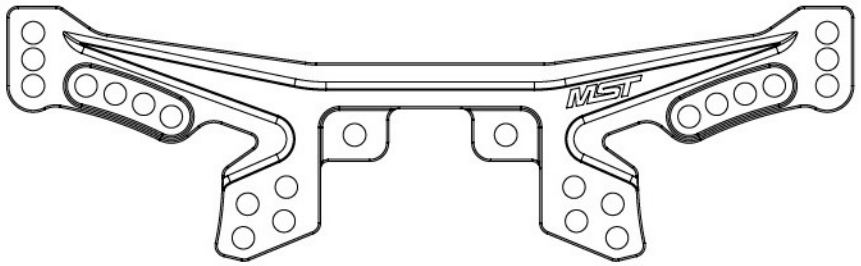

MRX rear damper stay & brace
MRX 後避震架 & 後背座
230158



PARTS CODE

110002	Round head screw M3×8 (10)	110088	Round head screw M3×20 (6)	210287	XXX Reinforced gear diff. case set	310008	Piston rod (4)
110004	Round head screw M2×4 (6)	110091	Cap screw M3×40 (6)	210344	Ball connector nut L 4.8 (4)	310039	Spacer 4×14×0.1 (8)
110005	Countersunk screw M3×8 (10)	110099	Countersunk screw M3×4 (10)	210381	Car body post set	310040	Spacer 2.5×9×0.1 (8)
110013	E-clip 2.0 (10)	110101	Countersunk screw M3×20 (6)	210510CR	Enlarged brake calipers (red) (4)	310047	Arm shaft 2.0×22 (2)
110017	Shaft 2×9.8 (10)	110120	Round head screw w/washer M3×8 (6)	210625	Ball connector L 5.8×6 (4)	310048	Arm shaft 2.5×46 (4)
110019	Shaft 2×11.8 (5)	120001	Ball bearing 10×15 (4)	210678	MRX FRP lower deck 2.0	310065	Wheel axle (2)
110026	Round head screw M3×10 (10)	120002	Ball bearing 5×10 (4)	210679	MRX FRP front upper deck	310103	Arm shaft 2×28 (2)
110027	Cap screw M2×8 (6)	120003	Ball bearing 5×8 (4)	210680	MRX FRP rear upper deck	310106BK	Spring retainer (black) (2)
110029	Round head screw M3×12 (6)	120005	Ball bearing 3×6 (4)	210689	MRX steel tail gear 19T	310123	MRX Steel drive gear shaft
110042	Countersunk screw M2×6 (6)	120007	Ball bearing 8×14 (2)	210690	MRX steel tail gear 21T	310124	MRX Speed-change gear shaft
110043	Countersunk screw M3×12 (10)	120013	Ball bearing 4×8×3 (2)	230041	Wheel hubs w/disc shape (large)	310125	MRX Alum. Quick-release gear shaft
110045	Round head screw M2×8 (partial thread) (6)	120018	Ball bearing 4×10×4 (2)	230058	Steering arm set	810009BK	Alum. reinforced turnbuckle 3×28 (black) (2)
		130004	Oil seal (4)	230062	Front arm set		
110046	Shaft 2×9.8 (8)	130024	Bevel gear diff O-ring (5)	230065	Front head set	810013BK	Alum. reinforced turnbuckle 3×44 (black) (2)
110047	Spacer 3×6×0.5 (8)	130032	Damper cap O-ring (10)	230067	4.8 Rod ends set (M/S)		
110048	Spacer 3×8×0.5 (8)	130049	O-ring 12×1 (4)	230070BK	Shaft bush & spacer set	810029	Steel reinforced turnbuckle 3×25 (2)
110052	Countersunk screw M3×10 (10)	130059	High-smooth damper O-ring P3 (white) (10)	230145	Quick-release battery mount	820017	Spacer 4×6×0.3 (8)
110056	Set screw M3×12 (6)	210031	Reinforced adjuster set 5.8×26	230146	Front bumper support	820018	Spacer 5×7×0.1 (8)
110058	Tapping countersunk screw 2×8 (8)	210033	Servo horn set (long) (23T/25T)	230147-1	MRX Reduction gear set	820020	Spacer 5×7×0.3 (8)
110059	Shaft 1.5×7.8 (8)	210036	Bevel gear set 42-11	230148	THA Rear arm set	820024	Spacer 10×12×0.3 (8)
110060	Set screw M3×2.6 (10)	210053	Diff. gear set	230153	ATK V2 Front wheel hubs & THA rear hubs	820030	Cross joint (2)
110061	Round head screw M3×14 (6)	210057	Damper cap set	230154	MRX gearbox set	820074	Wheel nut m4 (4)
110063	Round head screw M2×8 (6)	210071	Damper cylinder (2)	230155	MRX damper stay set	820075	R-clip 5.0 (10)
110070	E-clip 3.0 (10)	210080	FXX Reduction gear set	230156	Lower suspension mount set	820079	Damper plastic maintenance set (2)
110071	Shaft 1.6×9 (10)	210161	Ball connector nut 4.8 (4)	230157	MRX motor mount	820095	AKM 2WD axle (2)
110081	Countersunk screw M3×14 (6)	210235	Piston spacer set	230158	MRX rear damper stay & brace	820103	31mm Hard coil spring set (8)
110082	Round head screw M2×3 (6)	210267	Steel CVD universal shaft 38.5 (40°) (2)	230159	Suspension ball & spacer set	820104	31mm Soft coil spring set (8)
110086	Round head screw M3×16 (6)	210271	Bevel gear diff. joint set	310001	Ball connector 4.8×4.5 (5)	820152	PVC Deck protective film

部品編號

110002	六角半圓頭螺絲 M3×8 (10)	110091	六角有頭螺絲 M3×40 (半牙) (6)	210344	球頭螺帽L 4.8 (4)	310039	墊片 4×14×0.1 (8)
110004	六角半圓頭螺絲 M2×4 (6)	110099	六角沉頭螺絲 M3×4 (10)	210381	車殼支柱組	310040	墊片 2.5×9×0.1 (8)
110005	六角沉頭螺絲 M3×8 (10)	110101	六角沉頭螺絲 M3×20 (6)	210510CR	加大煞車卡鉗 (紅) (4)	310047	擺臂插銷 2.0×22 (2)
110013	E扣 2.0 (10)	110120	六角半圓頭帶墊片螺絲 M3×8 (6)	210625	球頭螺絲 L 5.8×6 (4)	310048	擺臂插銷 2.5×46 (4)
110017	插銷 2×9.8 (10)	120001	培林 10×15 (4)	210678	MRX FRP 底盤 2.0	310065	萬向接杯 (2)
110019	插銷 2×11.8 (5)	120002	培林 5×10 (4)	210679	MRX FRP 前二樓板	310103	擺臂插銷 2×28 (2)
110026	六角半圓頭螺絲 M3×10 (10)	120003	培林 5×8 (4)	210680	MRX FRP 後二樓板	310106BK	避震調整環 (黑) (2)
110027	六角有頭螺絲 M2×8 (6)	120005	培林 3×6 (4)	210689	MRX 鋼製尾齒 19T	310123	MRX 鋼製驅動齒軸
110029	六角半圓頭螺絲 M3×12 (6)	120007	培林 8×14 (2)	210690	MRX 鋼製尾齒 21T	310124	MRX 鋼製蛋糕齒軸
110042	六角沉頭螺絲 M2×6 (6)	120013	培林 4×8×3 (2)	230041	碟型六角輪座組 (加大型)	310125	MRX 鋁合金快拆傘齒軸
110043	六角沉頭螺絲 M3×12 (10)	120018	培林 4×10×4 (2)	230058	轉向搖臂組	810009BK	鋁合金強化可調拉桿 3×28 (黑) (2)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	130004	避震氣室 (4)	230062	前擺臂組	810013BK	鋁合金強化可調拉桿 3×44 (黑) (2)
110046	插銷 2×9.8 (削溝) (8)	130024	傘差O環 (5)	230065	前擔支架組	810029	鋼製強化可調拉桿 3×25 (2)
110047	墊片 3×6×0.5 (8)	130032	避震上蓋O環 (10)	230067	4.8 拉桿頭組 (M/S)	820017	墊片 4×6×0.3 (8)
110048	墊片 3×8×0.5 (8)	130049	O環 12×1 (4)	230070BK	襯套墊片組	820018	墊片 5×7×0.1 (8)
110052	六角沉頭螺絲 M3×10 (10)	130059	高順暢阻尼器O環 P3 (白)(10)	230145	快拆式電池座組	820020	墊片 5×7×0.3 (8)
110056	六角止付螺絲 M3×12 (6)	210031	強化拉桿頭組 5.8×26	230146	前防撞板組	820024	墊片 10×12×0.3 (8)
110058	自攻十字沉頭螺絲 2×8 (8)	210033	伺服機舵片組-長 (23T/25T)	230147-1	MRX 減速齒組	820030	連接軸 (2)
110059	插銷 1.5×7.8 (8)	210036	傘齒組 42-11	230148	THA後擺臂組	820074	輪框螺帽 M4 (4)
110060	六角止付螺絲 M3×2.6 (10)	210053	傘差齒輪組	230153	ATK V2 前輪座組 & THA 後輪座	820075	R銷 5.0 (10)
110061	六角半圓頭螺絲 M3×14 (6)	210057	避震器上下蓋組	230154	MRX 齒箱組	820079	避震膠件包 (2)
110063	六角半圓頭螺絲 M2×8 (6)	210071	避震器筒身 (2)	230155	MRX 避震架組	820095	AKM 二驅輪軸 (2)
110070	E扣 3.0 (10)	210080	FXX 減速齒組	230156	下擺臂座組	820103	31mm 硬避震彈簧組 (8)
110071	插銷 1.6×9 (10)	210161	球頭螺帽 4.8 (4)	230157	MRX 馬達座組	820104	31mm 軟避震彈簧組 (8)
110081	六角沉頭螺絲 M3×14 (6)	210235	避震器活塞墊片組	230158	MRX 後避震架 & 後背座	820152	PVC 底盤防刮貼
110082	六角半圓頭螺絲 M2×3 (6)	210267	鋼製CVD傳動軸 38.5 (40°) (2)	230159	插銷球頭 & 墊片組		
110086	六角半圓頭螺絲 M3×16 (6)	210271	傘差接杯組	310001	內六角公球頭 4.8×4.5 (5)		
110088	六角半圓頭螺絲 M3×20 (6)	210287	XXX 強化式傘齒差速箱	310008	避震軸心 (4)		

026272