
STEP 3 Attaching rear gear box
安裝後齒箱

225

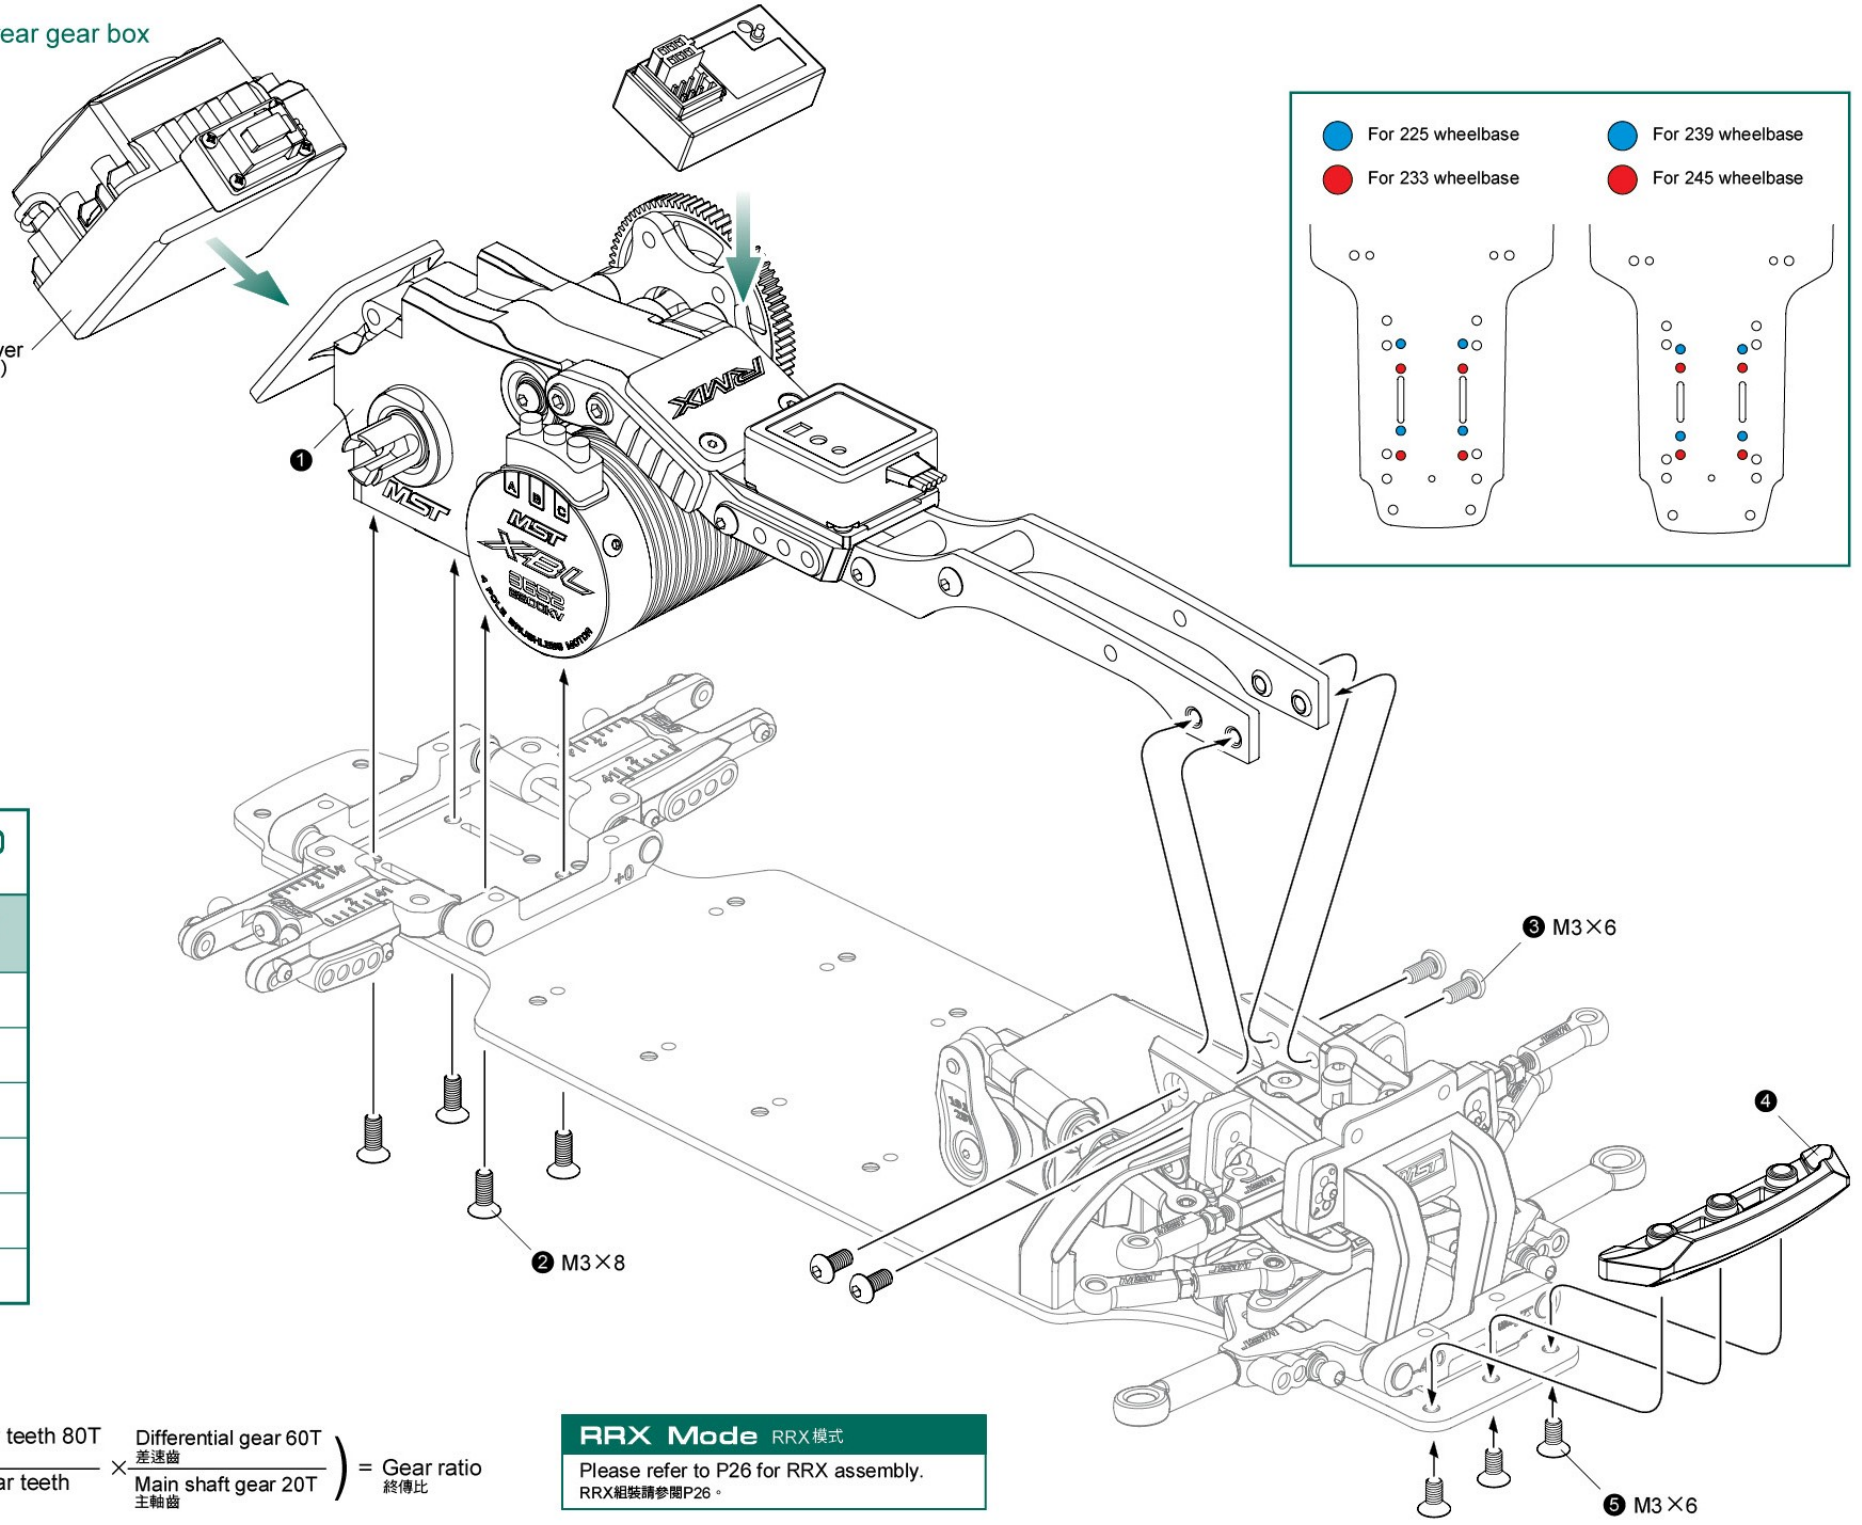

GEAR RATIO
(For **80T** Spur Gear)

Pinion gear teeth	60T/20T <3.00>
22T	10.91
23T	10.43
24T	10
25T	9.6
26T	9.23
27T	8.89

※Adjust for proper space.
請調整適當齒隙。

＊**FORMULA** 計算公式

$$\left(\frac{\text{Spur gear teeth 80T 大直齒}}{\text{Pinion gear teeth 馬達齒}} \times \frac{\text{Differential gear 60T 差速齒}}{\text{Main shaft gear 20T 主軸齒}}\right) = \text{Gear ratio 終傳比}$$

RRX Mode RRX模式

Please refer to P26 for RRX assembly.
RRX組裝請參閱P26。

Rear damper stay ×1
後避震架

Front damper stay ×1
前避震架

Body post brace ×2
支柱補強桿

Front body mount ×2
前車殼支柱

Rear body mount ×2
後車殼支柱

Front body mount stay ×1
前車殼支柱座

Rear body mount stay ×1
後車殼支柱座

4.8 adjuster M ×4
拉桿頭

Body mount comver ×2
支柱套

M2×8 Screw ×2
圓頭螺絲(半牙)

M2×10 Screw ×2
圓頭螺絲


M3×10 screw ×14
圓頭螺絲


M3×14 Screw ×4
圓頭螺絲

4.8 Ball connector ×6
外六角球頭

M3×16 steel turnbuckle ×2
鋼製可調拉桿

STEP 1 Attaching front damper stay
安裝前避震架

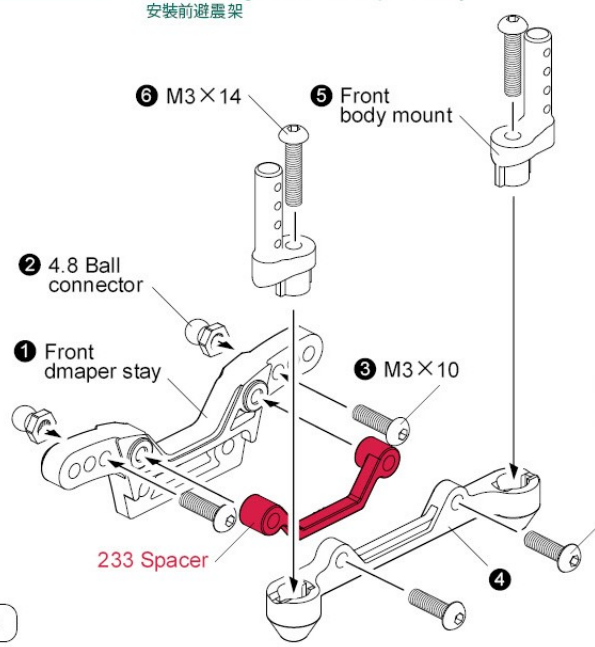

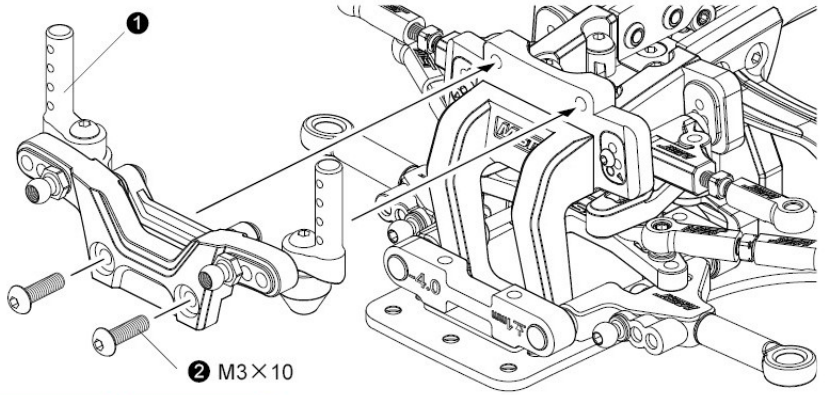



210 225 239 245

❼ M3×10
M3×16
233


STEP 2 Attaching rear damper stay
安裝後避震架


210 225 239 245

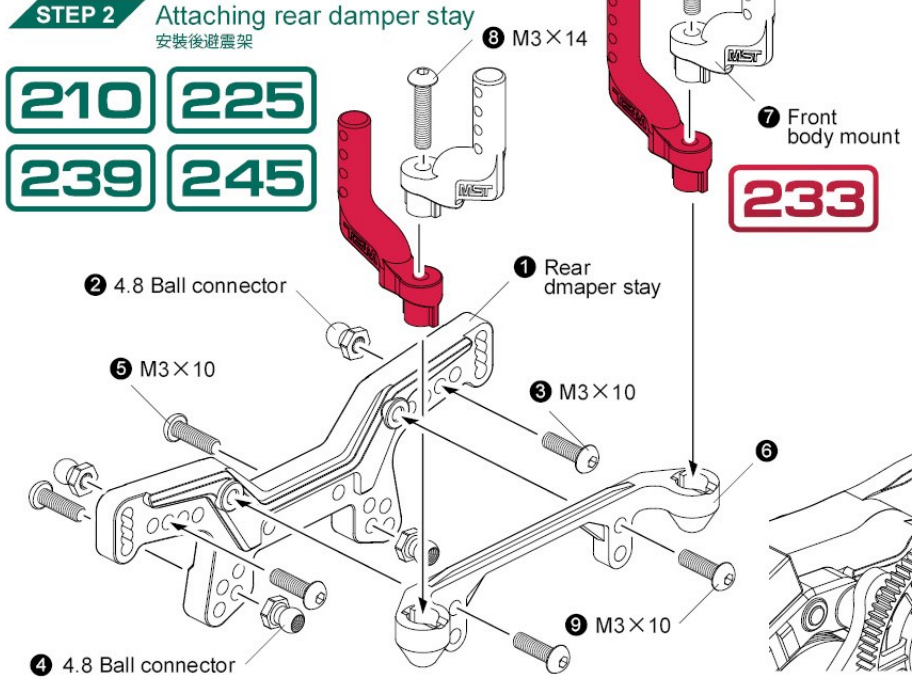

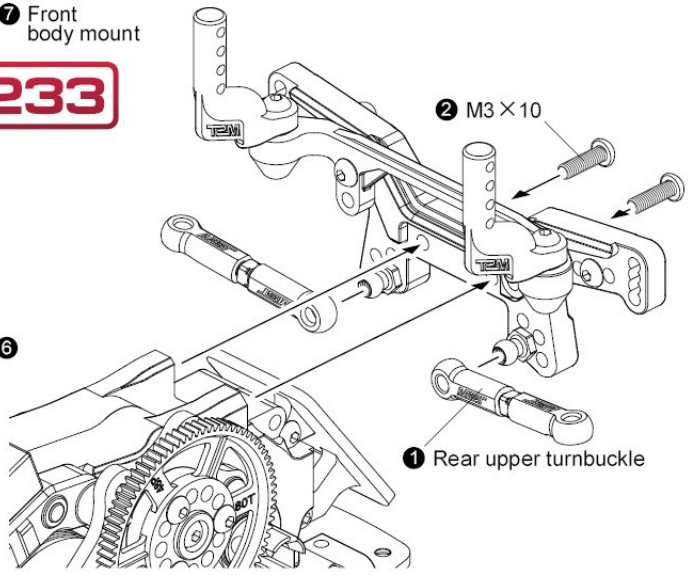


Rear upper turnbuckle assembly
後上拉桿組裝

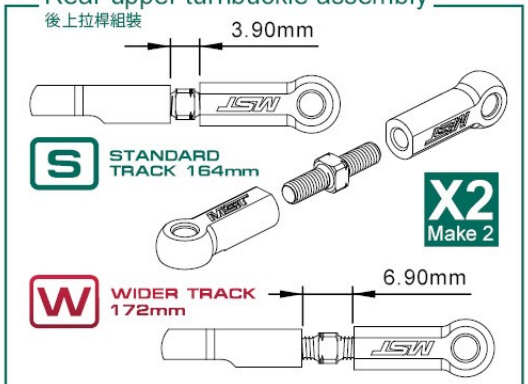

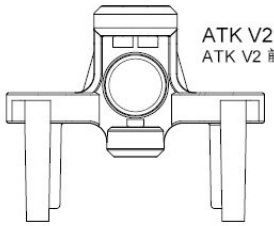


ATK V2 Front wheel hubs ×2
ATK V2 前輪座

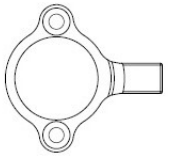


Brake calipers mount ×2
卡鉗座



Brake calipers ×2
剎車卡鉗

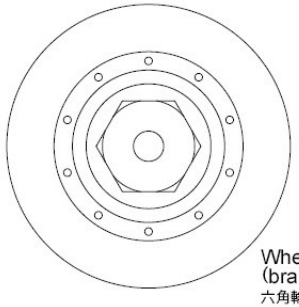

Wheel hubs (large)
(brake disc shaped) ×2
六角輪座(大)(剎車碟型)



2WD Axle ×2
二驅輪軸



5.8×4 Ball connector L ×2
球頭螺絲(長)



4.8×4.5 Ball connector ×4
球頭螺絲



M2×4 screw ×2
圓頭螺絲



M2×6 Screw ×2
沉頭螺絲



2×9.8 Shaft ×2
插銷




5×8 Ball bearing ×4
培林





5×7×0.3 Spacer ×2
墊片

STEP 1 Front axle assembly
前輪座組裝

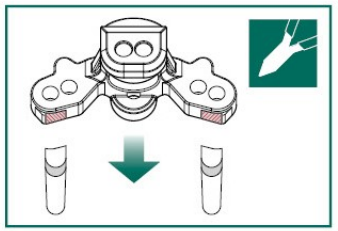


STEP 2 Attaching front axle
安裝前輪座

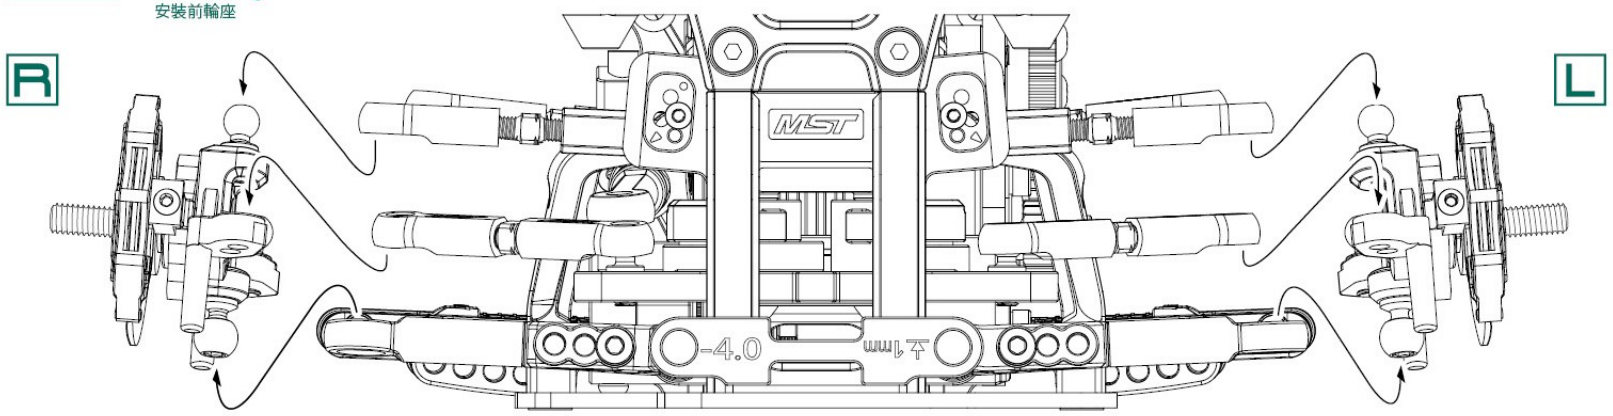


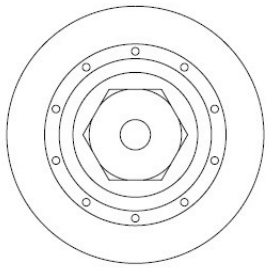

Wheel hubs (small)(brake disc shaped) ×2
六角輪座(小)(剎車碟型)

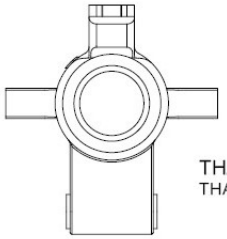

THA rear hubs ×2
THA後輪座



Wheel axle ×2
萬向接杯



Brake calipers ×2
剎車卡鉗



Steel CVD universal shaft 29 ×2
鋼製CVD傳動軸 29



Steel CVD universal shaft 33 ×2
鋼製CVD傳動軸 33



M2×4 screw ×6
圓頭螺絲



M3×2.6 Screw ×2
止付螺絲



Cross joint ×2
連接軸



5×7×0.1 Spacer ×2
墊片

2×22 Shaft ×2
插銷


2×9.8 Shaft ×2
插銷

2×9.8 Shaft ×4
插銷




4.8×4.5 Ball connector ×2
球頭螺絲


STEP 1 Rear axle assembly
後輪座組裝

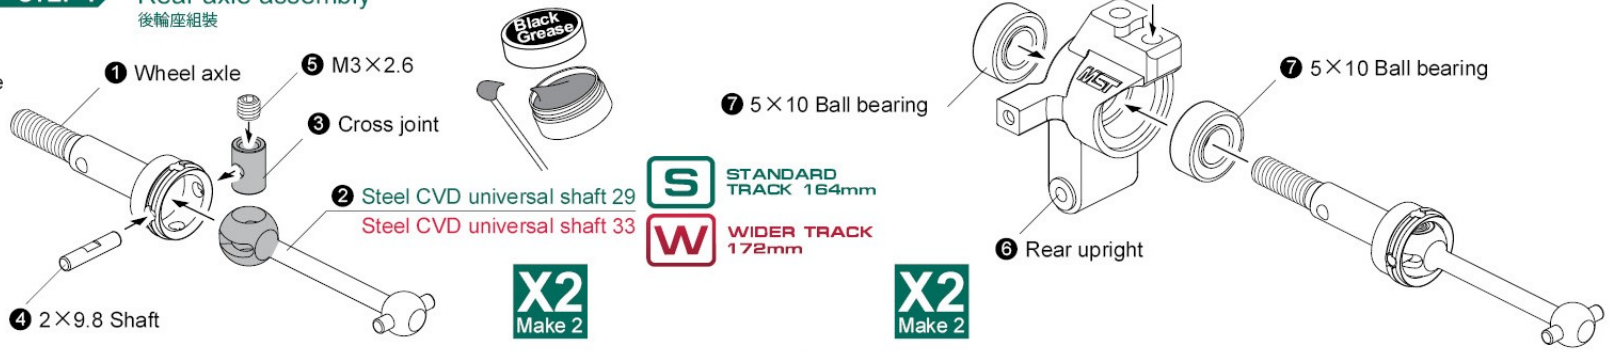


STEP 2 Attaching rear axle
安裝後輪座

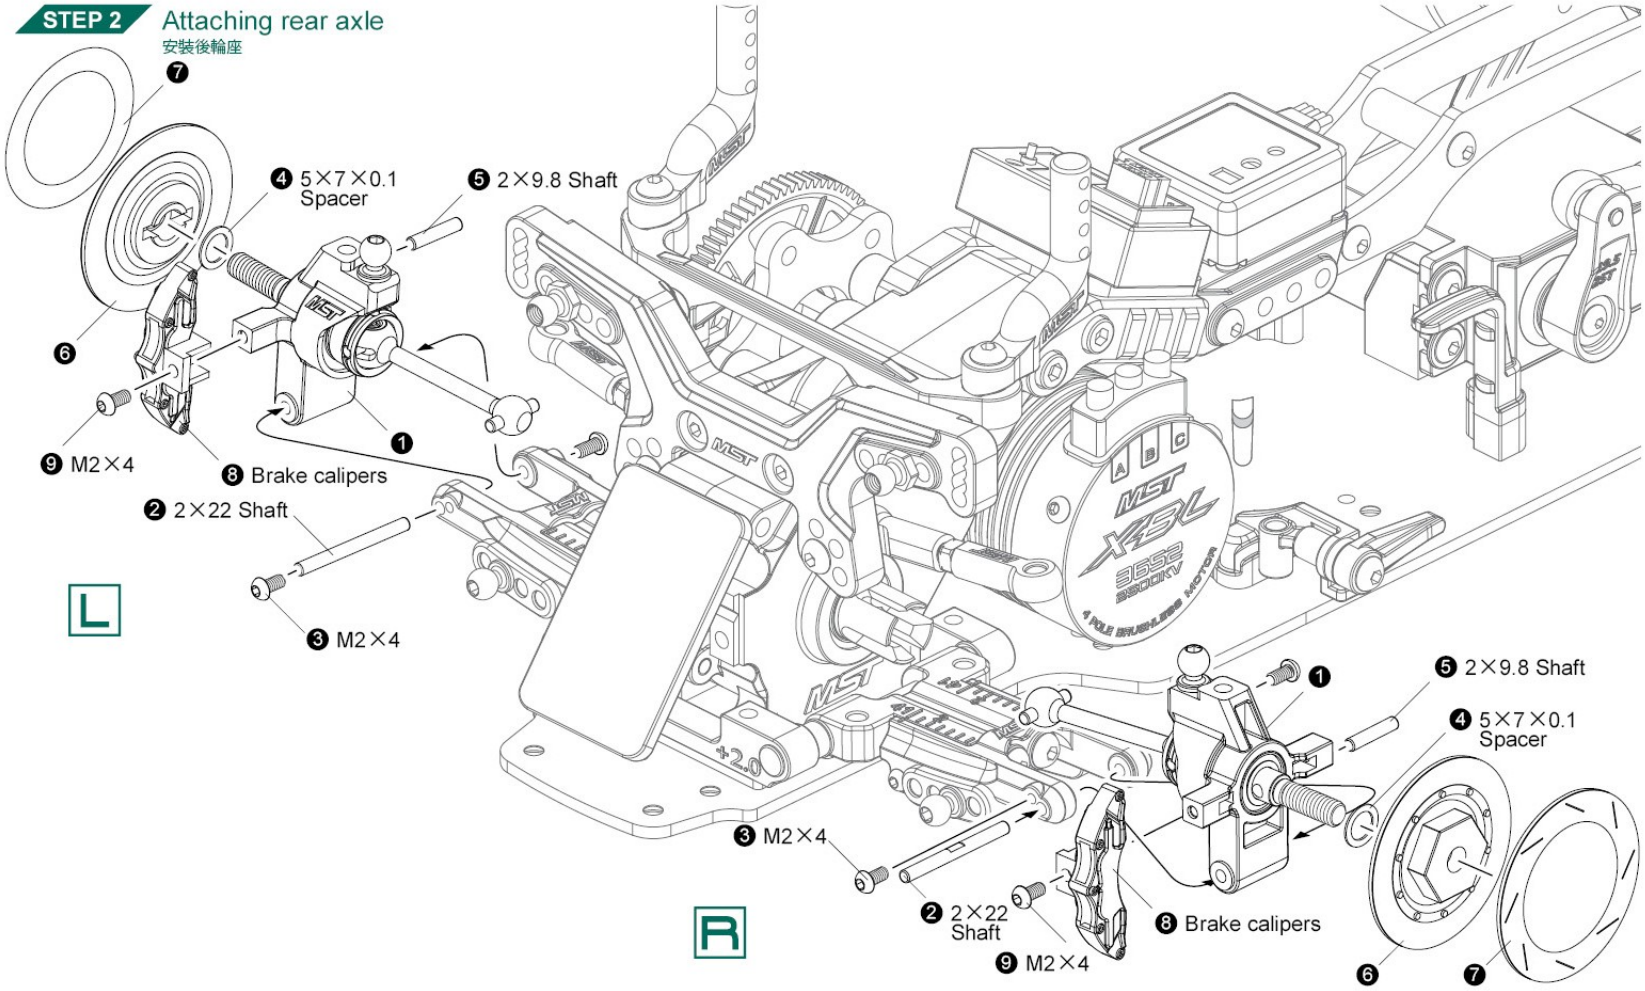


29mm Coil spring set ×2
29mm 避震彈簧組 ×2

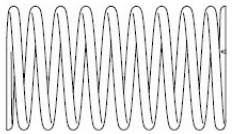


29mm Soft coil spring set ×2
29mm 軟避震彈簧組 ×2

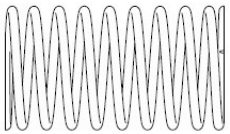

Damper cylinder ×4
避震筒身



Spring retainer (red) ×4
避震器調整環 (紅)

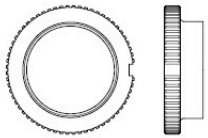


Piston rod ×4
避震軸心



Piston ×4
避震活塞




Cylinder cap ×4
避震器上蓋

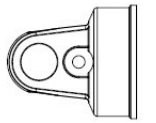

Damper adjuster ×4
避震器拉桿




Rod guide cap ×4
避震器下蓋



10.8×0.9 O-ring ×4
O環




Damper retainer ×4
避震器彈簧座

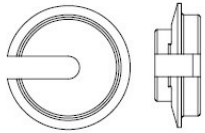

12×1 O-ring ×4
O環



Oil seal ×4
避震器氣室



Damper O-ring P3 ×4
避震器O環



Rod guide ×4
避震器下蓋墊片




E-clip ×10
E形扣




M3×4 screw ×4
沉頭螺絲



STEP 1 Damper assembly
避震器組裝

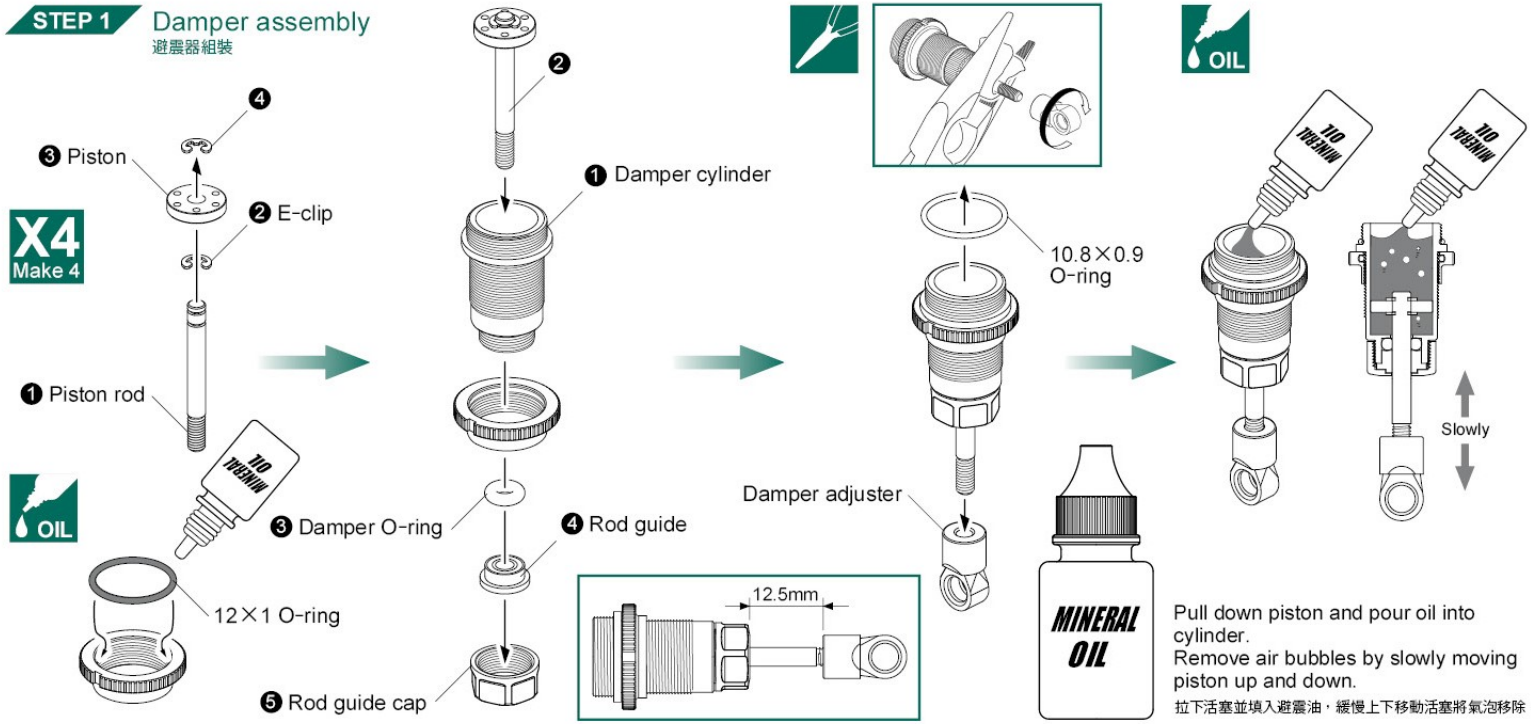


Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

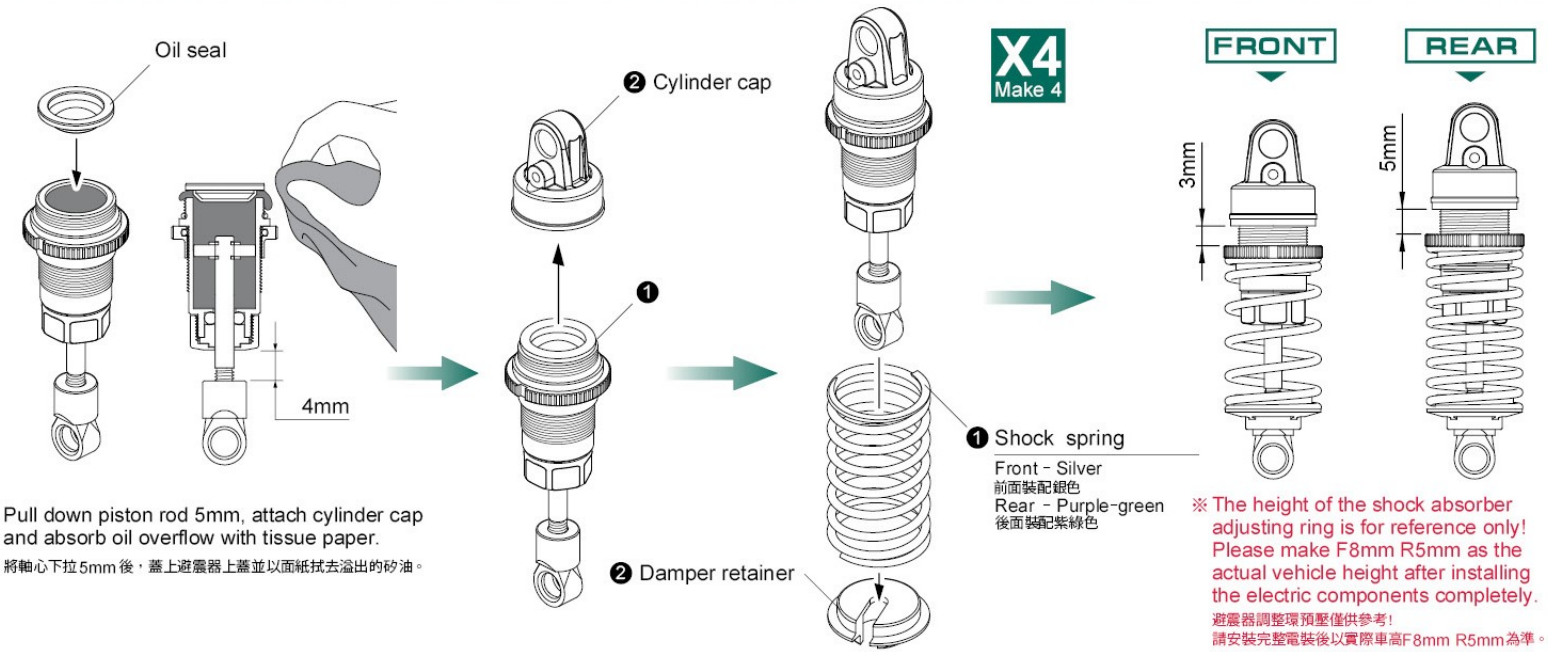


Pull down piston rod 5mm, attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉5mm後，蓋上避震器上蓋並以面紙拭去溢出的矽油。

※ The height of the shock absorber adjusting ring is for reference only! Please make F8mm R5mm as the actual vehicle height after installing the electric components completely.
避震器調整環預墊僅供參考!
請安裝完整電裝後以實際車高F 8mm R5mm為準。


STEP 2 Attaching front damper
安裝前避震器

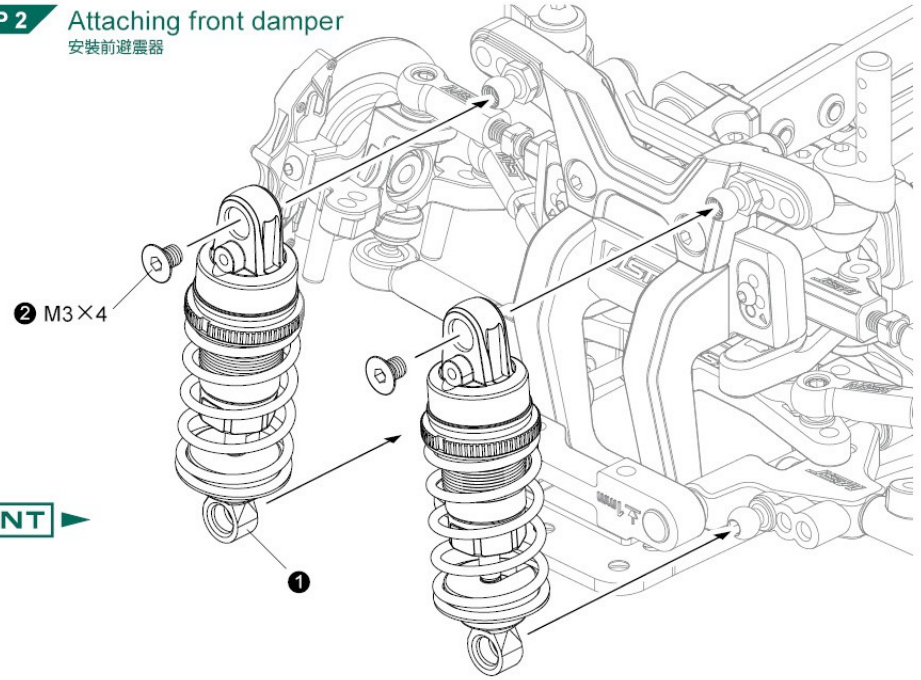

STEP 3 Attaching rear damper
安裝後避震器

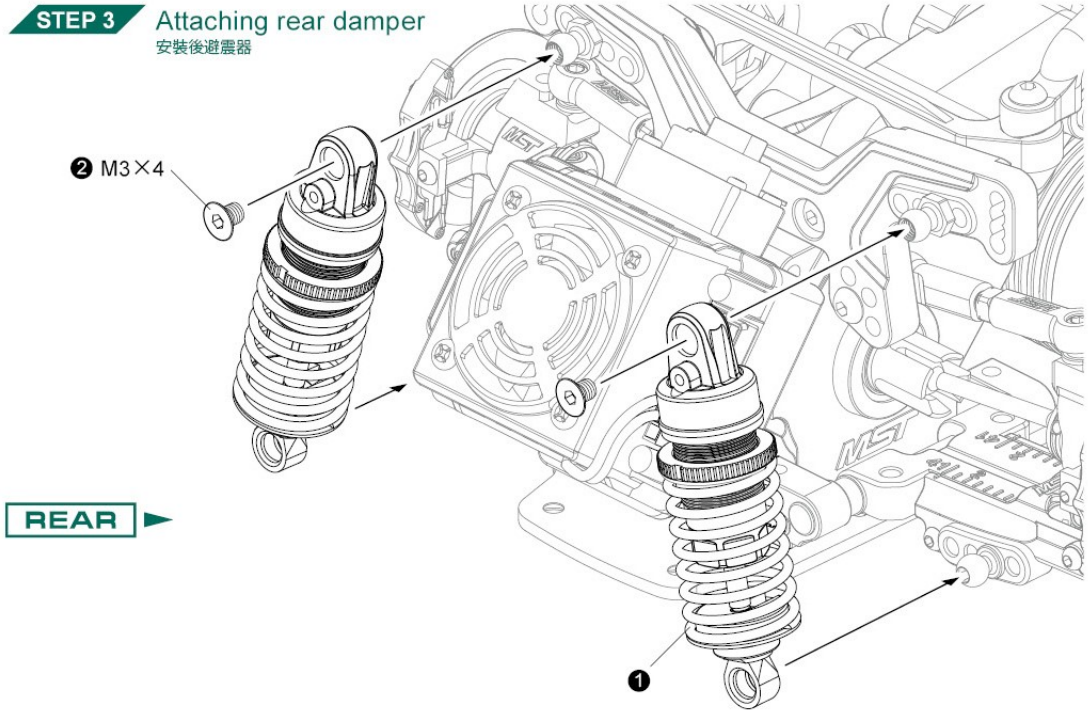

PARTS BAG 9 BATTERY MOUNT
電池座

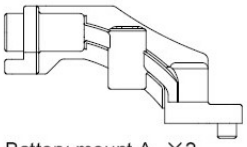

Battery mount A ×2
電池座 A



Battery mount B ×2
電池座 B




Battery mount C ×2
電池座 C



Battery mount D ×2
電池座 D



M3×8 screw ×2
沉頭螺絲

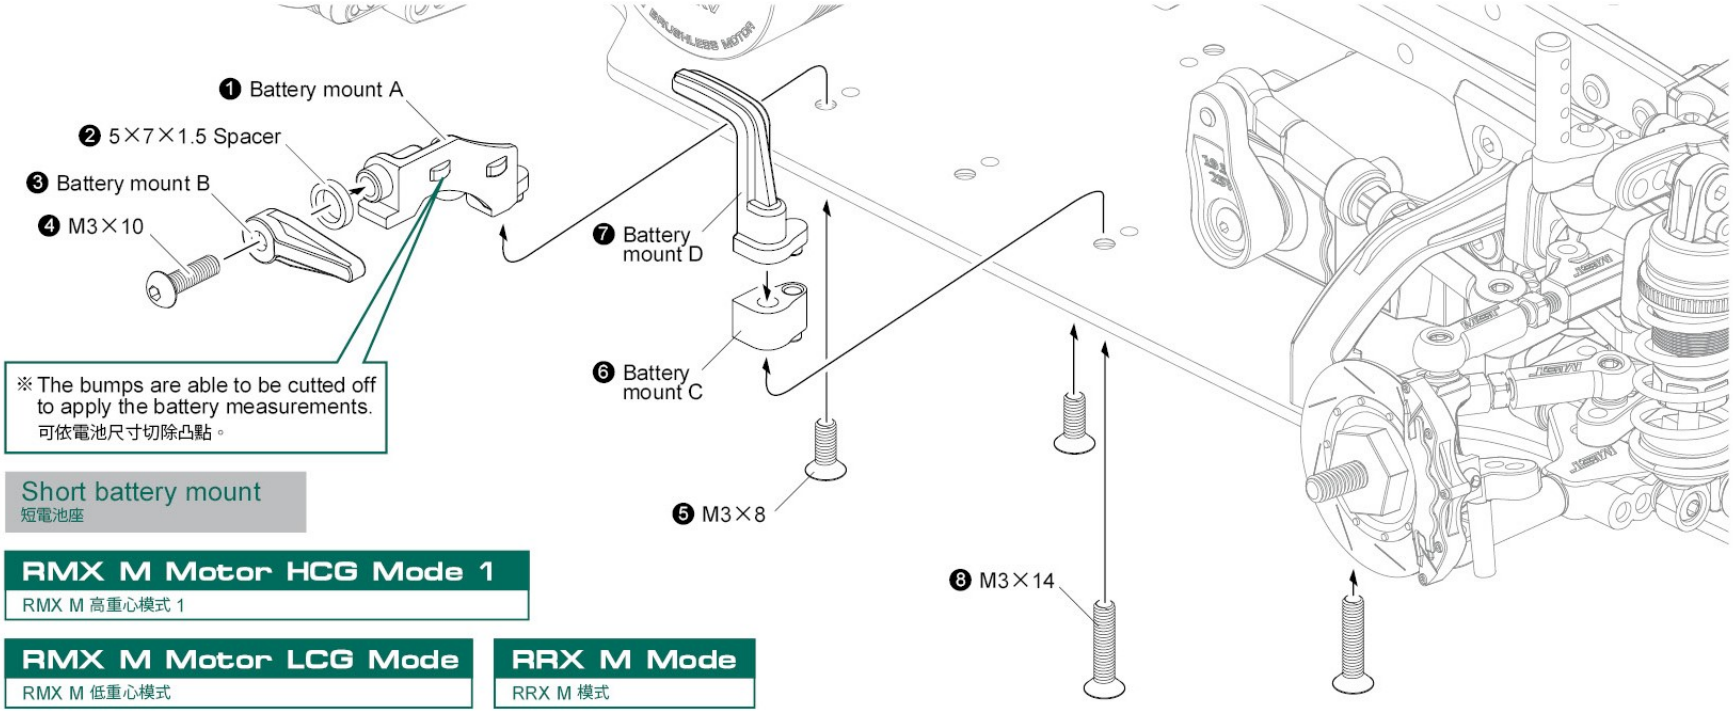


※ The bumps are able to be cutted off to apply the battery measurements.
可依電池尺寸切除凸點。

Short battery mount
短電池座

RMX M Motor HCG Mode 1
RMX M 高重心模式 1

RMX M Motor LCG Mode
RMX M 低重心模式


RRX M Mode
RRX M 模式

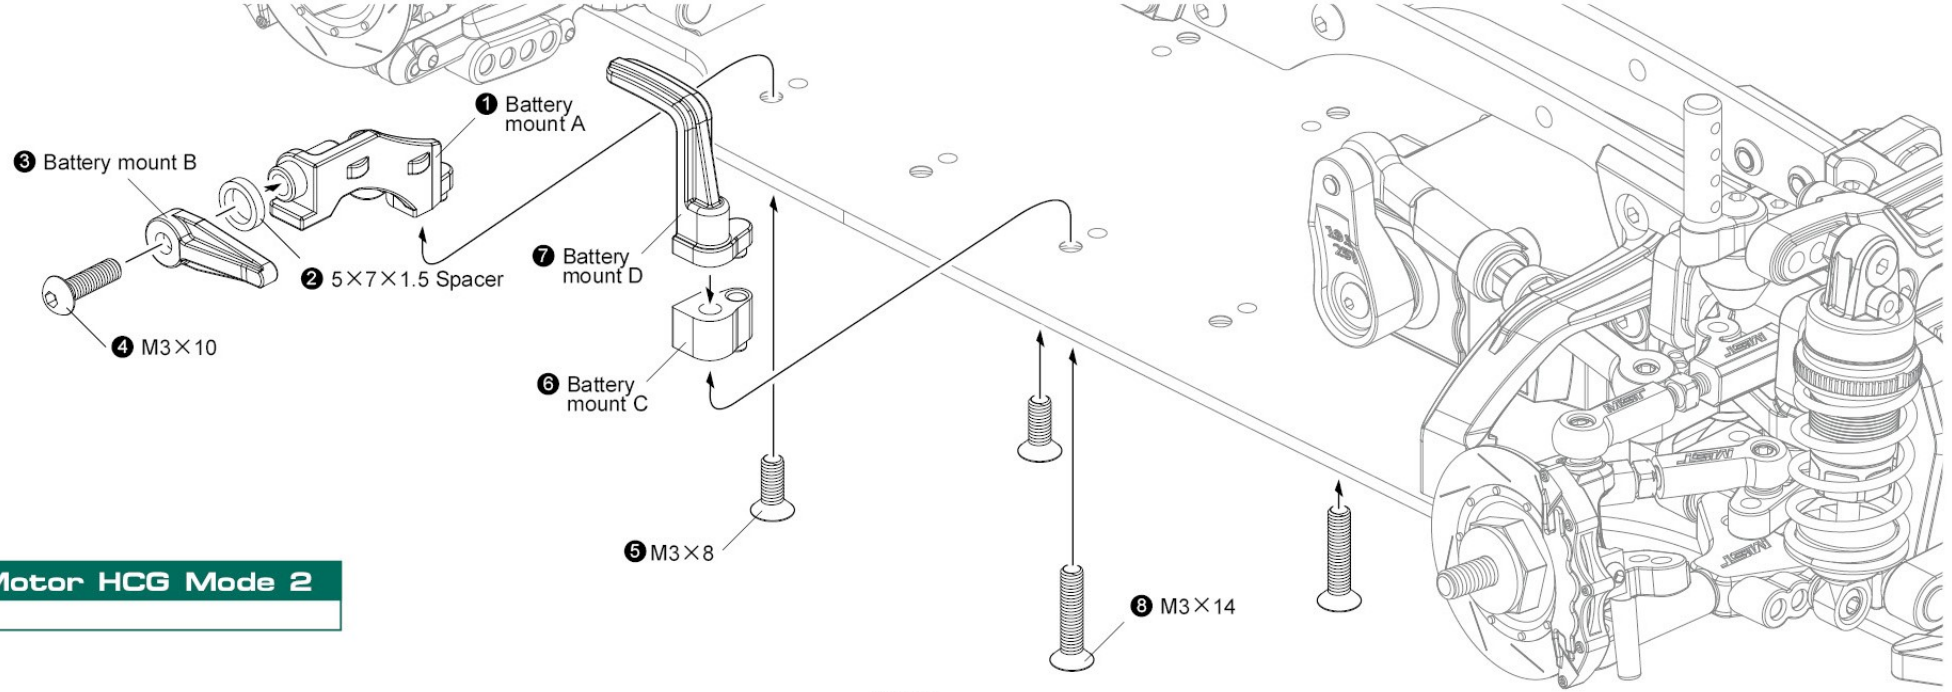

RMX M Motor HCG Mode 2

RMX M 高重心模式 2

PARTS ◄ WHEELS 輪胎



Wheel hub spacer 1.0 ×2
輪座墊片 1.0
(Tools bag)




Flange nut M4 ×4
凸緣螺帽M4
(Tools bag)



※NOT including.
Please refer to MST website for the wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]

STEP 1 Attaching wheels
安裝輪胎

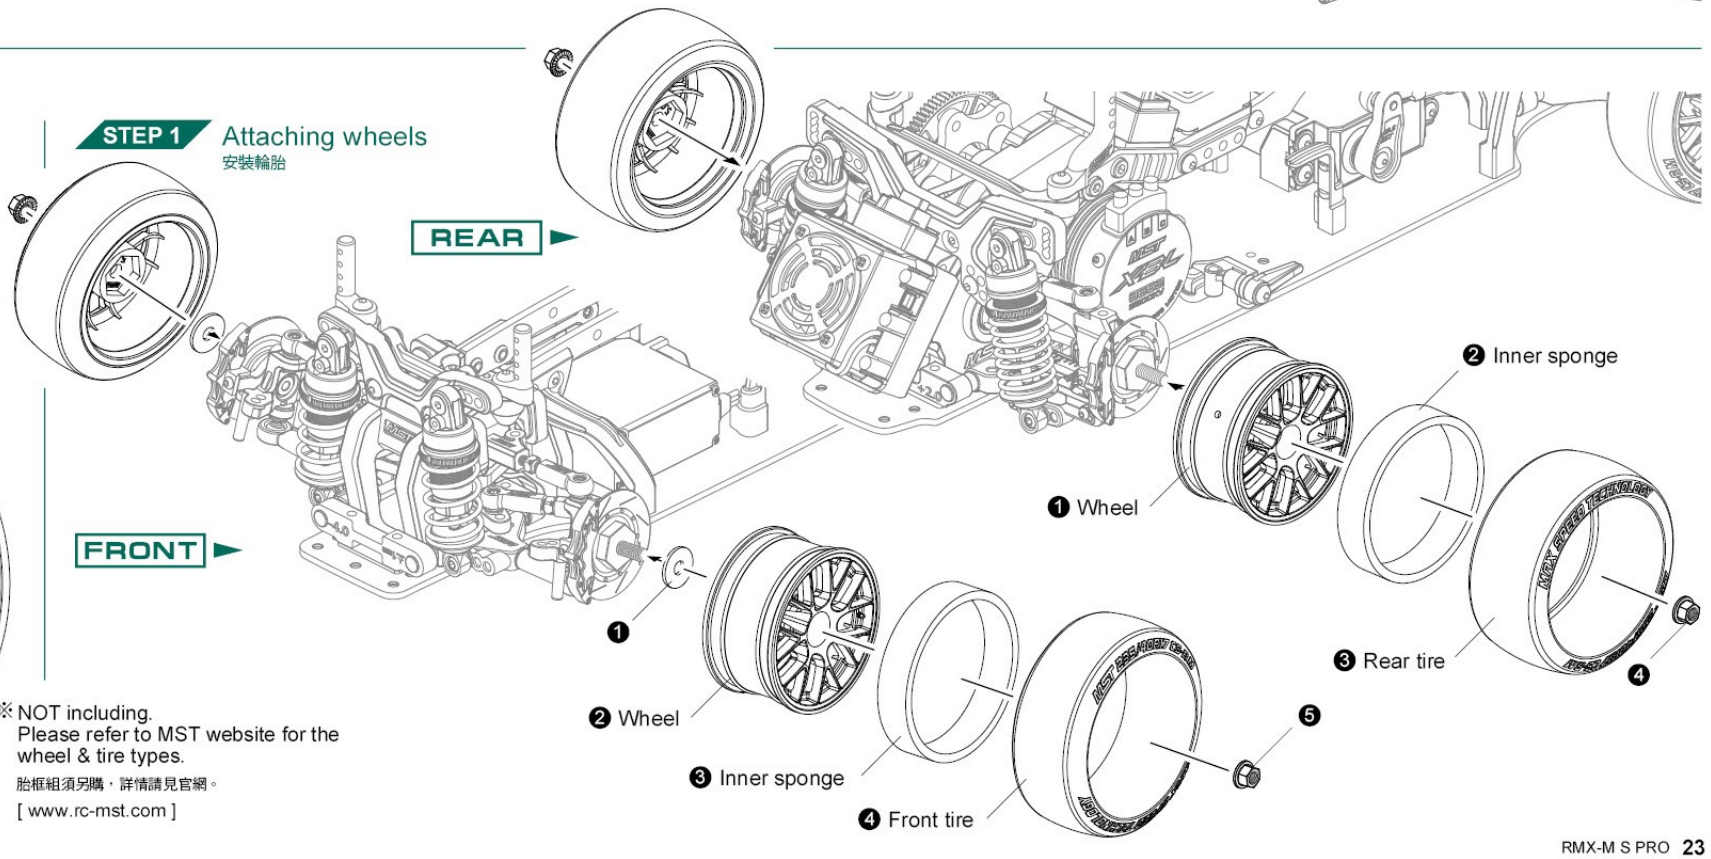



210654R/BK
RMX alum. adj. front connect mount v.2 (red)



210429R/BK
RMX Alum. spur gear holder (red)



210643R/BK
RMX 2.0 alum. spur gearbox motor heat sink mount (red)



210642R/BK
RMX 2.0 alum. spur gearbox set (red)



210644
RMX 2.0 alum. spur gear ball diff. set



210683
Reinforced bevel diff. assembly



210639R/BK
RMX 2.0 Alum.ESC rear moun set (red)



820137R/BK
Short adjustable alum. suspension mount (-3.5~-5.0) (red)



820057R/BK
Adjustable alum. suspension mount (-0.5-+1.0) (red)



820058R/BK
Adjustable alum. suspension mount (+1.5-+3.0) (red)



820127R/BK
Alum. 8-adjusting servo saver (red)



820125R/BK
Alum. servo mount (red)



820139
Alum. Lightweight 2WD axle (2)



820150R/BK
TDA Alum. Drift damper set (red) (4)



210588R/BK
Alum. steering arm mount (red)



210590R/BK
RMX 2.0 Alum. steering joint plate (red)




210589R/BK
RMX 2.0 Alum. steering arm (red)



210688R/BK
Alum. post M3X15 (red) (2)

STEP 1 Attaching RRX drive system
安裝 RRX 驅動系統

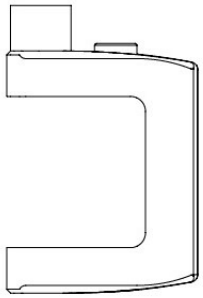

Rear spoiler ×1
後擾流板

PLEASE PURCHASE
請另購



M3×20 Screw ×3
圓頭螺絲


M3×14 Cap screw ×1
六角有頭螺絲

M3×30 Screw ×2
有頭螺絲(半牙)

3×6×0.5 Spacer ×4
墊片

RRX Connector ×1
後置連結架

STEP 1 Attaching damper stay set
安裝後避震架

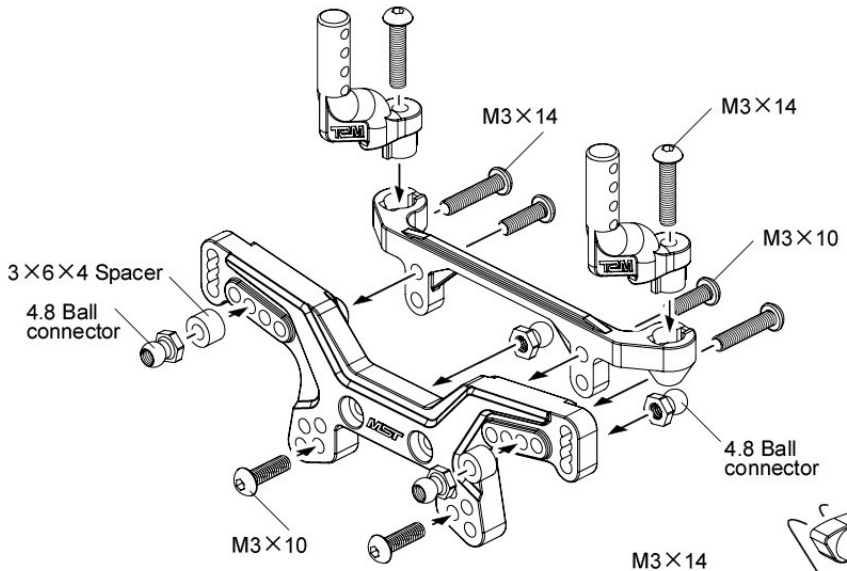

STEP 2 Attaching drive system
安裝驅動系統

RMX-M S PRO

1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR


UPDATED SETUP SHEET

ORIGINAL SETTING

DATE : _____ SURFACE : _____ NOTE : _____


TRACK : _____ GRIP : _____

Caster

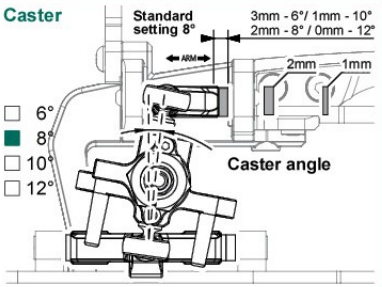


☐ 6°
■ 8°
☐ 10°
☐ 12°


Front wheel hubs

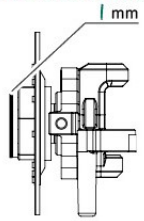


Centered

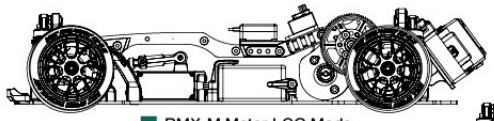


■ RMX-M Motor LCG Mode

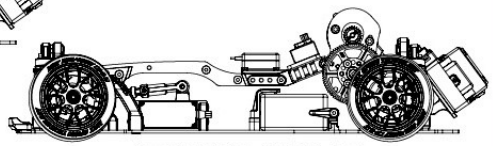

☐ RMX-M Motor HCG Mode 2

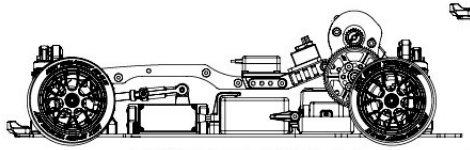

☐ RMX-M Motor HCG Mode 1

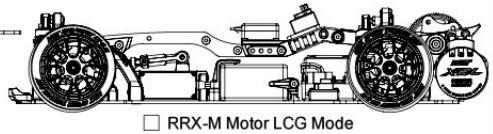

☐ RRX-M Motor LCG Mode

FRONT

Tire: Silver

Wheel: _____

Offset: +5




REAR

Tire: Silver

Wheel: _____


Offset: +5

Front damper stay

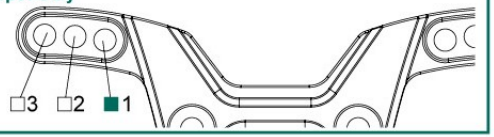


☐3 ☐2 ■1

Rear damper stay

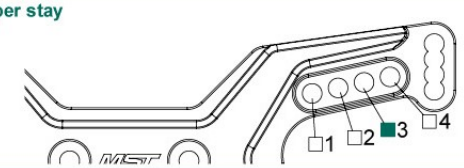


☐1 ☐2 ■3 ☐4

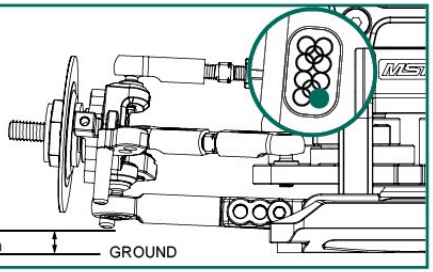


Camber: -5°
Toe-out: 5.5°
Ride height: 5 mm
GROUND


Front upright

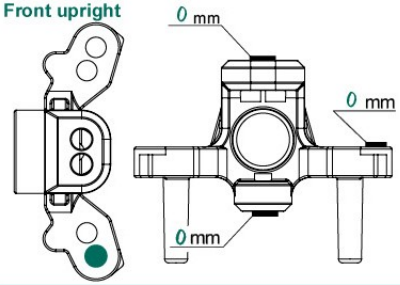


Rear upright

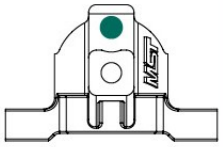

Rear wheel hubs

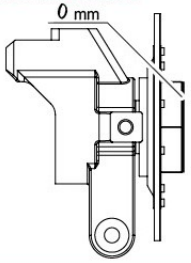


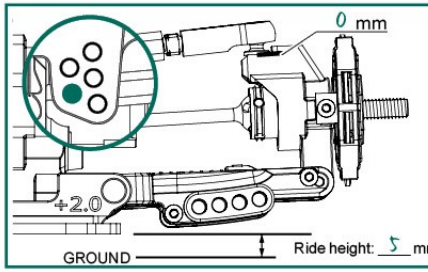


Camber: -2.5°
Toe-in: -3°

Front

Suspension mount Rollcenter -4.0

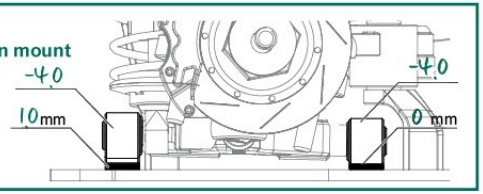


Front upper arm setting

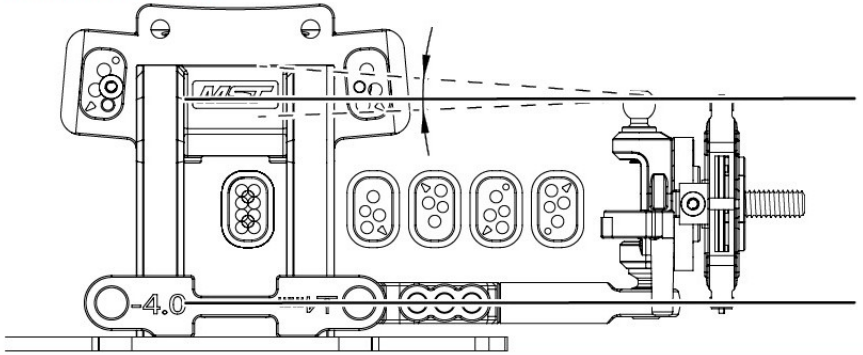


Rear

Suspension mount Rollcenter +0

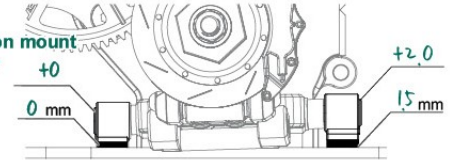


Front lower arm




☐3 ☐2 ■1

Rear lower arm

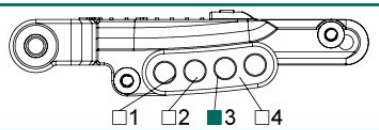


☐1 ☐2 ■3 ☐4

Front damper

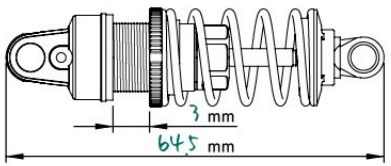

Shock oil: #15 Spring color: Silver
Spring: 29 mm Ø1.4 Piston: Ø1.2 mm Piston hole: 3

Rear damper

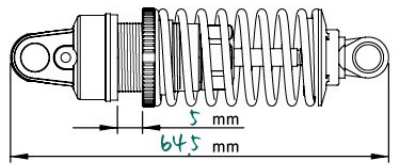

Shock oil: #15 Spring color: Purple-green
Spring: 29 mm Ø1.2 Piston: Ø1.2 mm Piston hole: 3

Spur Gear ÷ Pinion Gear × Reduction Gear = Gear ratio

80 T ÷ 22 T × 3 = 10.9

Motor & ESC: _____ **Battery:** _____

Transceiver: _____ **Gyro:** _____ **Sensitivity:** _____

※ Please download the blank setup sheet at [www.rc-mst.com].

PARTS



M2×4 Screw ×12
圓頭螺絲
110004



M2×8 Screw ×6
圓頭螺絲
110063



M2×8 Screw ×2
圓頭螺絲(半牙)
110045



M2×10 Screw ×2
圓頭螺絲
110084



M3×6 Screw ×9
圓頭螺絲
110001



M3×8 Screw ×6
圓頭螺絲
110002



M3×10 Screw ×18
圓頭螺絲
110026



M3×12 Screw ×1
圓頭螺絲
110029



M3×14 Screw ×10
圓頭螺絲
110061



M3×16 Screw ×5
圓頭螺絲
110086



2.6×10 Screw ×1
自攻圓頭螺絲
110025



M2×6 Screw ×2
沉頭螺絲
110042



M2.5×6 Screw ×2
沉頭螺絲
110112



M3×4 Screw ×4
沉頭螺絲
110099



M3×6 Screw ×3
沉頭螺絲
110024



M3×8 Screw ×18
沉頭螺絲
110005



M3×10 Screw ×6
沉頭螺絲
110052



M3×12 Screw ×2
沉頭螺絲
110043



M3×14 Screw ×2
沉頭螺絲
110081



M3×20 Screw ×2
沉頭螺絲
110101



3×6×0.5 Spacer ×12
墊片
110047



3×8×0.5 Spacer ×1
墊片
110048



4×6×0.3 Spacer ×4
墊片
820017



5×7×0.1 Spacer ×2
墊片
820018



5×7×0.3 Spacer ×2
墊片
820020



3×6×2.5 Bearing ×4
軸承
120024



4×8×3 Ball bearing ×2
培林
120013



5×8 Ball bearing ×8
培林
120003




4×10 Ball bearing ×2
培林
120018



5×10 Ball bearing ×6
培林
120002



10×15 Ball bearing ×2
培林
120001

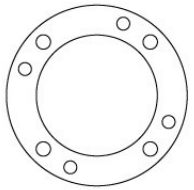

Gear Diff. Gasket ×1
傘差止漏墊片組
230160



Wheel nut m4 ×4
凸緣螺帽
820074



Cross joint ×2
連接軸
820030



M3×2.6 Screw ×2
止付螺絲
110060



M3×3 Screw ×3
止付螺絲
110035




M3×4 Screw ×1
止付螺絲
110083



3×16 Steel reinforced turnbuckle ×1
鋼製強化可調拉桿
810027



3×20 Steel reinforced turnbuckle ×1
鋼製強化可調拉桿
810028



3×36 Steel reinforced turnbuckle ×1
鋼製強化可調拉桿
810014

4.8 Ball connector ×6
外六角球頭
210161

4.8×4.5 S Ball connector ×1
內六角公球頭
210433

4.8×4.5 Ball connector ×13
球頭螺絲
310001

5.8×4 Ball connector L ×2
球頭螺絲(長)
210491

M3×6 Screw ×2
有頭螺絲(半牙)
110011

M3×8 Screw ×4
帶墊片螺絲
110120

M3×25 Screw ×2
有頭螺絲
310015

M3×30 Screw ×1
有頭螺絲(半牙)
110100

M3×40 Screw ×1
有頭螺絲(半牙)
110091

2WD Axle ×2
二驅輪軸
820095

2×9.8 Shaft ×5
插銷
110017

2×9.8 (削槽) Shaft ×2
插銷
110046

2×22 Shaft ×2
插銷
310047

2×28 Shaft ×2
插銷
310103

2.5×46 Arm shaft ×4
擺臂插銷
310048

4×21 Steel center shaft ×2
鋼製心軸
310119

Alum. Main shaft 20T ×1
鋁合金主齒軸 20T
310118

Steel CVD universal shaft 29 ×2
鋼製CVD傳動軸 29
820153

R-clip 5.0 ×6
R銷 5.0
820075

Steel CVD universal shaft 33 ×2
鋼製CVD傳動軸 33
820156

Reinforced adjuster set
5.8×26 ×2
5.8×26 拉桿頭
210031

Diff. joint ×2
傘差接杯
210685

Wheel axle ×2
萬向接杯
310065

Bevel gear diff. repair set
傘差維修包
210270

29mm Coil spring set ×8
29mm 避震彈簧組 ×8
820114

29mm Soft coil spring set ×8
29mm 軟避震彈簧組 ×8
820115

Damper cylinder ×4
避震筒身
210071

Piston rod ×4
避震軸心
310008

Piston ×4
避震活塞
210235

Cylinder cap ×4
避震器上蓋
210057

Damper adjuster ×4
避震器拉桿
820079

Rod guide cap ×4
避震器下蓋
210057

10.8×0.9 O-ring ×4
O環
130032

Damper retainer ×4
避震器彈簧座
820079

12×1 O-ring ×4
O環
130049

Oil seal ×4
避震器氣室
130004


Spring retainer (red) ×4
避震器調整環 (紅)
310106R

E-clip ×10
E形扣
110013


Rod guide ×4
避震器下蓋墊片
210235

Damper O-ring P3 ×4
避震器O環
130059


M3×4 screw ×4
沉頭螺絲
110099

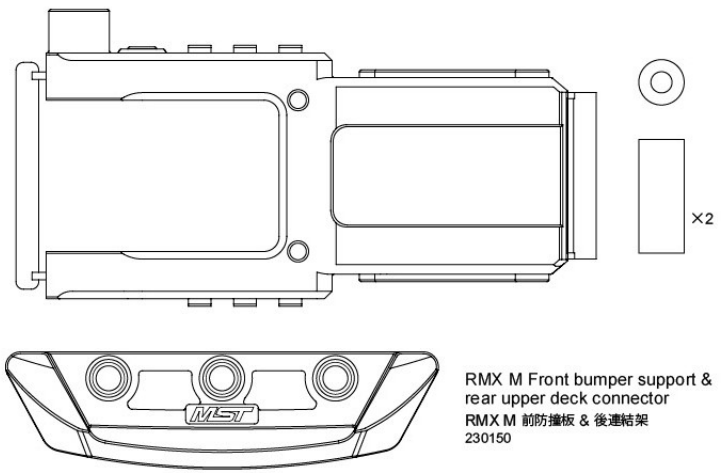


RMX M Front bumper support & rear upper deck connector
RMX M 前防撞板 & 後連結架
230150

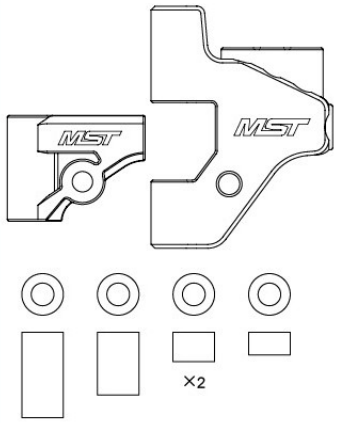


M Front upper & lower arm set
M 前上下擺臂組
230151

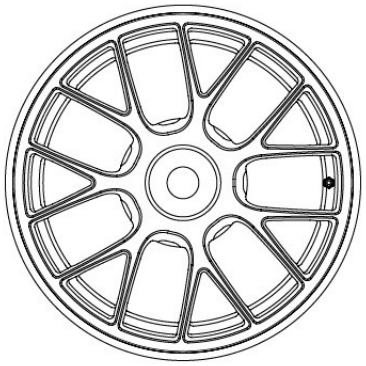


M Black RE wheel 24.5mm (+5) (4)
M 黑RE輪框 24.5mm (+5) (4)
832552BK

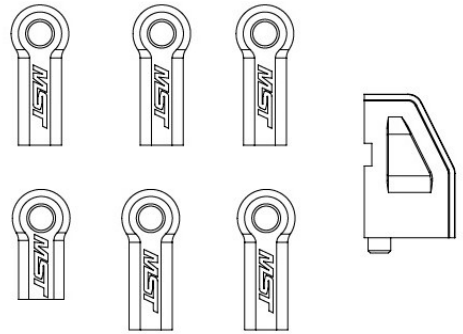


4.8 Rod ends set (M/S)
4.8 拉桿頭組 (M/S)
230067

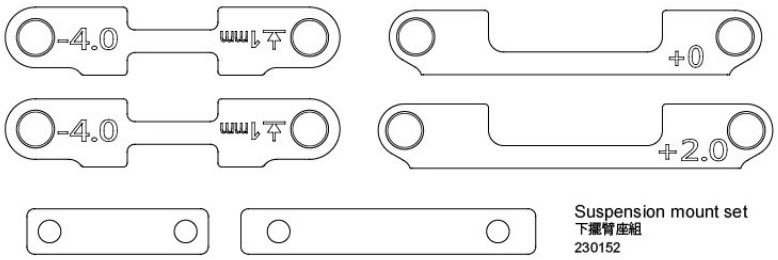


Suspension mount set
下擺臂座組
230152

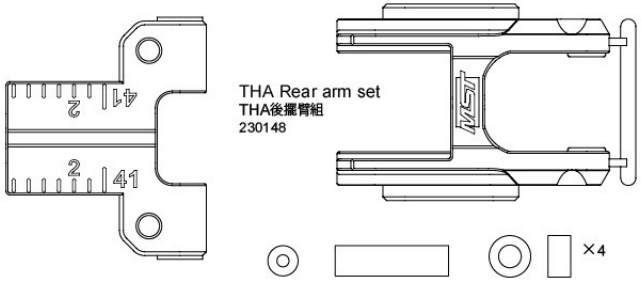


THA Rear arm set
THA後擺臂組
230148

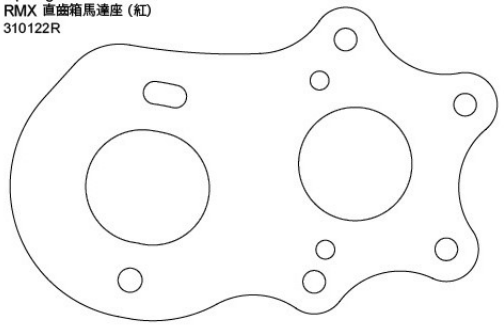


Spur gearbox motor mount (black)
RMX 直齒箱馬達座 (紅)
310122R

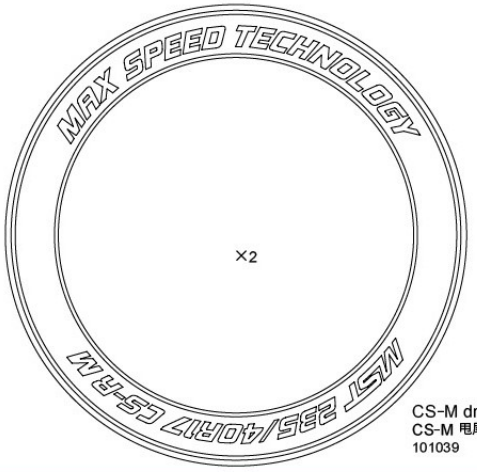


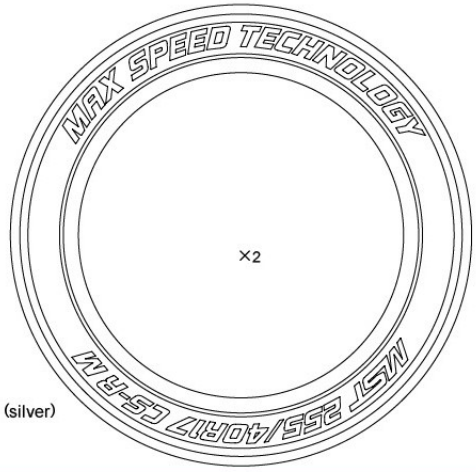


CS-M drift tire (F&R) (silver)
CS-M 甩尾胎 (前後) (銀)
101039

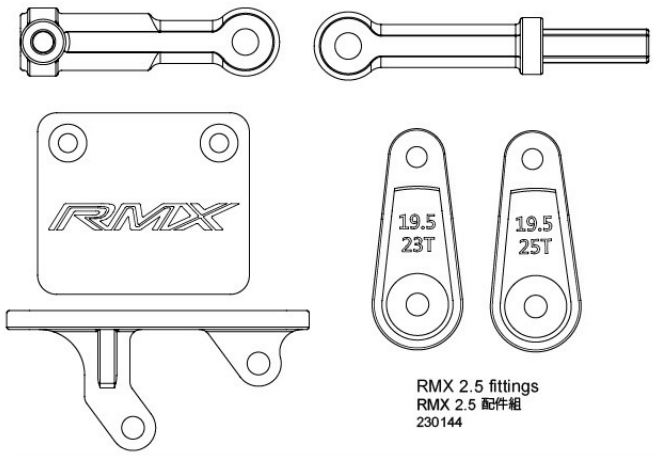


RMX 2.5 fittings
RMX 2.5 配件組
230144

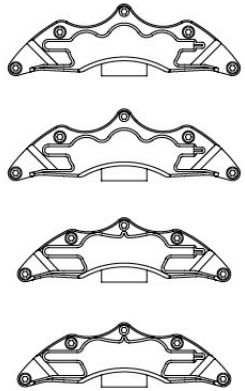


Brake calipers (red)
煞車卡鉗 (紅)
210145CR

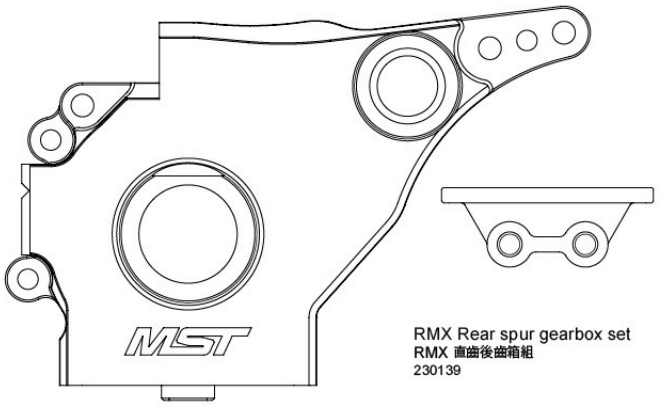



RMX Rear spur gearbox set
RMX 直齒後齒箱組
230139

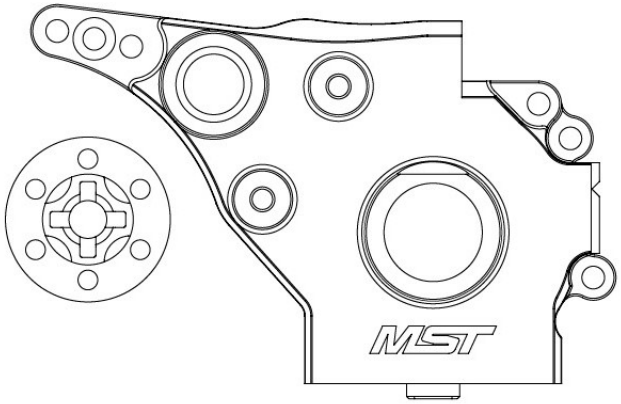

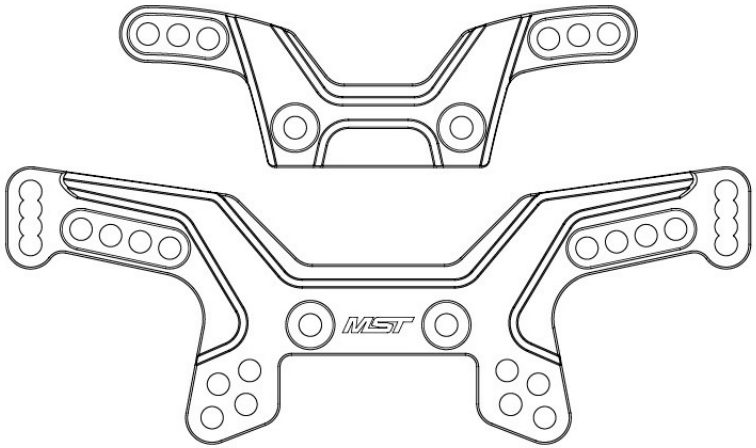


RMX M F&R damper stay set
RMX M 前後避震架組
230149

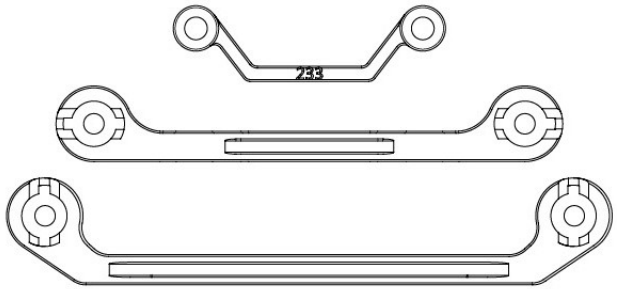


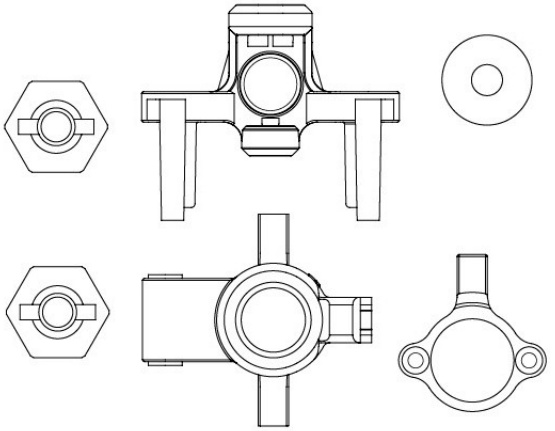


ATK V2 Front wheel hubs
& THA rear hubs
ATK V2 前輪座組 & THA 後輪座
230153

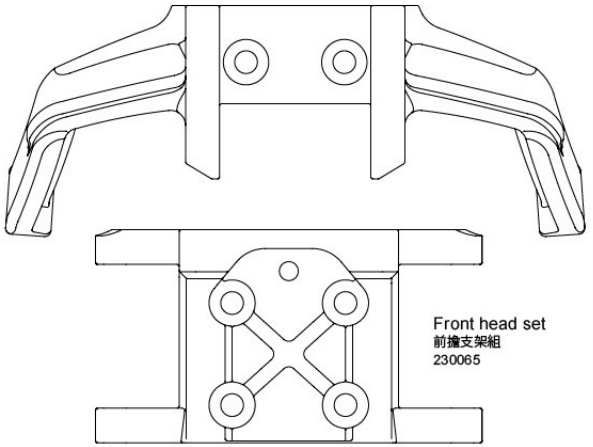


Front head set
前擋支架組
230065

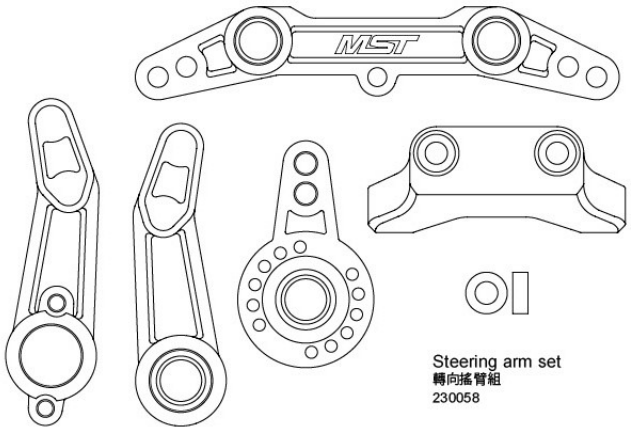


Steering arm set
轉向搖臂組
230058

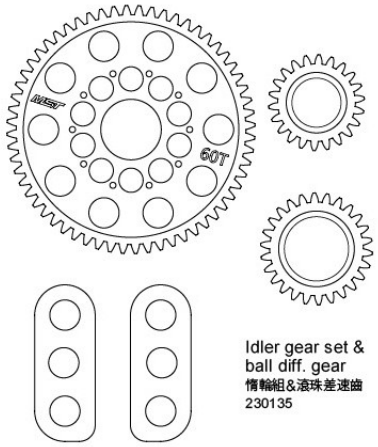

Idler gear set &
ball diff. gear
惰輪組&滾珠差速齒
230135

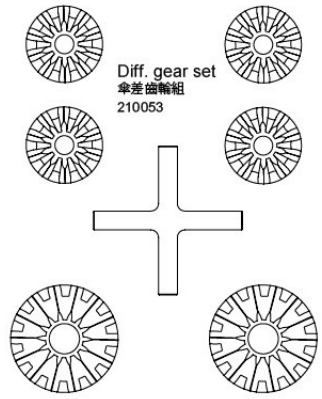


Diff. gear set
傘差齒輪組
210053

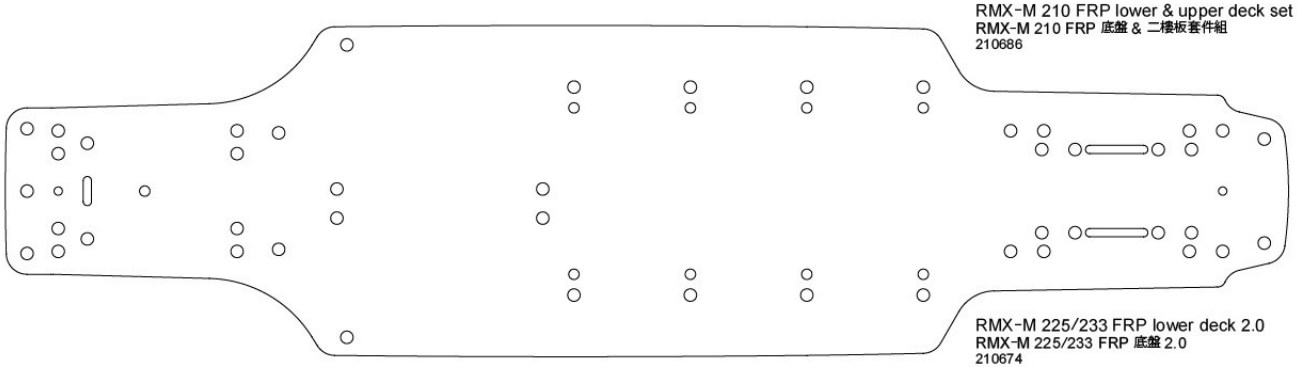


RMX-M 210 FRP lower & upper deck set
RMX-M 210 FRP 底盤 & 二樓板套件組
210686

RMX-M 225/233 FRP lower deck 2.0
RMX-M 225/233 FRP 底盤 2.0
210674


RMX-M 239/245 FRP lower deck 2.0
RMX-M 239/245 FRP 底盤 2.0
210675

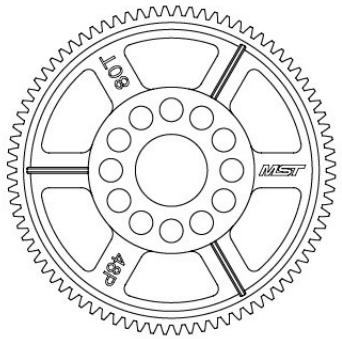


Spur gear 48P 80T
大直齒
230068

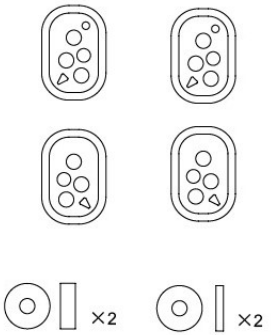


Shaft bush & spacer set
襯套墊片組
230070BK

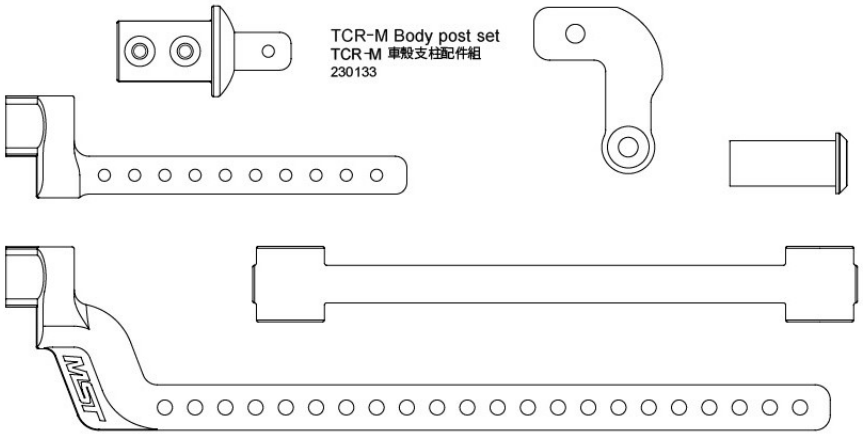


TCR-M Body post set
TCR-M 車殼支柱配件組
230133

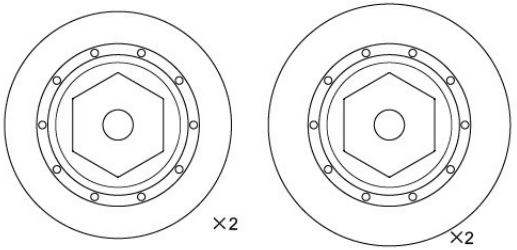


Wheel hubs w/disc shape 32&30
碟型六角輪座組 32&30 附貼紙
230109




Pinion gear 48P-22T ×1
馬達齒
148022P

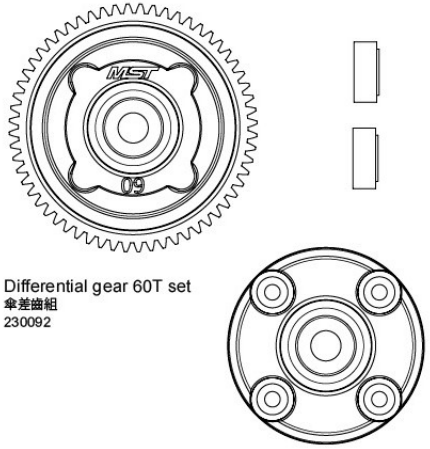


Differential gear 60T set
傘差齒組
230092

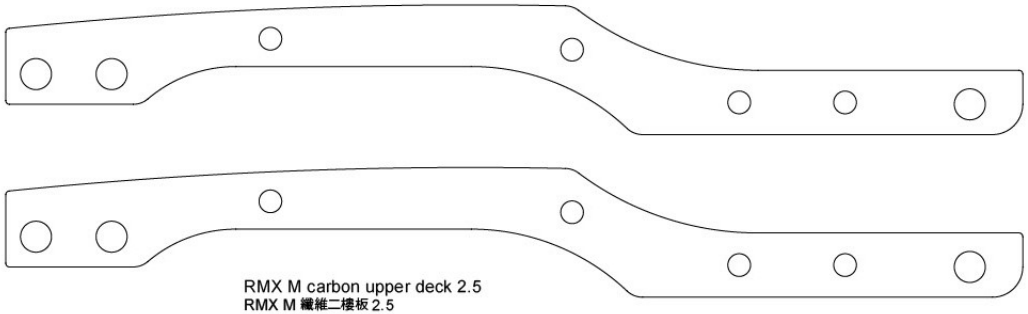

RMX M carbon upper deck 2.5
RMX M 纖維二樓板 2.5
210673

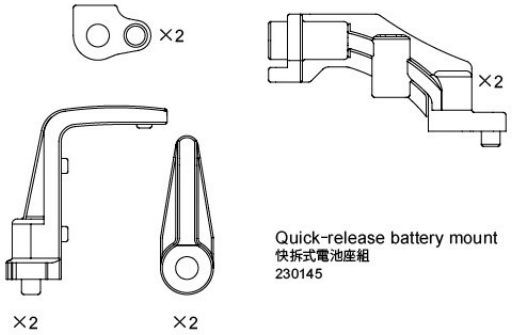

Quick-release battery mount
快拆式電池座組
230145

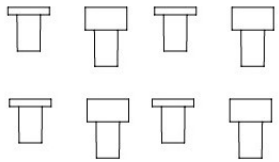

Shaft bush & spacerset (white)
襯套墊片組 (白)
210063(W)

PARTS CODE

101039	CS M drift tire (F&R) (silver) (4)	110091	Cap screw M3×40 (6)	210433	Ball connector 4.8×4.5 S (5)	310008	Piston rod (4)
110001	Round head screw M3×6 (10)	110099	Countersunk screw M3×4 (10)	210491	Ball connector L 5.8×4 (4)	310015	Diff screw & spring set
110002	Round head screw M3×8 (10)	110100	Cap screw M3×30 (6)	210673	RMX M carbon upper deck 2.5	310047	Arm shaft 2.0×22 (2)
110004	Round head screw M2×4 (6)	110101	Countersunk screw M3×20 (6)	210674	RMX-M 225/233 FRP lower deck 2.0	310048	Arm shaft 2.5×46 (4)
110005	Countersunk screw M3×8 (10)	110112	Countersunk screw M2.5×6 (6)	210675	RMX-M 239/245 FRP lower deck 2.0	310065	Wheel axle (2)
110011	Cap screw M3×6 (6)	110120	Round head screw w/washer M3×8 (6)	210685	Bevel gear diff. joint set	310103	Arm shaft 2×28 (2)
110013	E-clip 2.0 (10)	120001	Ball bearing 10×15 (4)	210686	RMX-M 210 FRP lower & upper deck set	310106R	Spring retainer (red) (2)
110017	Shaft 2×9.8 (10)	120002	Ball bearing 5×10 (4)	230058	Steering arm set	310118	Alum. main shaft 48P 20T
110024	Countersunk screw M3×6 (10)	120003	Ball bearing 5×8 (4)	230065	Front head set	310119	4×21 Steel center shaft (2)
110025	Tapping round head screw 2.6×10 (6)	120013	Ball bearing 4×8×3 (2)	230067	4.8 Rod ends set (M/S)	310122R	RMX Alum. spur gearbox motor mount (red)
110026	Round head screw M3×10 (10)	120018	Ball bearing 4×10×4 (2)	230068	Spur gear 48P-80T	810014	Steel reinforced turnbuckle 3×36 (2)
110029	Round head screw M3×12 (6)	120024	Bearing 3×6×2.5 (4)	230070BK	Shaft bush & spacer set	810027	Steel reinforced turnbuckle 3×16 (2)
110035	Set screw M3×3 (6)	130004	Oil seal (4)	230092	RMX 2.0 RTR fittings	810028	Steel reinforced turnbuckle 3×20 (2)
110042	Countersunk screw M2×6 (6)	130032	Damper cap O-ring (10)	230109	Wheel hubs w/disc shape 32&30	820017	Spacer 4×6×0.3 (8)
110043	Countersunk screw M3×12 (10)	130049	O-ring 12×1 (4)	230133	TCR-M Body post set	820018	Spacer 5×7×0.1 (8)
110045	Round head screw M2×8 (partial thread) (6)	130059	High-smooth damper O-ring P3 (white) (10)	230135	Idler gear set & ball diff. gear	820020	Spacer 5×7×0.3 (8)
110046	Shaft 2×9.8 (8)			230139	RMX Rear spur gearbox set	820030	Cross joint (2)
110047	Spacer 3×6×0.5 (8)	148022P	MST 48P Pinion 22T	230144	RMX 2.5 fittings	820074	Wheel nut m4 (4)
110048	Spacer 3×8×0.5 (8)	210031	Reinforced adjuster set 5.8×26	230145	Quick-release battery mount	820075	R-clip 5.0 (10)
110052	Countersunk screw M3×10 (10)	210053	Diff. gear set	230148	THA Rear arm set	820079	Damper plastic maintenance set (2)
110060	Set screw M3×2.6 (10)	210057	Damper cap set	230149	RMX M F&R damper stay set	820095	AKM 2WD axle (2)
110061	Round head screw M3×14 (6)	210063W	Shaft bush & spacer set (white)	230150	RMX M Front bumper support & rear upper deck connector	820114	29mm Coil spring set (8)
110063	Round head screw M2×8 (6)	210071	Damper cylinder (2)			820115	29mm Soft coil spring set (8)
110081	Countersunk screw M3×14 (6)	210145CR	Brake calipers (red) (4)	230152	Suspension mount set	820153	Steel CVD universal shaft 29 (40°)
110083	Set screw M3×4 (6)	210161	Ball connector nut 4.8 (4)	230153	ATK V2 Front wheel hubs & THA rear hubs	820156	Steel CVD universal shaft 33 (40°)
110084	Round head screw M2×10 (6)	210235	Piston spacer set	230160	Gear Diff. Gasket	832552BK	M Black RE wheel 24.5mm (+5) (4)
110086	Round head screw M3×16 (6)	210270	Bevel gear diff. repair set	310001	Ball connector 4.8×4.5 (5)		

部品編號

101039	CS-M 甩尾胎 (前後) (銀) (4)	110091	六角有頭螺絲 M3×40 (半牙) (6)	210491	球頭螺絲 L 5.8×4 (4)	310047	擺臂插銷 2.0×22 (2)
110001	六角半圓頭螺絲 M3×6 (10)	110099	六角沉頭螺絲 M3×4 (10)	210673	RMX M 纖維二樓板 2.5	310048	擺臂插銷 2.5×46 (4)
110002	六角半圓頭螺絲 M3×8 (10)	110100	六角有頭螺絲 M3×30 (半牙) (6)	210674	RMX-M 225/233 FRP 底盤 2.0	310065	萬向接杯 (2)
110004	六角半圓頭螺絲 M2×4 (6)	110101	六角沉頭螺絲 M3×20 (6)	210675	RMX-M 239/245 FRP 底盤 2.0	310103	擺臂插銷 2×28 (2)
110005	六角沉頭螺絲 M3×8 (10)	110112	六角沉頭螺絲 M2.5×6 (6)	210685	傘差接杯組	310106R	避震調整環 (紅) (2)
110011	六角有頭螺絲 M3×6 (半牙) (6)	110120	六角半圓頭帶墊片螺絲 M3×8 (6)	210686	RMX-M 210 FRP 底盤 & 二樓板套件組	310118	鋁合金主齒軸 48P 20T
110013	E扣 2.0 (10)	120001	培林 10×15 (4)	230058	轉向搖臂組	310119	4×21 鋼製心軸 (2)
110017	插銷 2×9.8 (10)	120002	培林 5×10 (4)	230065	前擔支架組	310122R	RMX 鋁合金直齒箱馬達座 (紅)
110024	六角沉頭螺絲 M3×6 (10)	120003	培林 5×8 (4)	230067	4.8 拉桿頭組 (M/S)	810014	鋼製強化可調拉桿 3×36 (2)
110025	自攻六角半圓頭螺絲 2.6×10 (6)	120013	培林 4×8×3 (2)	230068	大齒盤 48P-80T	810027	鋼製強化可調拉桿 3×16 (2)
110026	六角半圓頭螺絲 M3×10 (10)	120018	培林 4×10×4 (2)	230070BK	襯套墊片組	810028	鋼製強化可調拉桿 3×20 (2)
110029	六角半圓頭螺絲 M3×12 (6)	120024	軸承 3×6×2.5 (4)	230092	RMX 2.0 RTR 配件組	820017	墊片 4×6×0.3 (8)
110035	六角止付螺絲 M3×3 (6)	130004	避震氣室 (4)	230109	碟型六角輪座組 32&30	820018	墊片 5×7×0.1 (8)
110042	六角沉頭螺絲 M2×6 (6)	130032	避震上蓋O環 (10)	230133	TCR-M 車殼支柱配件組	820020	墊片 5×7×0.3 (8)
110043	六角沉頭螺絲 M3×12 (10)	130049	O環 12×1 (4)	230135	惰輪組&滾珠差速齒	820030	連接軸 (2)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	130059	高順暢阻尼器O環 P3 (白)(10)	230139	RMX 直齒式後齒箱組	820074	輪框螺帽 M4 (4)
110046	插銷 2×9.8 (剖溝) (8)	148022P	MST 48P 馬達齒 22T	230144	RMX 2.5配件組	820075	R銷 5.0 (10)
110047	墊片 3×6×0.5 (8)	210031	強化拉桿頭組 5.8×26	230145	快拆式電池座組	820079	避震膠件包 (2)
110048	墊片 3×8×0.5 (8)	210053	傘差齒輪組	230148	THA後擺臂組	820095	AKM 二驅輪軸 (2)
110052	六角沉頭螺絲 M3×10 (10)	210057	避震器上下蓋組	230149	RMX M 前後避震架組	820114	29mm 避震彈簧組 (8)
110060	六角止付螺絲 M3×2.6 (10)	210063W	襯套墊片組 (白)	230150	RMX M 前防撞板 & 後連結架	820115	29mm 軟避震彈簧組 (8)
110061	六角半圓頭螺絲 M3×14 (6)	210071	避震器筒身 (2)	230152	下擺臂座組	820153	鋼製CVD傳動軸 29 (40°)
110063	六角半圓頭螺絲 M2×8 (6)	210145CR	煞車卡鉗 (紅) (4)	230153	ATK V2 前輪座組 & THA 後輪座	820156	鋼製CVD傳動軸 33 (40°)
110081	六角沉頭螺絲 M3×14 (6)	210161	球頭螺帽 4.8 (4)	230160	傘差止漏墊片組	832552BK	M 黑RE輪框 24.5mm (+5) (4)
110083	六角止付螺絲 M3×4 (6)	210235	避震器活塞墊片組	310001	內六角公球頭 4.8×4.5 (5)		
110084	六角半圓頭螺絲 M2×10 (6)	210270	傘差維修包	310008	避震軸心 (4)		
110086	六角半圓頭螺絲 M3×16 (6)	210433	內六角公球頭 4.8×4.5 S (5)	310015	凌差彈簧螺絲組		