MAYLINE

Medina Series ™
120" Conference Table
Model No. MNC10
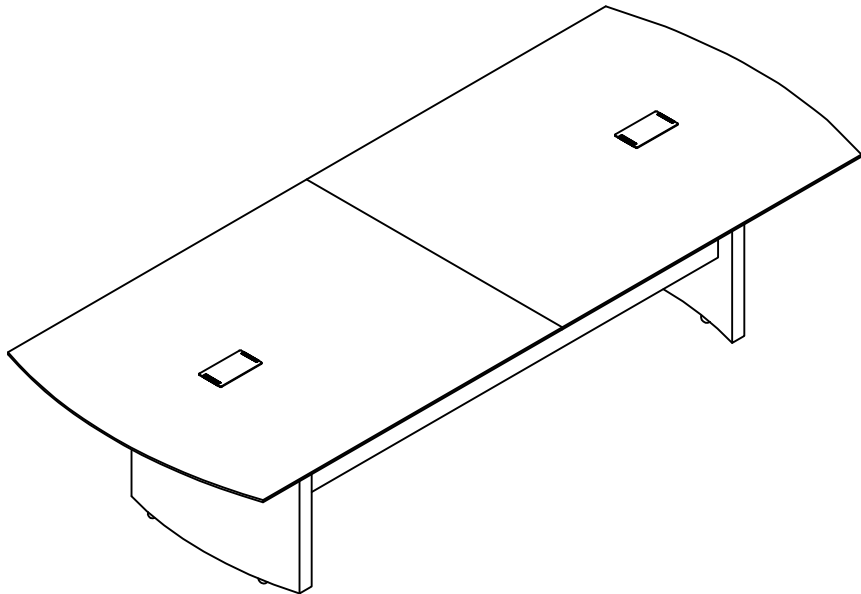
ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

PARTS LIST

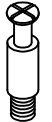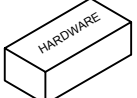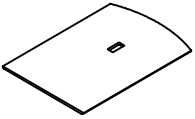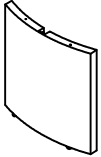| Name	Part	Qty.	Spare Qty
A	HB REALS001 Cam Lock	16	1
B	HB REALS102SLV Cam Sticker/Silver	16	1
C	HB REALS003 Cam Post	16	1

Name	Part	Qty.	Spare Qty
D	REALS036 Mntg Plate	3	
E	HB REALS043 M6x15mm	24	1
	HARDWARE MNCT120HB		

NOTE:
①. 1/2Top packed in one carton - MNCT120T
②. 2 Modesty Panels with Hardware packed in one carton - MNCT120MPLSLV
③. 2 Legs with Hardware packed in one carton - MNCB

Items with HB are in hardware box.

1

PARTS LIST

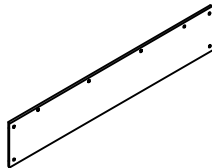| Name	Part	Qty.
H	MNCT120T** Top	2
J	MNCB** Leg	2

Name	Part	Qty.
K	MNCT120MPSLV Modesty Panel	2

**Denotes Color Code

1. Insert Cams (A) into the Modesty Panel (K) and MNCB Legs (J). Install Cam Posts (C) into threaded inserts in MNCB Legs (J). Attach Modesty Panel (K) to MNCB Legs (J) by turning Cams (A).
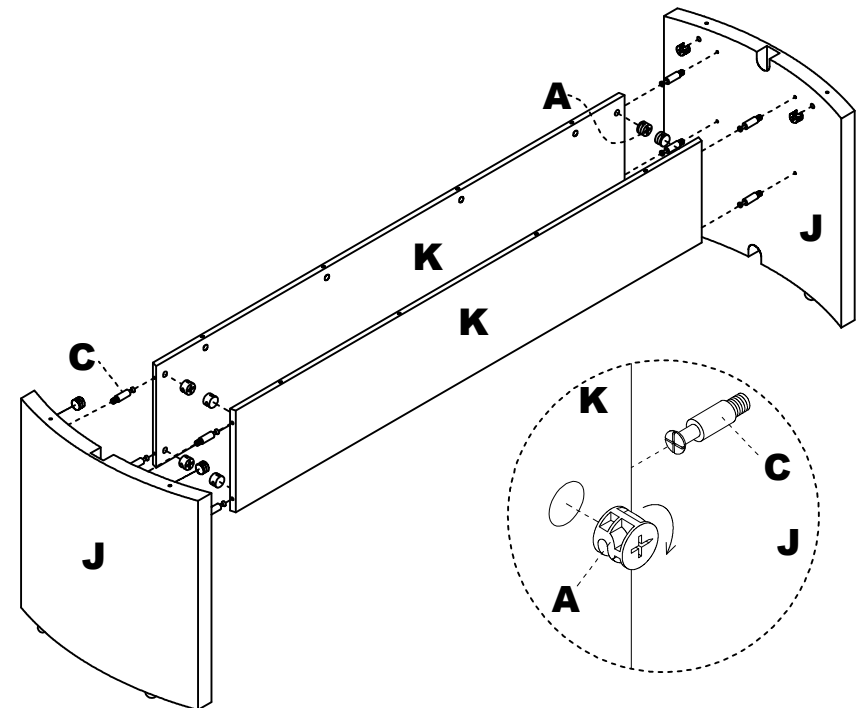
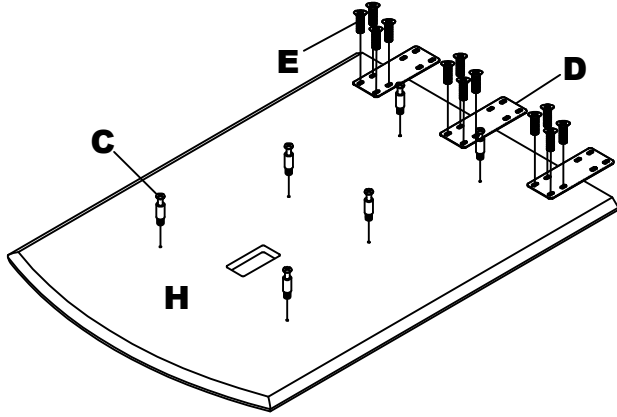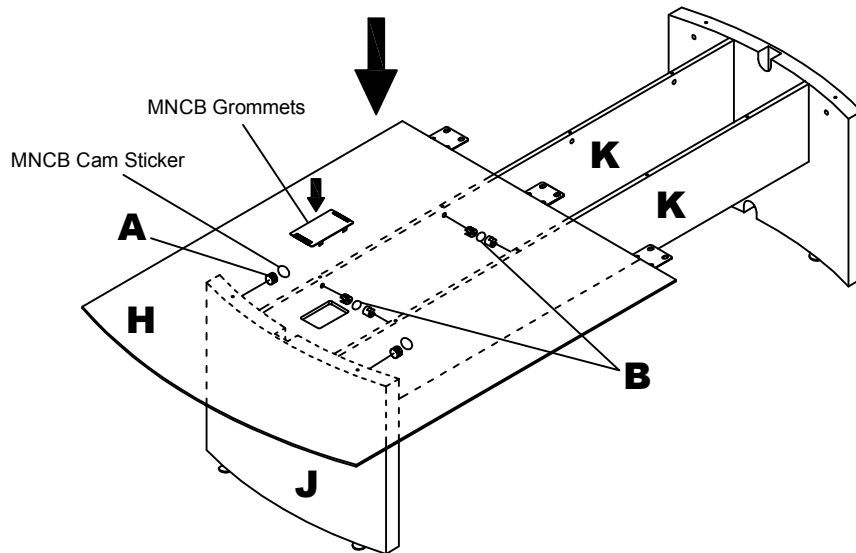NOTE: The arrow on the face of the Cam (A) should point towards the Cam Post (C) for proper alignment.

② Attach Mntg Plates (D) to the underside of adjacent Top (H) using Screws (E). Install Cam Posts (C) into threaded inserts in underside of Top (H).
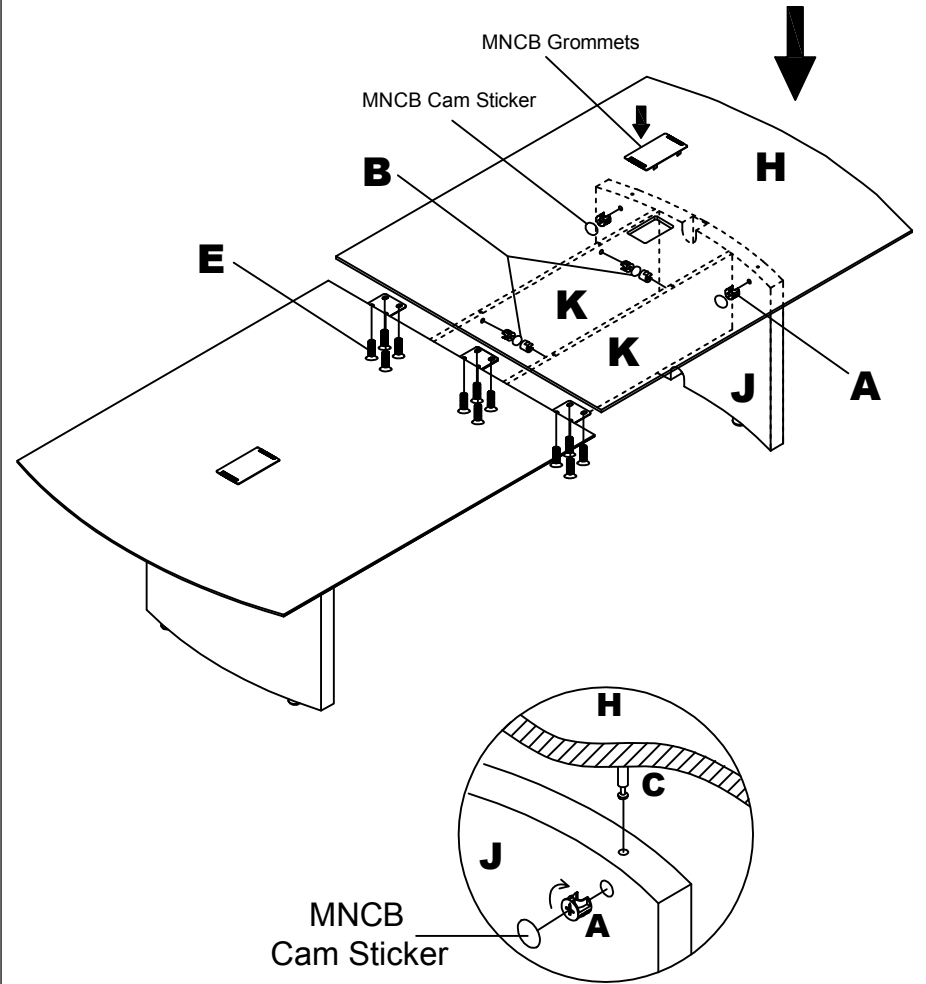
E
D
C
H

③ Place Top (H) onto Leg (J) and Modesty Panel (K) and lock in place by turning Cams (A). Apply MNCB Cam Sticker onto Cams (A) of Legs (J). Apply Cam Stickers/Silver (B) onto Cams (A) of Modesty Panel (K). Insert Grommets into Top holes.

MNCB Grommets
MNCB Cam Sticker
A
H
K
K
B
J

4

④ Place the other Top (H) onto Leg (J) and Modesty Panel (K) and lock in place by turning Cams (A). Attach the Top to the other Top using Screws (E). Apply MNCB Cam Sticker onto Cams (A) of Legs (J). Apply Cam Stickers/Silver (B) onto Cams (A) of Modesty Panel (K). Insert Grommets into Top holes.

MNCB Grommets
MNCB Cam Sticker
B
H
E
K
K
J
A

H
C
J
MNCB Cam Sticker
A

NOTE: The arrow on the face of the Cam (A) should point towards the Cam Post (C) for proper alignment.

5