Installation Instructions for Three-function Shower Set (Round Riser Rail)

No.	Name of part	Quantity
1	Shower Riser Rail	1
2	Shower Head	1
3	Hand Shower	1
4	150cm Shower Hose	1
5	Fixing Base	1
6	S-type Swivel Elbow	2
7	Shower Mixer Body	1
8	Hex key	1

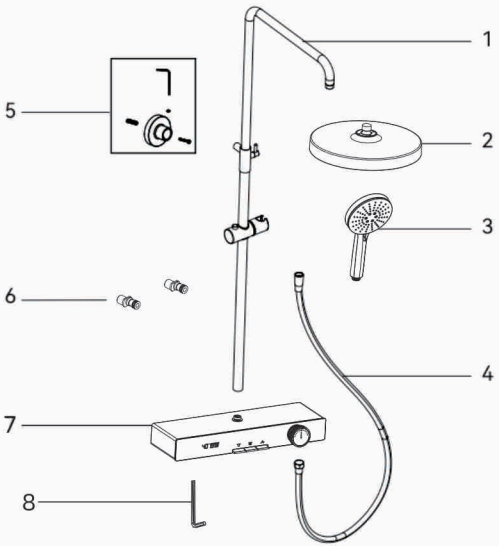

***Applicable pressure: 0.1Mpa-0.5Mpa. Applicable water temperature: 4°C-80°C; If the water pressure is lower than 0.1MPa, install a booster pump, and if the water pressure is higher than 0.5MPa, install a pressure reducing valve. The difference between hot and cold water pressure exceeds for 0.2MPa, install a booster pump or pressure reducing valve to ensure that the hot and cold water pressure is balanced and within 0.2MPa.**

Unit:mm

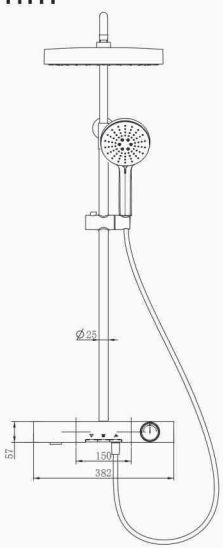

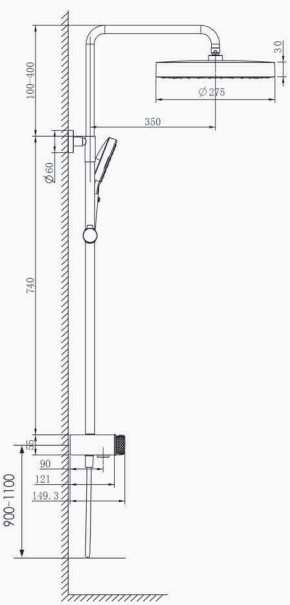

1 Open the valve and flush out impurities inside the pipeline.

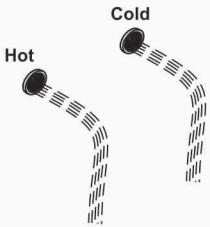

*Please note that the left side is hot water and the right side is cold water.

2 The S-type swivel elbow shall be wrapped with PTFE tape and installed into the wall-embedded water inlet.

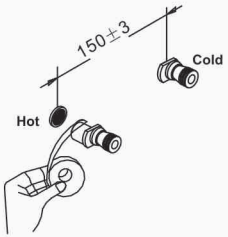

O ring: 20x2.8mm

3 Adjust eccentric joint to level

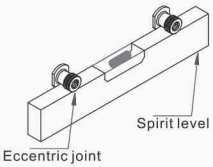



The eccentric joint is 24-25mm higher than the wall

4 Measure the hole spacing of the fixing base holes,insert plastic wall anchors, then fasten the mounting base onto the wall.

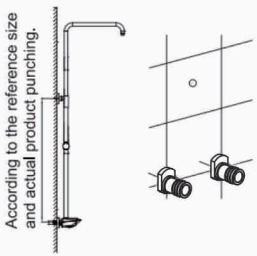

5 Mounting body

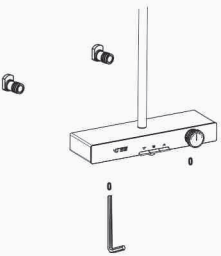

Install the main body of the faucet and the eccentric joint according to the figure and fix it with screws

6 Mount the shower riser rail to the fixing base, and tighten the screws respectively.



7 Install the hand shower, then clip it onto the shower holder.

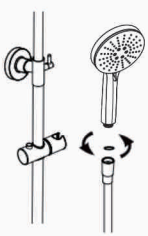

8 Install the shower head and adjust it to a horizontal position.

