# ActiveStart

By Active Controls

# Quick Start Guide ACS4Wxx

Instructions:

1. Disconnect factory installed compressor run wire from the run capacitor or the contactor (N/L2) terminal.
2. Connect the Red wire to the capacitor or contactor where the run wire was removed (N/L2).
3. **Connect the ACS4Wxx Brown wire > to the factory installed compressor run wire previously disconnected in step number 1 using butt connector supplied. If there is a Start Capacitor and or PTCR already in place, additional steps will be required to disconnect them.**
4. Connect the ACS4Wxx blue wire > to the run capacitor (herm/start) terminal.
5. Splice the ACS4Wxx black wire > with the factory install compressor overload switch wire (OL/L1) or connect to the contactor where L1 is connected.

**Download our app from the Apple or Android app stores. Search for ActiveStart Advanced Softstarter and follow steps below:**

1. Add New Device from the connections Screen once the unit is powered ON. **Note: unit only has power when compressor is On.**
2. App will search for available devices.
3. Select device from list of found devices shown as a mac address.
4. The device has a unique pass key on the sticker on the back of the unit.
   a. **Hint: Use a third party QR reader app to read the label and do a copy paste of the key into the app to eliminate any mistakes in reading the letters or numbers.**
5. Once the pass key is entered the device will show voltage and other information on the main screen. Visit our website for complete instructions if needed: Active-Controlsllc.com

App Images:
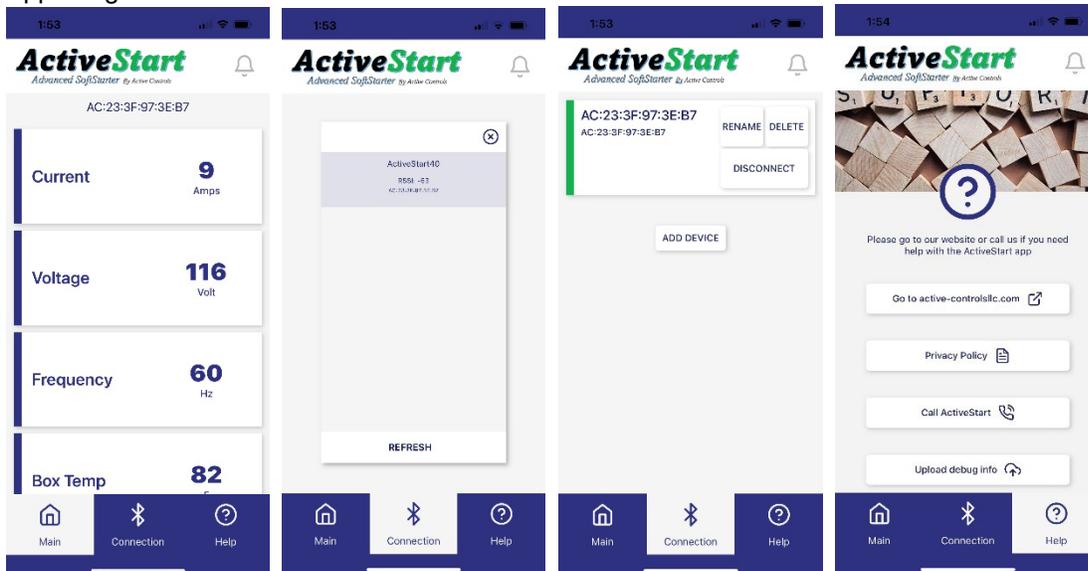


Please scan QR codes below to download the app or go to our website.



Website        ANDROID        APPLE IOS