SmartRooms
Thermal Comfort System
By Thermo-Ray

PC-3 Gel Endcap Installation Instructions

1. Using the 3M567 Connectors, connect the main feed to the individual panel as is illustrated below.

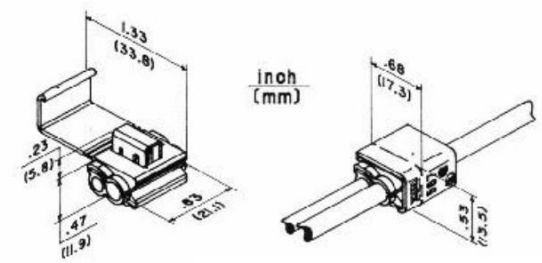

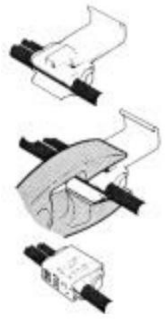

INSTRUCTIONS

Use only with insulated wire. Do not strip insulation.

1. Slip circuit (run) wire into side slot. Insert the wire up to stop making sure the wire is visible in the window.
2. Make connection with 9" electrician's (lineman's) pliers, by driving "U" contact down flush with top of connector.
3. Close hinged cover until it locks.

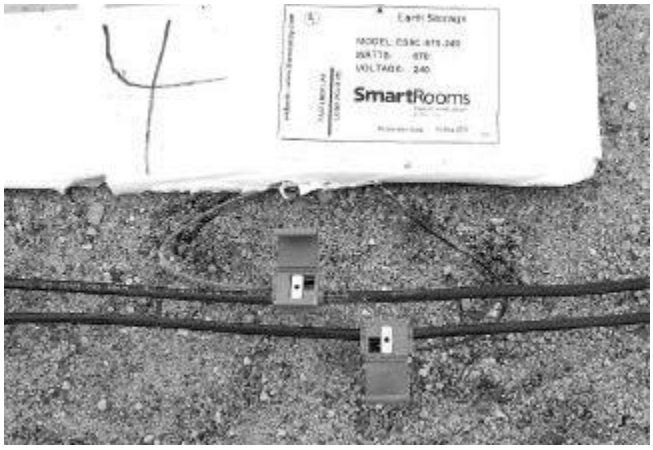

2. Open the hinged closure being careful not to contaminate gel surfaces. Place the feed wire and 3M connections into the gel Endcap.

NOTE: All wires (supply and cold leads) must be inserted at the ends of the gel cap.

3. Compress the gel closure over the 3M connectors making sure that both locking snaps are engaged. Inspect the Endcap. A properly installed enclosure will have both snaps securely locked. Gel will be visible at both ends of the enclosure.

4. Fasten the strap on the PC-3 Endcap using the screw provided making sure to install the drywall screw in the correct fastening position as shown on the panel label.

Distributed by:
Petra Building Solutions Inc.
Toll free: +1 (888) 992-2889
Local: +1 (438) 388-7700
info@petrabuildingsolutions.com
www.petrabuildingsolutions.com

Revised January 2009

PETRA
Solutions du bâtiment Building Solutions