

SARGENT KESO Security System Cylinder

Special Removable Cylinder Instructions


SARGENT

ASSA ABLOY


For use with 170 Series Mortise Lock Cylinders 164 Rim Type Cylinders

To Remove Cylinder

Insert control key and turn counterclockwise until stop is reached.

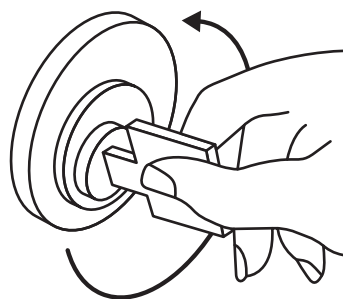


With key in this position pull out cylinder.

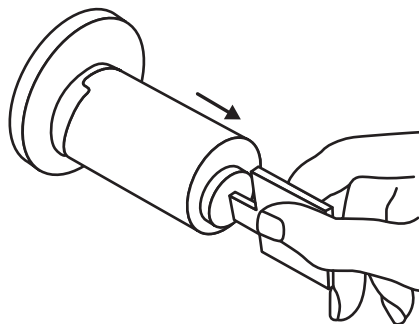


To remove key - return key to vertical position position and withdraw.

To Replace Cylinder

Insert control key into replacement cylinder and turn counterclockwise until stop is reached. With projection at end of cylinder vertical as shown, slide into position. If cylinder does not seat itself, rotate cylinder slightly each way until it does.

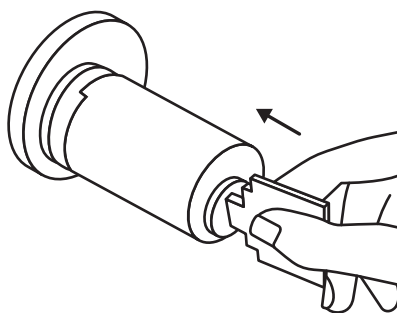

To remove key - return key to vertical position position and withdraw.

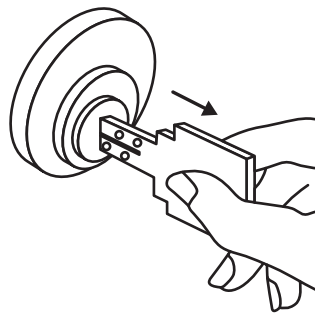

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

1-800-727-5477 • www.sargentlock.com

A5687 05/24 Rev 9

Copyright © 2022, 2024, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer
and more open world

SARGENT KESO Security System Cylinder

Special Removable Cylinder Instructions


SARGENT

ASSA ABLOY


For use with 170 Series Mortise Lock Cylinders 164 Rim Type Cylinders

To Remove Cylinder

Insert control key and turn counterclockwise until stop is reached.

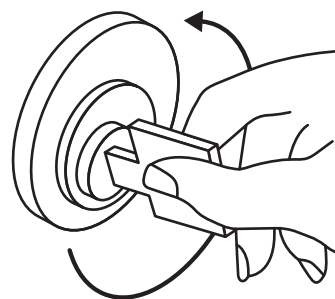


With key in this position pull out cylinder.

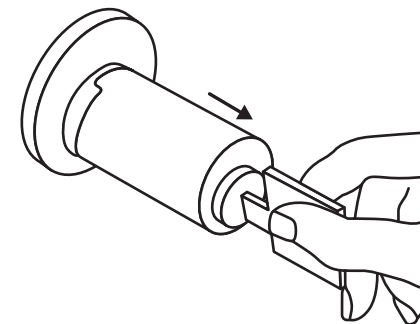


To remove key - return key to vertical position position and withdraw.

To Replace Cylinder

Insert control key into replacement cylinder and turn counterclockwise until stop is reached. With projection at end of cylinder vertical as shown, slide into position. If cylinder does not seat itself, rotate cylinder slightly each way until it does.

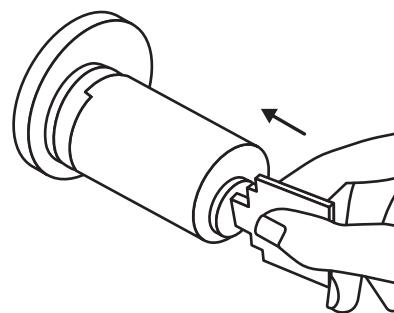

To remove key - return key to vertical position position and withdraw.

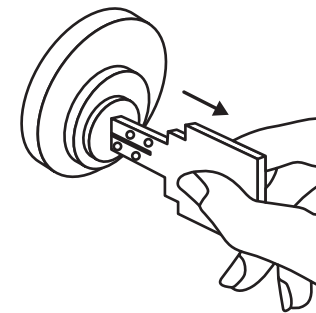

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

1-800-727-5477 • www.sargentlock.com

A5687 05/24 Rev 9

Copyright © 2022, 2024, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer
and more open world