



# Installation Instructions

## 800PT & 900PT Series


### Freewheeling Lever Handle with Exit Device Spindle Interaction

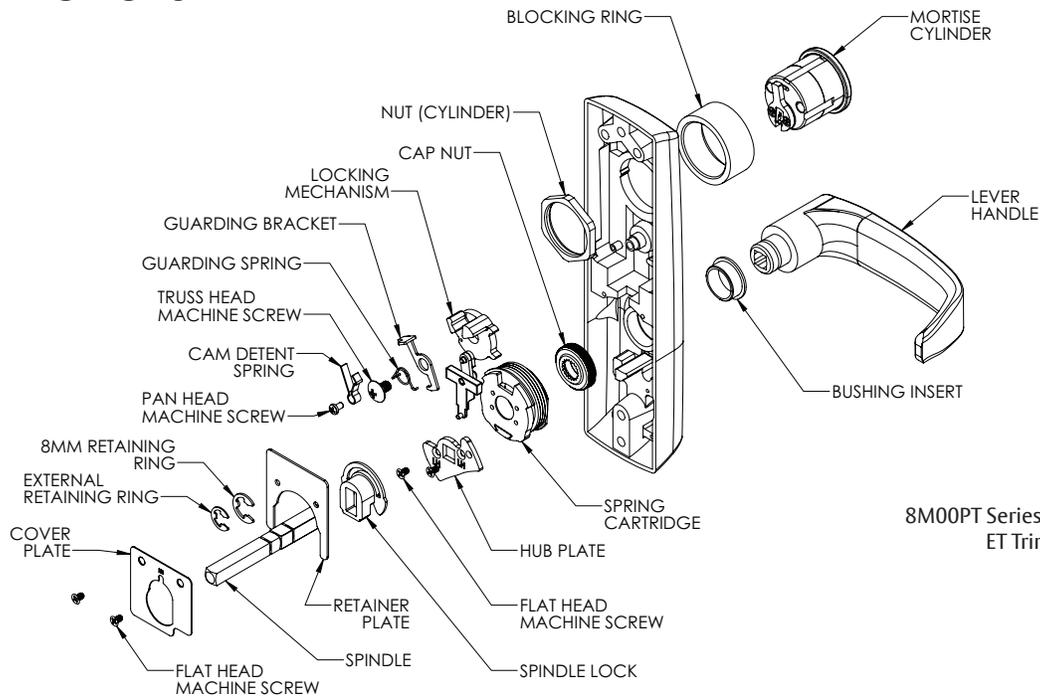


8M00PT Series LH Freewheeling  
ET Trim shown

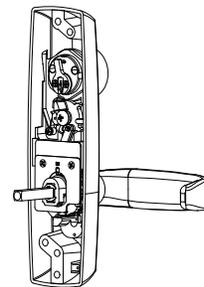

8M00PT  
Trim Shown

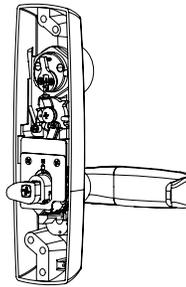

8CV00PT  
Trim Shown

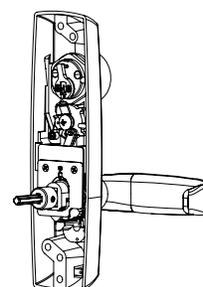

800PT  
Trim Shown

#### **⚠ WARNING**

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

# 800PT & 900PT Series


## Freewheeling Lever Handle with Exit Device



ASSA ABLOY

### Installation Instructions

800PT / 900PT Series trim used with PED5200, PED5200 A, PED5200 HC, and PED5200 A HC rim type exit devices.

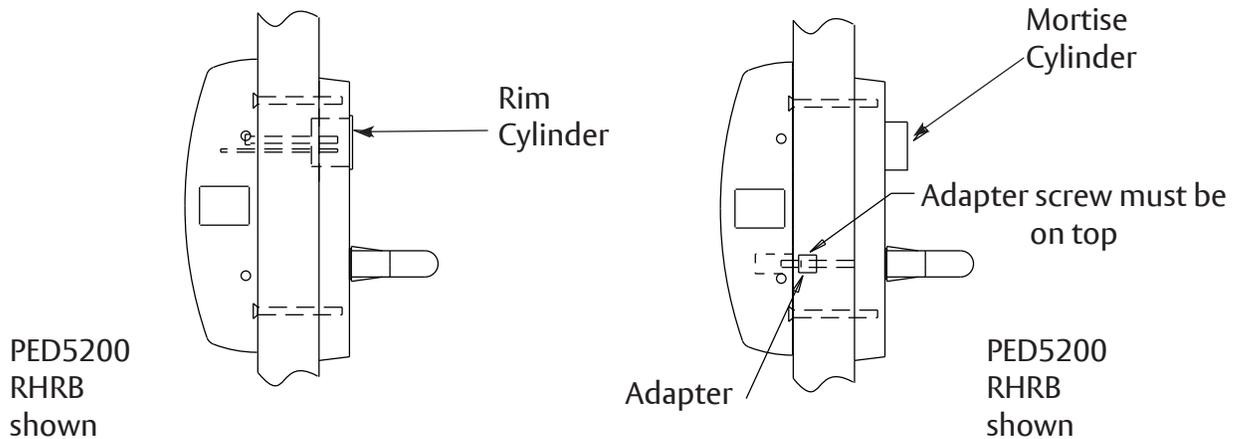


**Important:** See instruction sheet FM577 for PED5200 (A) AND PED5200 (A) HC and FM578 for PED4200 exit devices mounting. Securely fasten adapter to spindle with set screw before mounting.

8CV00PT / 9CV00PT Series trim used with PED4800, PED4800A MD, PED5800 MD, PED5800 A MD, PED5800 WD and PED5800 A WD concealed vertical rod exit devices.

**Important:** See proper instruction sheet for exit device mounting.

- FM582 - For PED4800 and PED4800 A
- FM608 - For PED5800 WD and PED5800 A WD
- FM581 - For PED5800 MD and PED5800 A MD

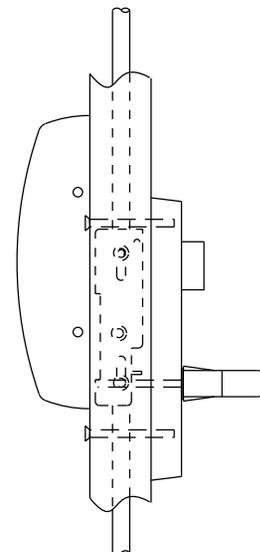





PED5800 RHRB shown

FM606 01/23

# 800PT & 900PT Series

## Freewheeling Lever Handle with Exit Device

### Installation Instructions

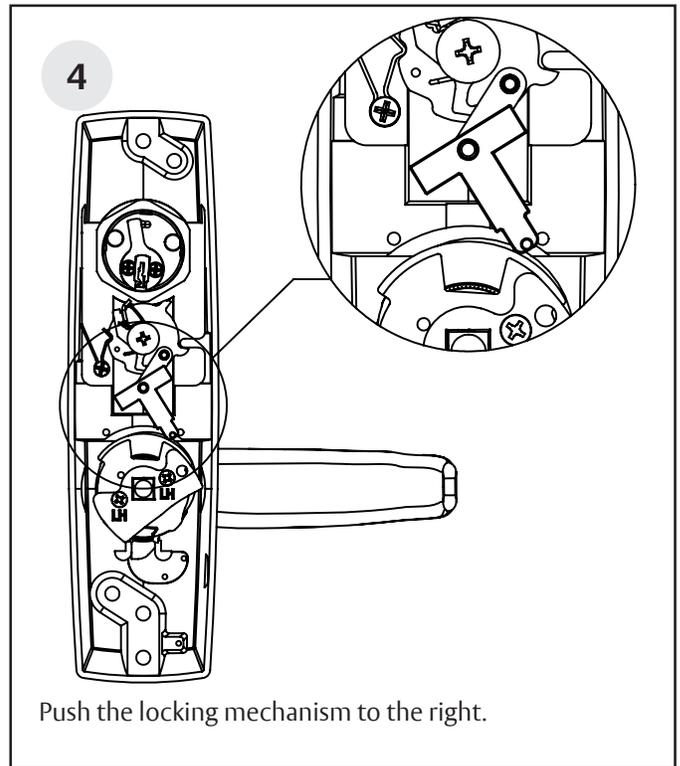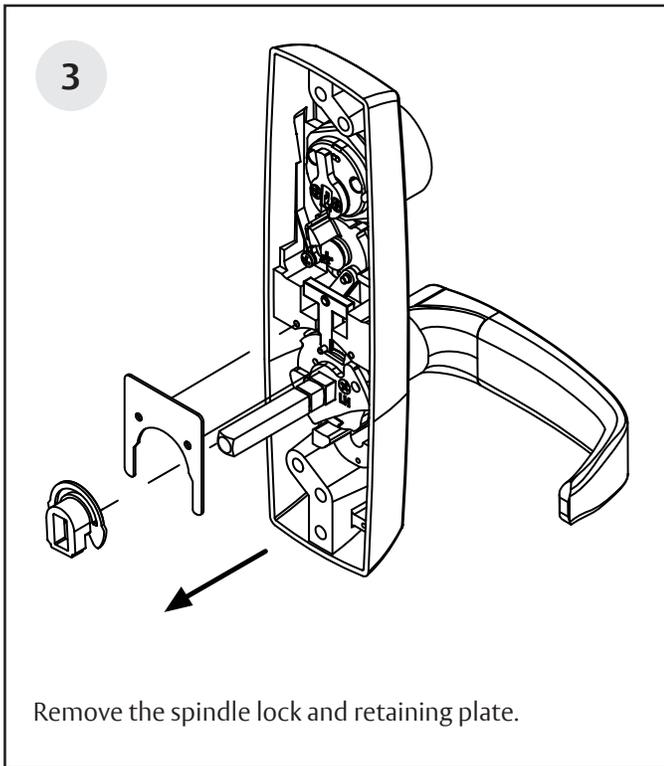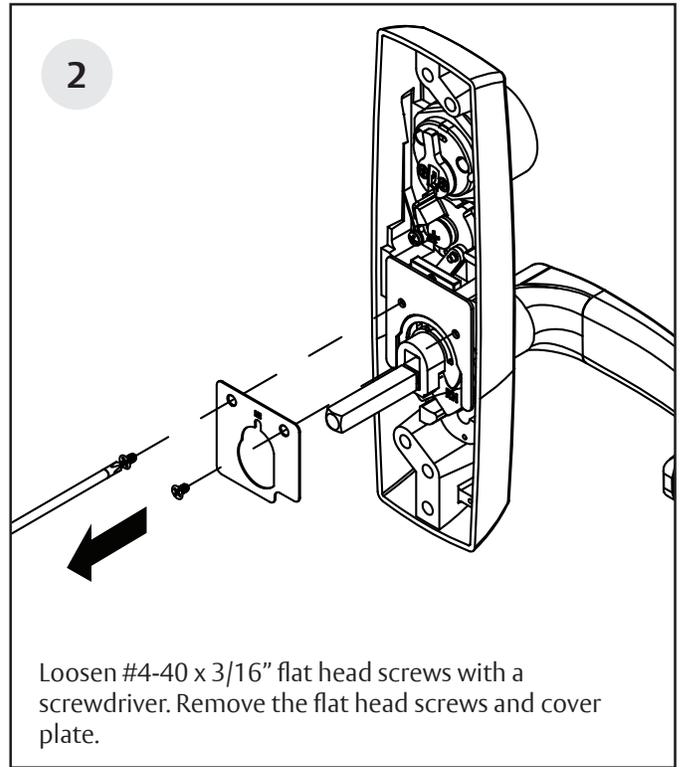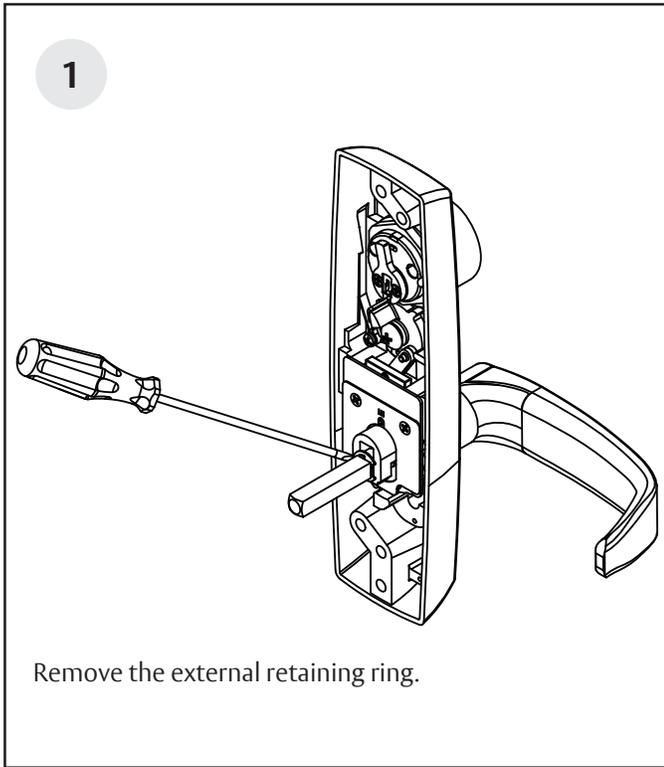

FM606 01/23

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world





# 800PT & 900PT Series

## Freewheeling Lever Handle with Exit Device

### Installation Instructions



ASSA ABLOY

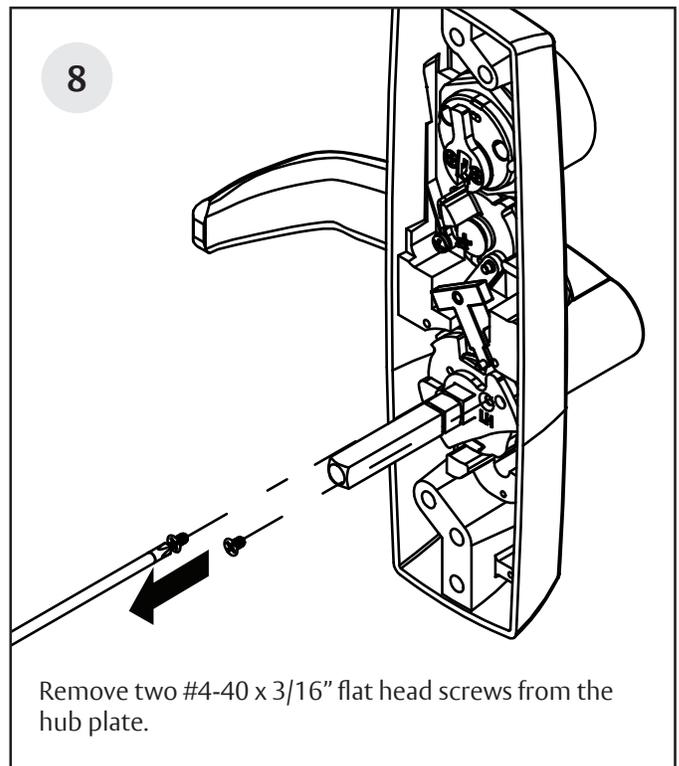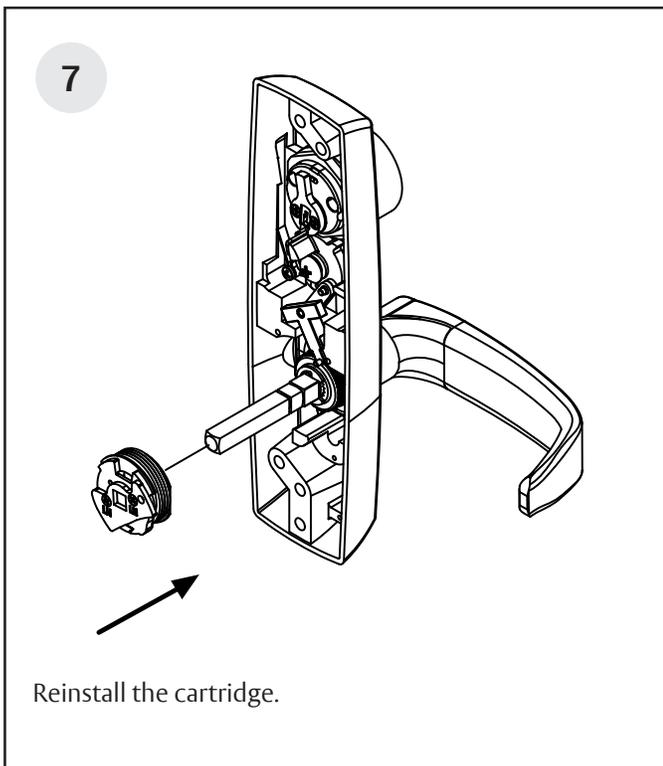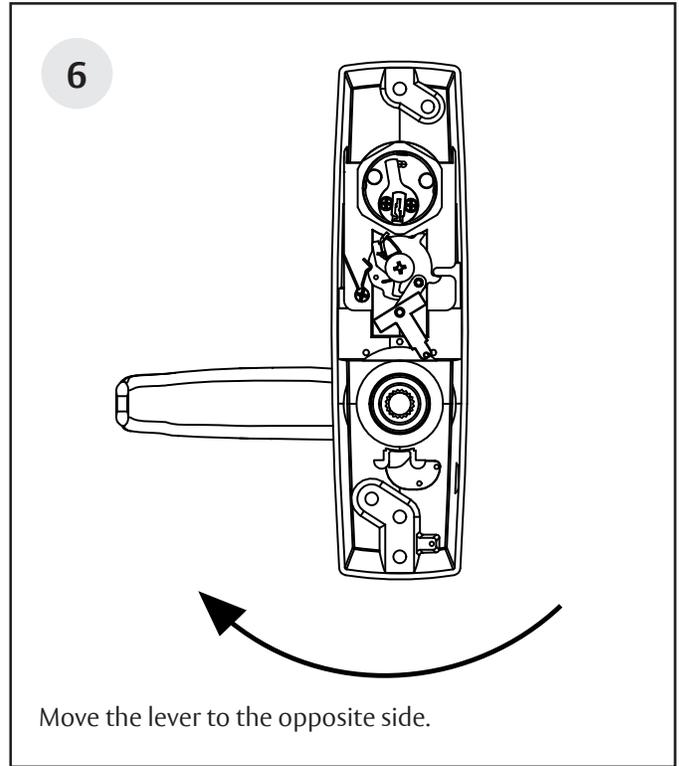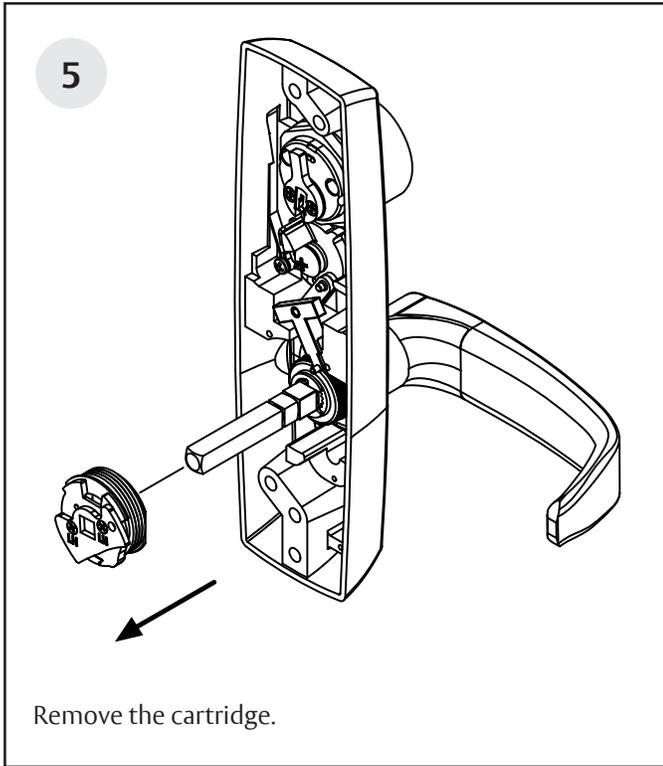

FM606 01/23

1-800-543-3658 • [techsupport.corbinruswin@assaabloy.com](mailto:techsupport.corbinruswin@assaabloy.com)

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent [www.assaabloydss.com/patents](http://www.assaabloydss.com/patents).

# 800PT & 900PT Series

## Freewheeling Lever Handle with Exit Device

### Installation Instructions



9

RIGHT HAND  
LEFT HAND

Turn the hub plate according to the door's handing.

10

Replace two #4-40 x 3/16" flat head screws to secure the hub plate.

11

Move the locking mechanism to its original position.

12

Insert the spindle lock. Make sure that the locking mechanism inserts into the slot.

FM606 01/23





1-800-543-3658 • [techsupport.corbinrusswin@assaabloy.com](mailto:techsupport.corbinrusswin@assaabloy.com)

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent [www.assaabloydss.com/patents](http://www.assaabloydss.com/patents).

# 800PT & 900PT Series

## Freewheeling Lever Handle with Exit Device

### Installation Instructions

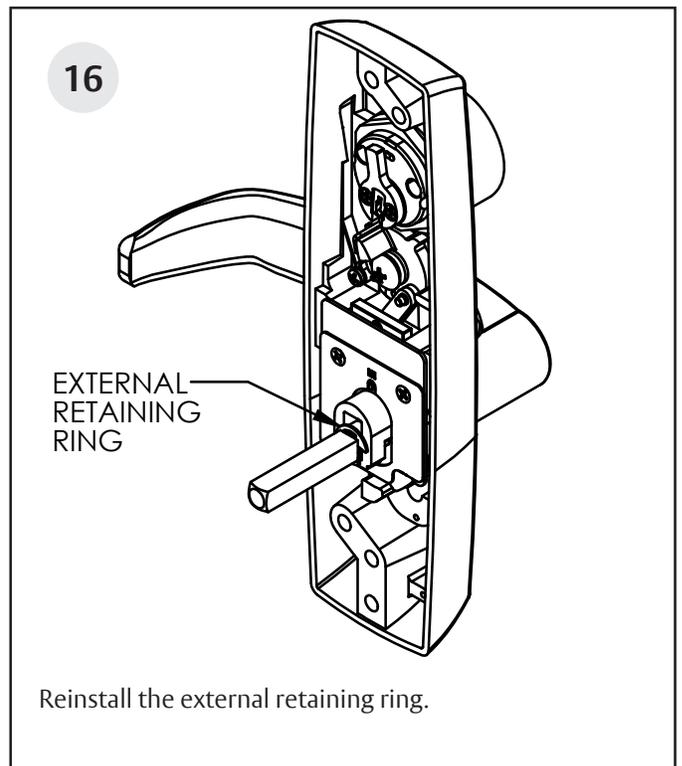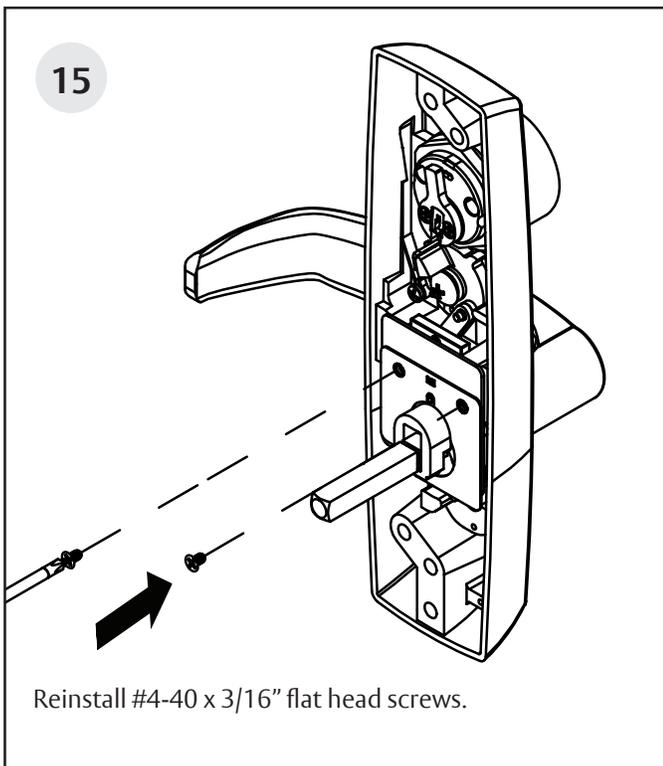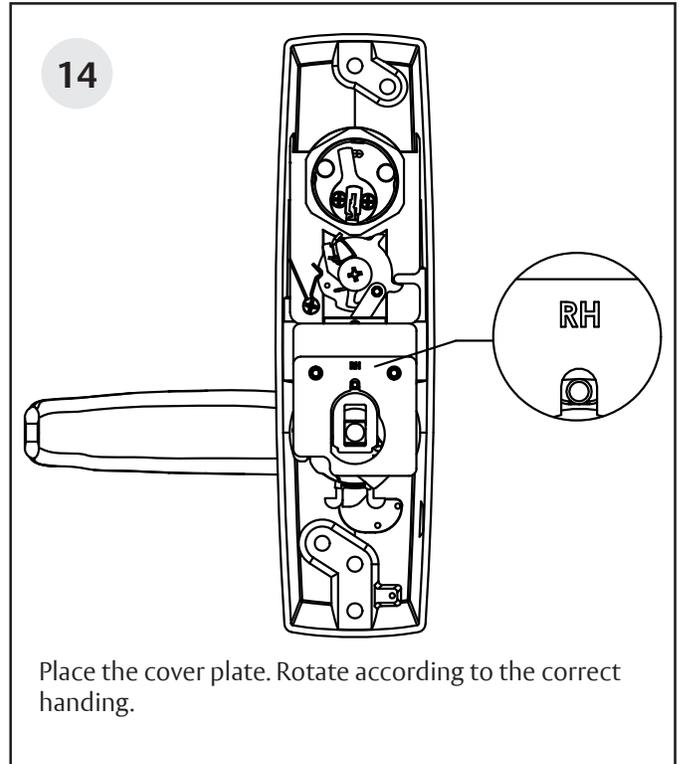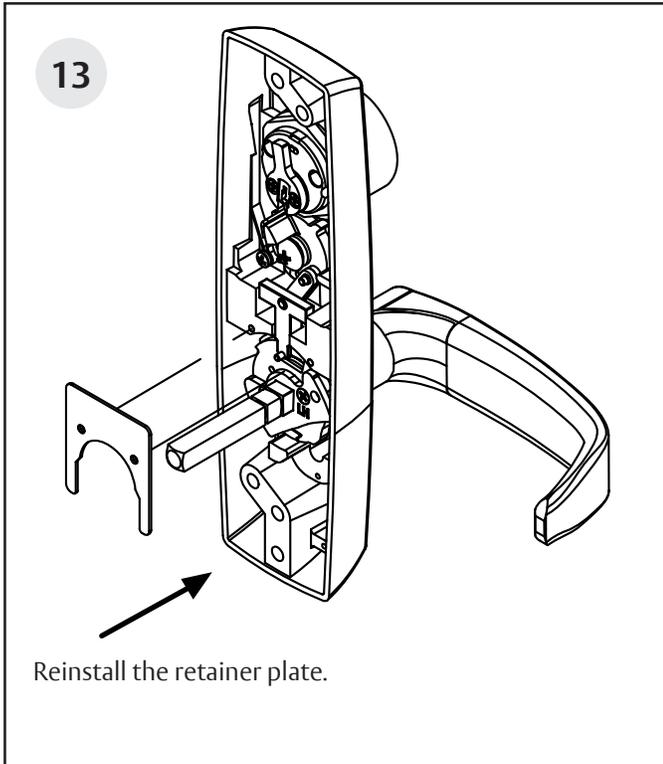

FM606 01/23

1-800-543-3658 • techsupport.corbinruswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloyds.com/patents.

# 800PT & 900PT Series

## Freewheeling Lever Handle with Exit Device

### Installation Instructions



 **WARNING**

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).