





USB electric air pump

JY-023 Instructions



Please fully charge the battery before using it for the first time.
Please read the operating instructions carefully before using this product.
Please follow the correct way after fully understanding.

pay attention.

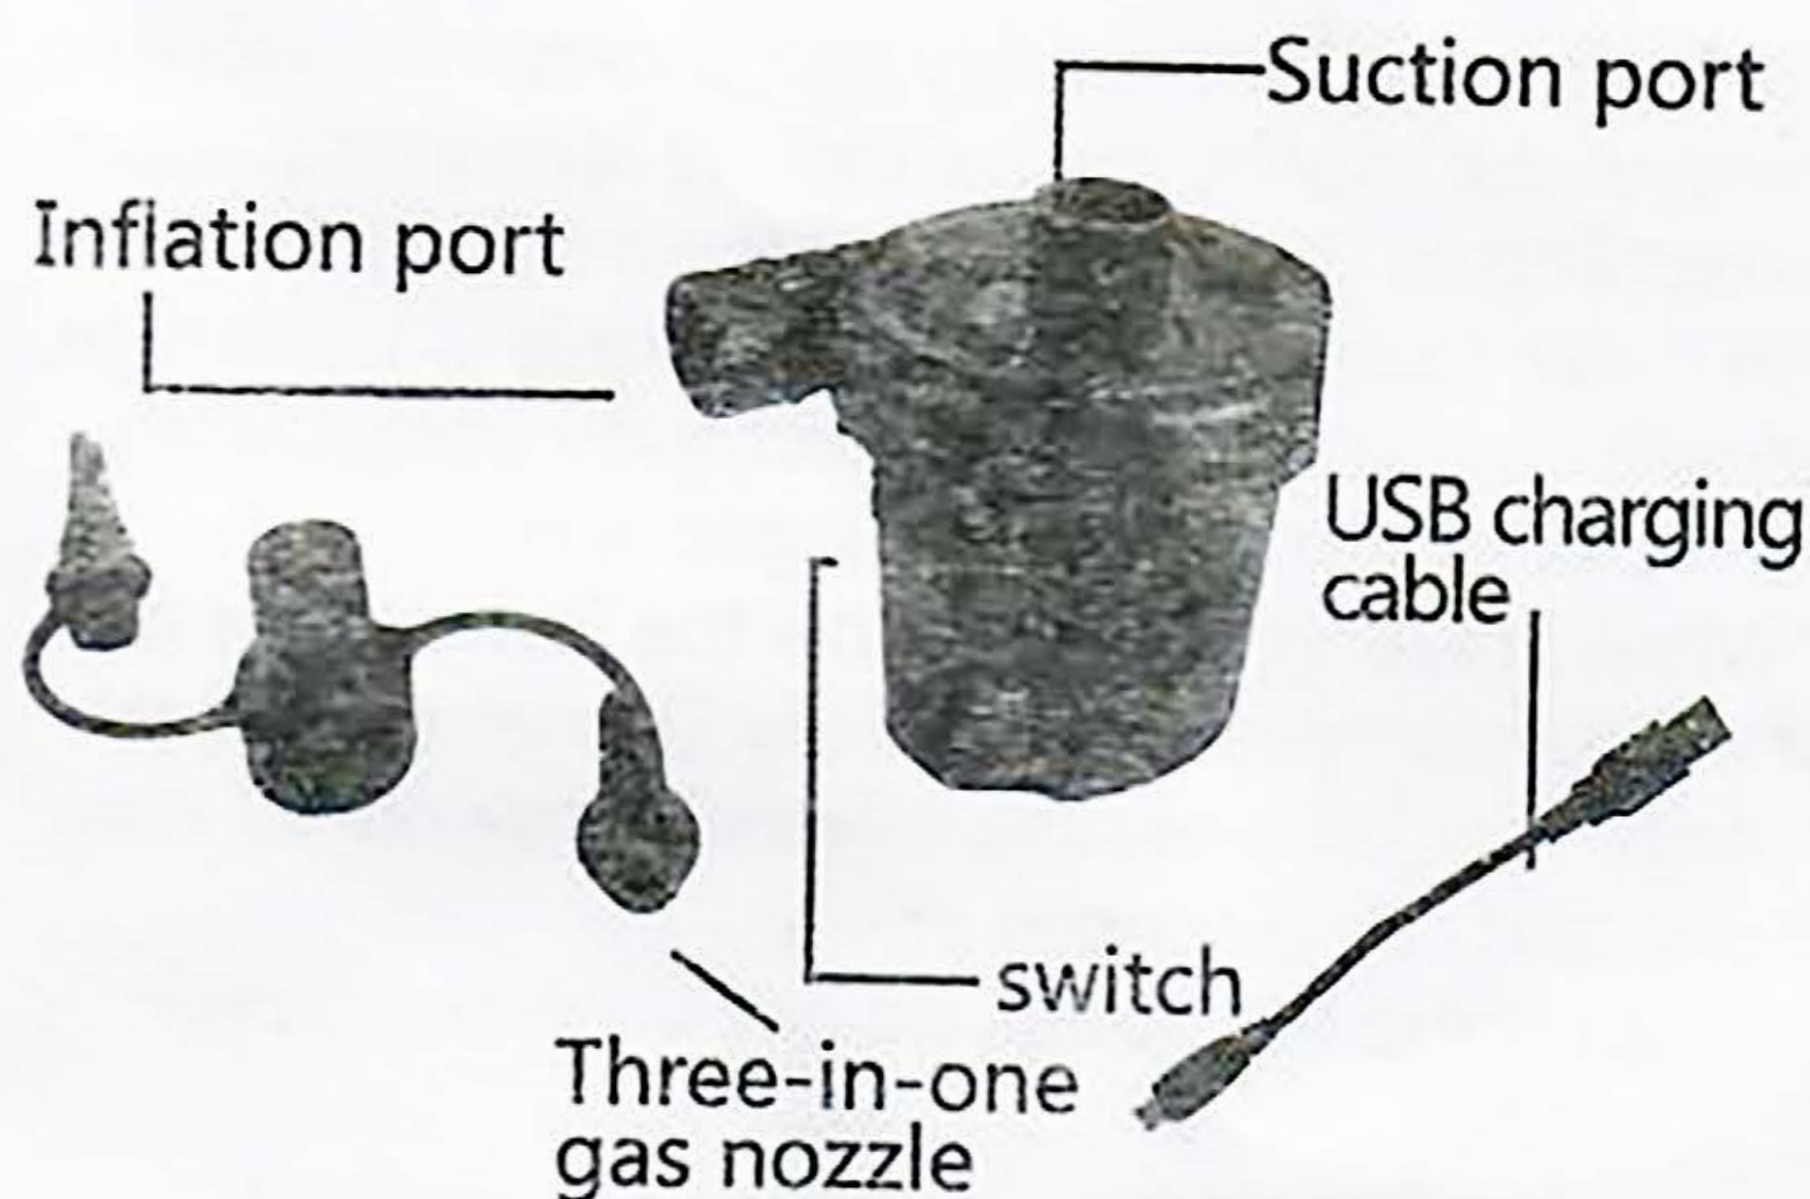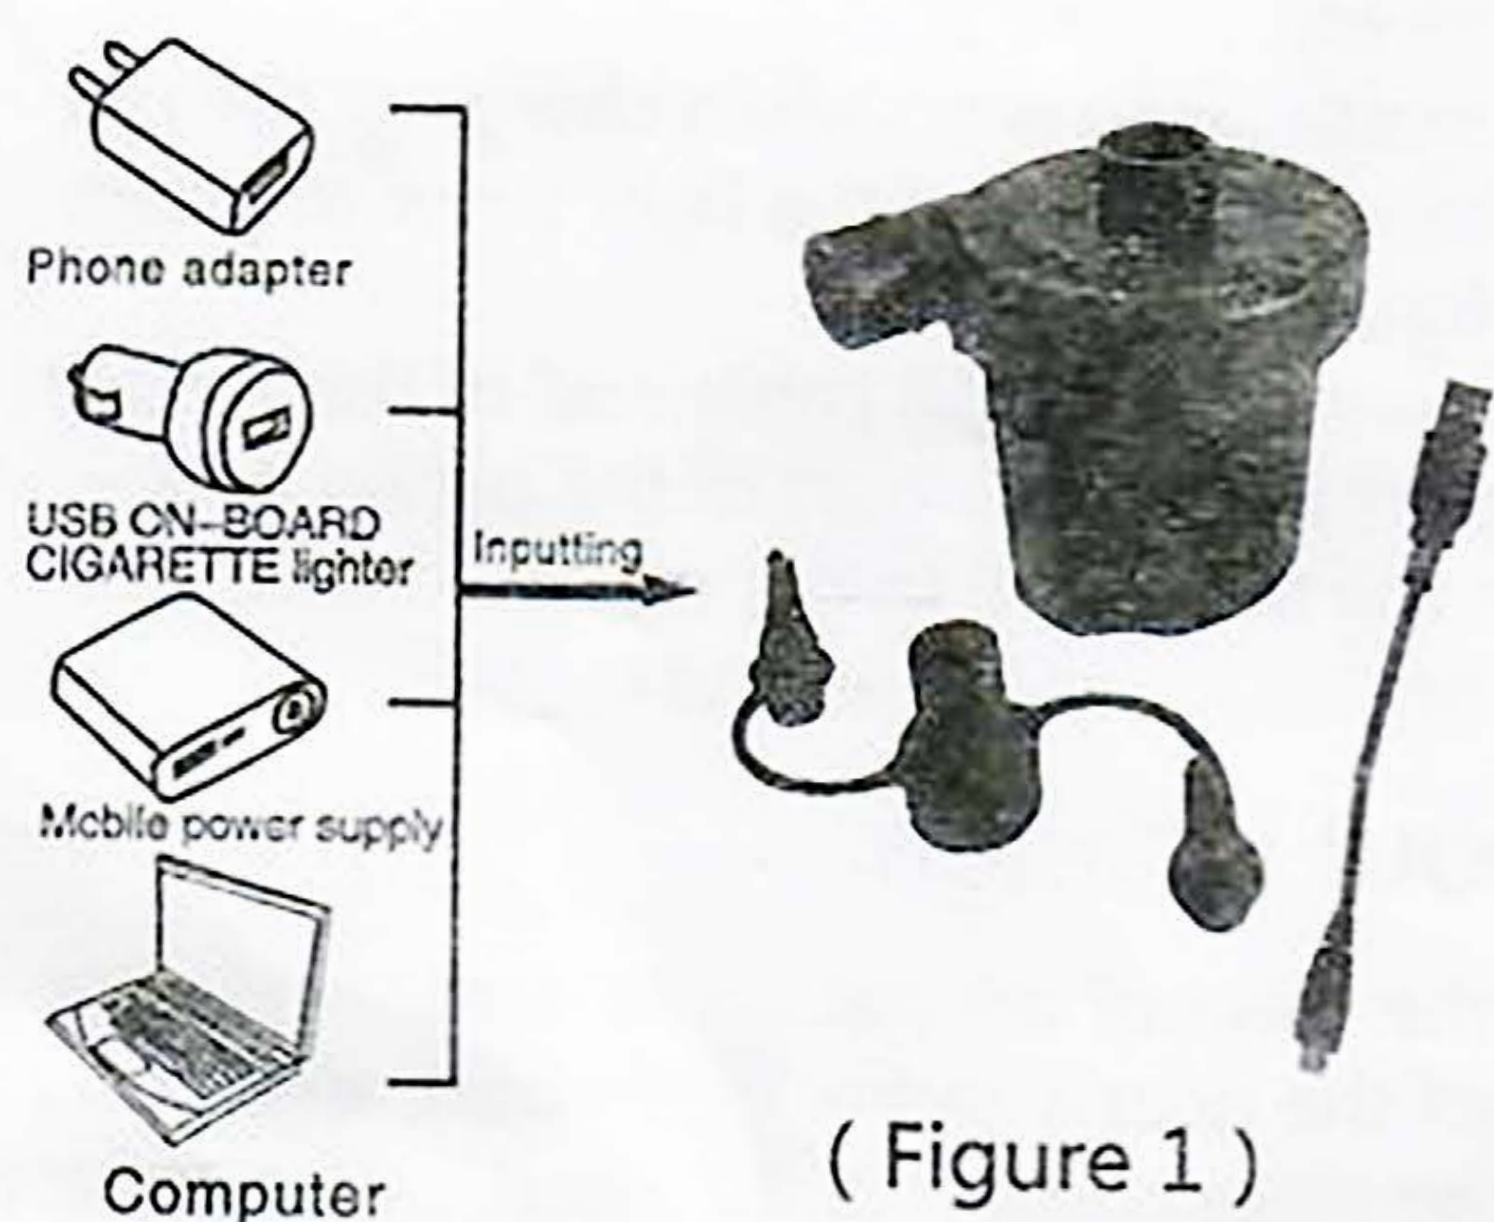

Precautions

*This pump is used to inflate/deflate objects, such as inflatable air beds, air mattresses, inflatable toys, inflatable tents, etc. At the same time, this product can be said to be convenient outdoors.


• Keep the air pump out of the reach of children.

*Do not block the inflation/deflation port, and always maintain smooth ventilation.

*In order for you to use the product normally, please charge it fully at least once within six months.

*In order to inflate quickly and shorten the working time of the motor, please always use a suitable nozzle according to the valve size of the inflated item.

*In order to reduce the risk, if there is any damage, please contact a qualified electrician immediately to repair or replace the damaged wire.

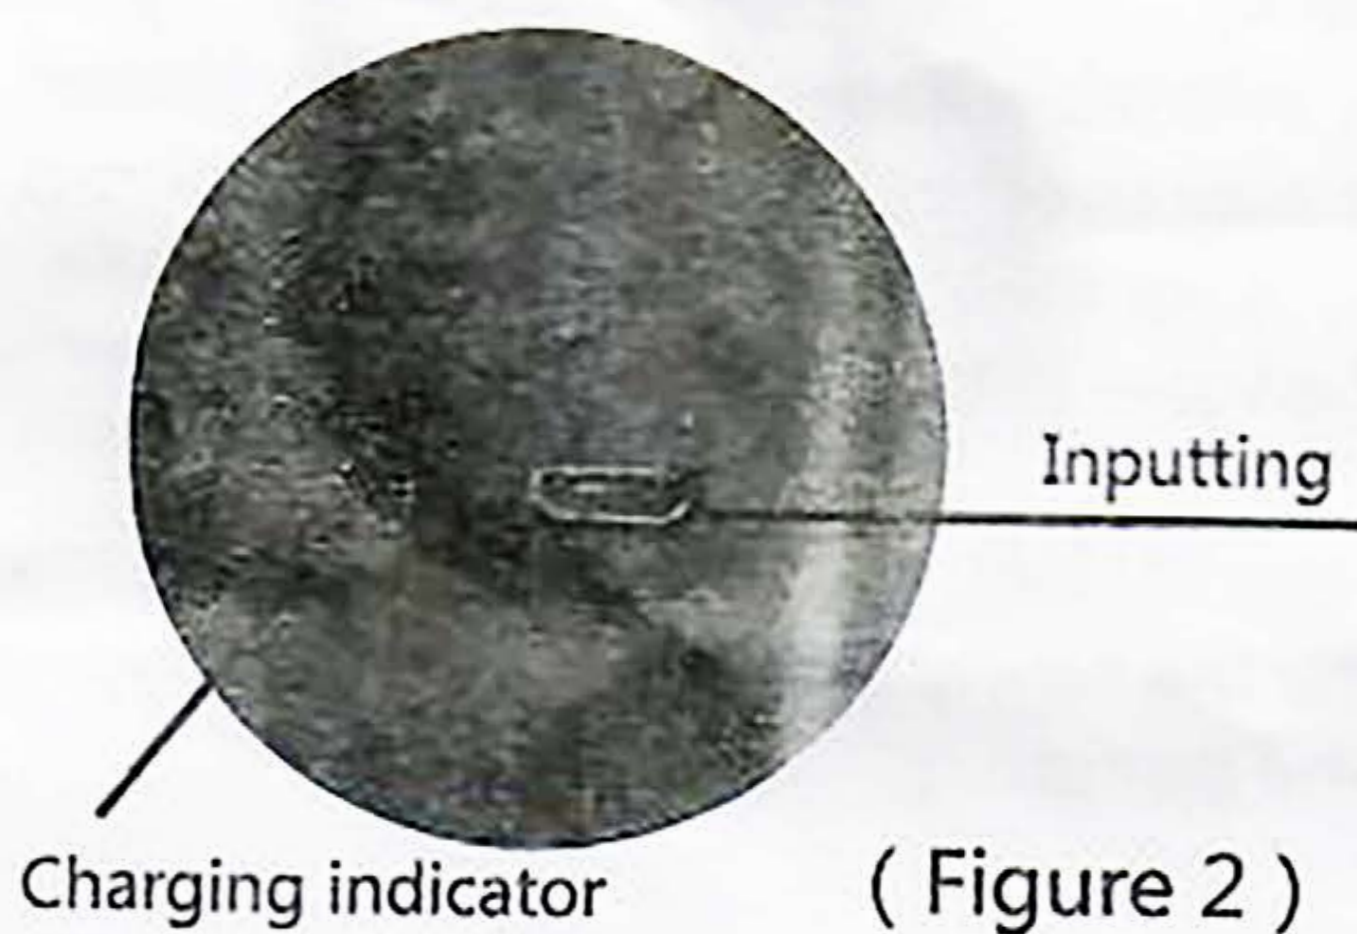

USB electric air pump

JY-023 Instructions

table of Contents

I. Important safety information.....	2
II. Matters needing attention	3
III.Charging precautions	3
IV>About inflation	4
V.About deflation	6

1

- *In order to inflate quickly and shorten the working time of the motor, always use the appropriate nozzle according to the valve size of the inflatable object.
- *In order to reduce the risk, if there is any damage, please contact a qualified electrician immediately to repair or replace the damaged wire.
- *When inflating, please follow the instructions of the inflatable product carefully. Do not exceed the recommended pressure, otherwise the object may burst and cause serious injury.
- *When using the pump, do not leave the pump unattended.
- *Do not use the pump in a humid environment.
- *When using the pump, do not suck sand, small rocks, etc. into the air inlet or the air outlet.
- *Do not look inward or point the inflation/deflation port toward your eyes when the pump is working.

1. Matters needing attention when charging

- *Please make sure the voltage is 5V USB interface when charging.
- *Universal USB cable; it can be charged in the car, or you can use an adapter with a USB interface, such as a mobile phone adapter, mobile power supply,

3

3. About deflation

- *Open the valve of the inflatable item.
- Connect the nozzle to the bleed port, then insert it into the valve and switch to bleed/switch to stop. (The symbol on the switch means "ON", "0" means "OFF") (Figure 4) The valve of the inflatable item should be blocked. Otherwise, it may overheat and damage the pump. For small valves for inflatable items, you can open the flap of the valve with your fingers to allow air to escape.
- In order to quickly inflate items with the screw valve, unscrew the safety bolt, and then directly inflate with the pump.



(Figure 3)



(Figure 4)

6

computer, etc. (figure 1)

- *The indicator light is on when charging, the red sign is fully charged and the light turns to green 100%. (figure 2)
- *Please connect the USB cable end of the mobile device port to the USB port of the pump, and connect the other end to the mobile device.
- *Charging time is about 4 hours.

2. About inflation

- *Open the valve of the inflatable item.
- *Connect the nozzle to the bleed port, then insert it into the valve and switch to bleed/switch to stop. (The symbol on the switch means "ON", "0" means "OFF") (Figure 4)
- *The valve of inflatable items should not be blocked. Otherwise, it may overheat and damage the pump. For small valves for inflatable items, you can open the flap of the valve with your fingers to allow air to escape.
- *In order to quickly inflate items with the screw valve, unscrew the safety bolt, and then directly inflate with the pump.

4