


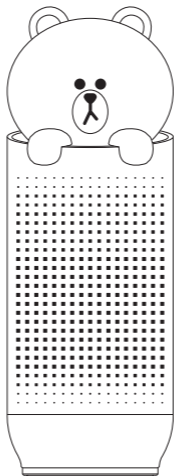


BROWN Air Purifier

Guide and Quality Assurance



MODEL	CAP-BF-PBR1/ HB-LPBR1
Power Supply	USB 5V (Micro 5 Pin)
Power Consumption	MAX 4W
Dimension	70 x 70 x 196mm
Weight	250g

Basic operating manual

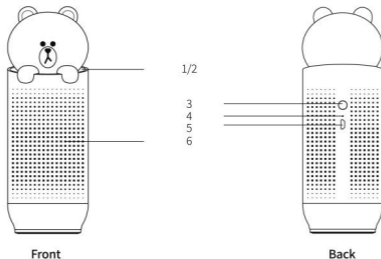

1 Air Outlet

Where purified air comes out

2 LED Sterilizer

To display operation mode,
Sterilizing filter with LED sterilizer

3 Power button

Power ON / OFF/ Fan Mode Control
Press and hold for 2 sec. to turn off LED

4 Power LED

Red LED ON when power is connected,
Orange LED flashes when filter
replacement alarm is activated

5 Micro 5 Pin

USB cable connection

6 Air Inlet

Place to inhale contaminated air

Be careful not to block the air outlet and inlet.

The red LED is turned on when power is connected.

Press the power button once: level 1 of fan speed without LED.

Press 2 times: Turn the Blue LED on.


Press 3 times: Operate level 2 of fan speed.

Press 4 times: Operate Turbo mode.

Press and hold for more than 2 seconds, the operation status
is maintained and the LED turns off.

Getting Started

Please check the components. The filter is built into the body.



Main Body



Filter



USB Cable



Manual and
Warranty

Use a dedicated cable to connect the power supply (sold separately) such as the USD adapter, cigar jack, or power bank.

After connecting the power, press the power button on the back of the product to operate the unit.



Adapter



Cigar Jack




Power Bank




Filter Replacement

When the power LED flashes in orange, it is time to replace the filter.
When used 3-4 hours a day, it can be used for up to 4 months.

Turn the bottom part clockwise and remove it from the main body.
Turn the filter counterclockwise and remove it from the bottom part.

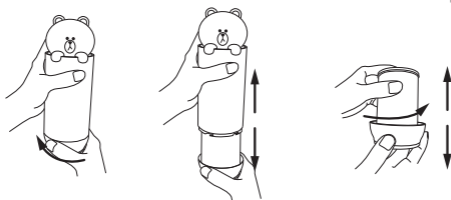

Fit the new filter to the bottom and assemble in the reverse order of separation. When assembling, please make sure that the filter, bottom part and main body are fitted properly.

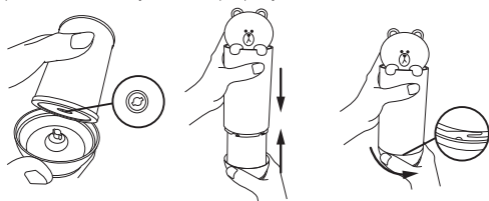

Press the power button for at least 5 seconds after replacing the filter
to reset the filter replacement alarm.
(The orange LED is OFF)

Caution for Safety

Caution for power

- Do not extend USB cable arbitrarily.
- Do not damage USB cable by bending or pulling excessively.
- Do not use damaged or loosened USB cable.
- Do not touch the product or USB cable with wet hand.
- Be careful for the children not to touch or operate the product.
- The power charger is not supplied by manufacturer, please purchase it or Micro 5pin charger (5V, 1.0A) can be used.

Caution for installation

- Do not install the product in the place with risk of gas leakage.
- Do not install the product on a slope or uneven surface.
- Do not install the product on a wet floor.
- Check if there is any obstacle around air inlet or outlet.

Caution for operation

- Do not block air inlet and outlet with other foreign matter.
- Do not use around hot object or place with a risk of fire.
- Do not use when main body and filter are separated.

Caution for filter

- Avoid making direct contact with filters in use such as smelling or touching.
- Separate bottom part and filter to remove dust using small brush.
- Cleaning with water is not recommended as it may cause degradation of the filter.

Warranty

CLAIR, Inc. implements the warranty of the product as below according to the consumer indemnification regulation. The warranty period of Clair product is 1 year from the purchase date.

Name	Product Name Brown Portable Air Purifier
Tel.	Model Name CAP-BF-PBRI/ HB-LPBRI
E-Mail	Serial No.
Address	Place of Purchase
	Date of Purchase

The warranty period of the main body and cable is 1 year from the purchase date.

The package and manuals etc. are not guaranteed.

The compensation and reception notice shall be made within 7 days from application date, and repair and compensation shall be made within 14 days from the application date.

In the case of courier delivery, shipment to the manufacturer is borne by the customer, and the manufacturer is responsible for delivery to customer.

The below will be subject to paid repair.

- In case of failure due to use of non-genuine parts
- In case of failure due to user's carelessness, repair and modification
- In case of failure due to non-compliance with the matters specified in the user manual

Paid repair is available after the warranty period.

Please provide the warranty when requesting repairs.

The warranty is not reissued, please keep it with the user manual.



Customer service center
02-581-2918

clair

CLAIR, Inc.

Inquiry and consulting

T. +82 2 581 2918 / E. cs@clair.kr
www.clair.kr

CLAIR, Inc.
2F, 148 Gangnam-daero, Seocho-gu,
Seoul, Korea