


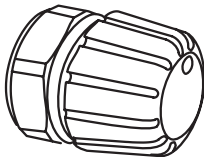

Installation Guide

446510



®



ORAS GROUP

Isometsäntie 2, P.O. Box 40
FI-26101 Rauma
Finland
Tel. +358 2 83 161
Fax +358 2 831 6300
Info.Finland@oras.com

www.oras.com



945843/01/11

Stabila muovisen käsikäyttöpyörän 446510 asennus

- Kierrä säätöhattu täysin auki ennen asennusta.
- Laita käsikäyttöpyörän sakarat ja rungon rajoitinurat kohdalleen.
- Paina käsikäyttöpyörä runkoa kohden ja kierrä kiinnitysmutteri kiinni (kevyt kiristys).
- Säätöhatun pyörinnän voi halutessa lukita 2 mm kuusiokoloavaimella. Lukitusta suoritettaessa pyöritä säätöhattua hieman. Näin varmistat oikeanlaisen lukituksen!

Montering av Stabila manuell reglerratt 446510

- Öppna reglerratten helt före monteringen.
- Placera reglerrattens tappar så att de överensstämmer med spåren i ventilhuset.
- Tryck reglerratten mot ventilhuset och vrid fast fästmuttern (lätt åtdragning).
- Reglerrattens rörelse kan låsas med en 2 mm insexnyckel om så önskas. Vrid reglerratten en aning vid låsningen. På så vis försäkrar du att låsningen blir riktig!

Installation of Stabila 446510 plastic manual wheel

- Unscrew the adjustment cap as far as it goes before installation.
- Align the points of the manual wheel and the limiter grooves of the body.
- Press the manual wheel against the body and do up the locking screw (lightly).
- If desired, the adjustment cap can be locked with a 2 mm Allen key. While locking the cap, rotate it slightly to ensure correct locking!