



AccuPunch™ Probe Insertion Tool - Instructions for Use

1. Place Probe onto piercing needle as shown below: Note: Be careful; Needle is extremely sharp!

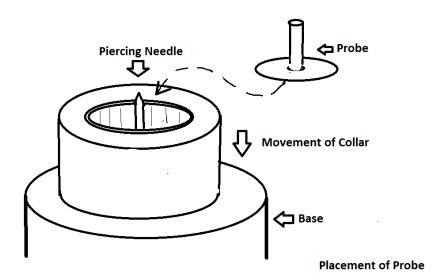


2. Place Grommet in upper handle of AccuPunch as shown below. Be sure that concave side faces out (away from handle). Note: AccuPunch uses powerful magnets to center the Upper Handle/ Grommet Holder to bottom base of AccuPunch so you must ensure that grommet is centered in holder and is not pulled to one side by locating magnets.

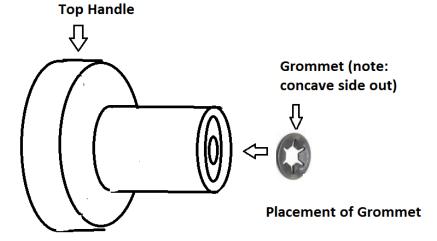



3. Orient Mask as shown below:
Note: Be sure that the needle/probe is centered in the breathing zone of the mask.

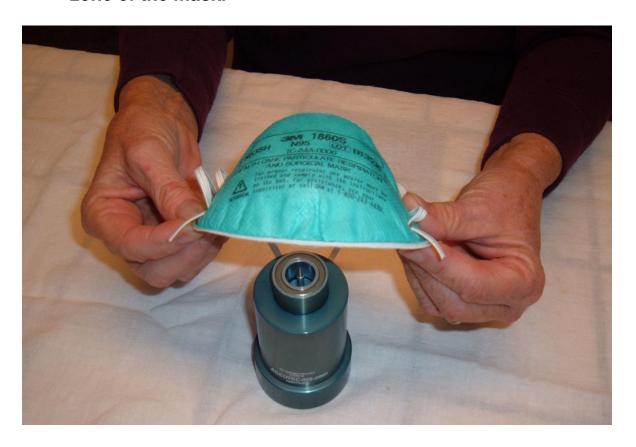

4. Place upper handle/grommet holder on mask. Note: internal magnets will center the grommet.





5. Picture showing emplacement of Probe:

