

1. Before You Start


Download and Open Mobile App



OneRADON - Android




OneRADON XP - iOS

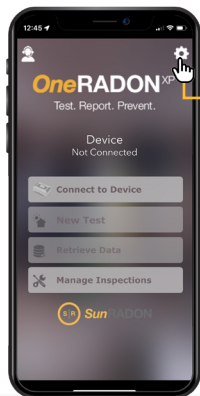

Select Settings
(Gear Symbol)

This is a one-time settings only

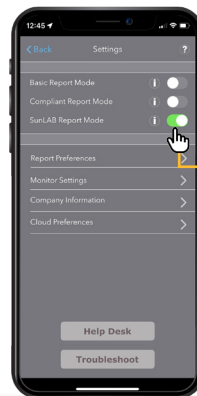

Select SunLAB
Report Mode

In this mode all report preferences are managed through your OneRADON Cloud account. Any report submission will have these settings applied.



2. Start New Test



Open app and Select
Connect to Device




Click Connect 1028XP

*Drop down displays
all devices that are
turned on and in
bluetooth range,
choose device and
click Select.*




Once connected
select New Test

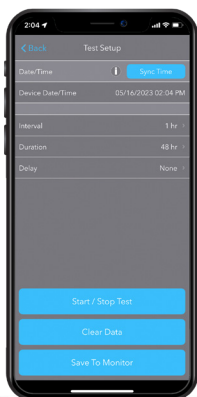

Ensure test setup parameters
are correct, then click
Start/Stop Test



The monitor time is now
synchronized, and test is started.

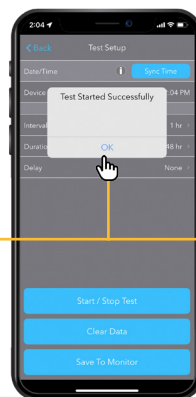

Click ok



3. Retrieve Test Data and Start Report



Open app and select
Connect to Device




Click Connect 1028XP


*Drop down displays
all devices that are
turned on and in
bluetooth range,
Choose device and
click select.*




Once connected select
Retrieve Data

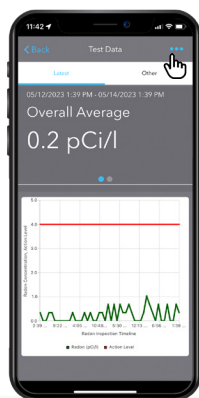

Select Ellipsis button

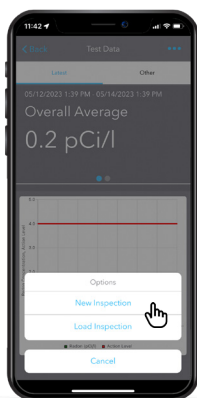


Select New Inspection

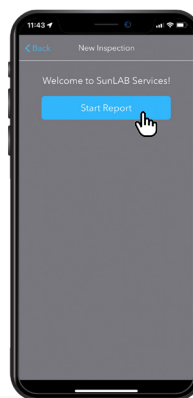


Select Start Report



4. Input Report Details

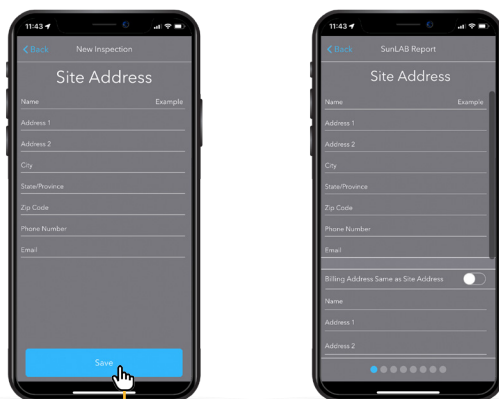


Enter name, site address will be populated based on phones GPS once uploaded to the cloud, or you can manually enter data now then click Save.

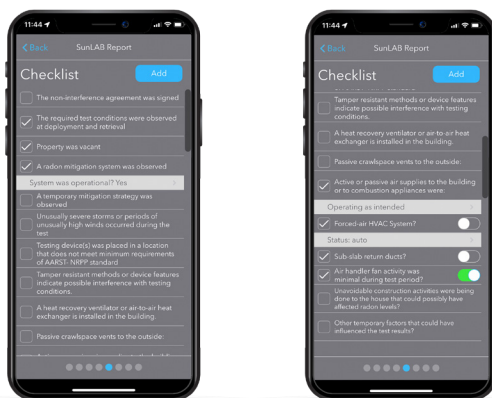


Swipe screen left to view test data, chart, insert photos if desired/required. Complete checklist.



5. Finish Report and Submit or Upload

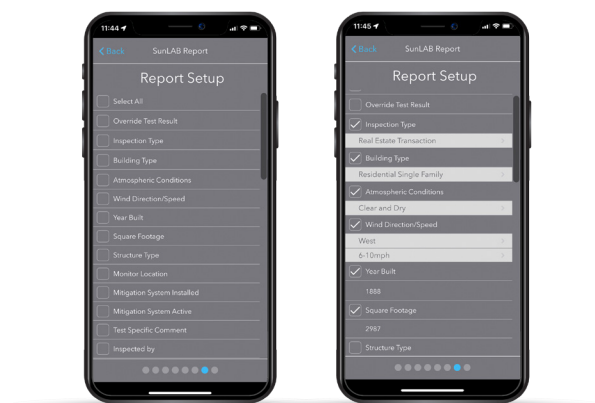

Complete all required report details by using pull-down options or text entry.

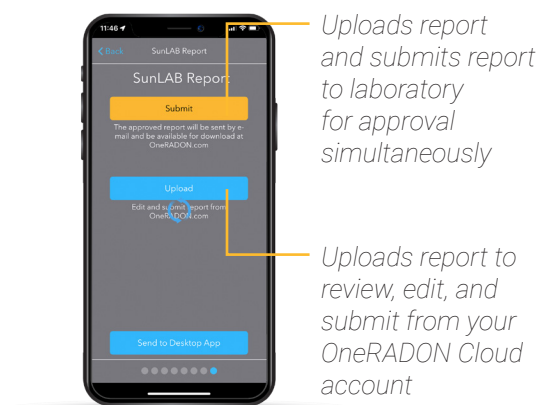

Swipe to last tab and Select upload if you need to make further edits in the cloud or select Submit to send directly to the lab

Finished!

After laboratory review your approved report will be sent to your email and be available in your OneRADON Cloud account!

