


PEDESTAL TUBS BASE CONNECTION

1. Place the pedestal upside down on a soft surface. Use a level to adjust the frame support legs to be level with the pedestal base. All four points highlighted here in yellow should be touching the level.

Adjust post to same height as base edge for even weight distribution.

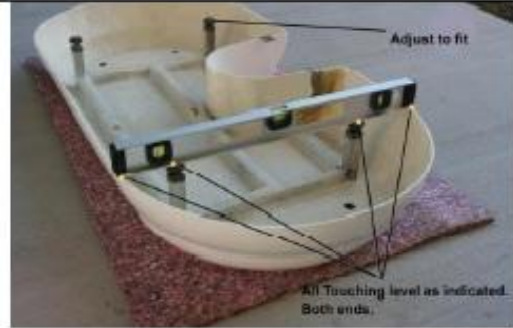

2. Place the base in position and level from all sides







3. Make fine adjustments to the adjustable legs to ensure all four connect to the floor to make the tub base stable.



4. Mark off the holes for fixing the tub base to the floor.



PEDESTAL TUBS BASE CONNECTION

<p>5. Turn the tub over and place on a soft surface. Remove the bolt protection covers.</p>	
<p>6. Remove the nuts and washers from the fixing bolt.</p>	
<p>7. Place the pedestal onto the tub and attach it to the tub using the nuts and washers just removed.</p>	
<p>8. Turn the tub upright and position it over the drilled fixing holes. Tighten the bolt into raw plug in the floor.</p>	

To secure tub in place caulk around the base.