

7900 Series Overhead Concealed Door Closer

Models 7900-B, 7900-CP & 7900-OP, Non-Hold Open

Standard Butt Hinges or Center & Offset Pivots

Installation Instructions

NR **NORTON**
RIXSON

ASSA ABLOY

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65warnings.ca.gov.

CAUTION

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These instructions should be followed to avoid the possibility of misapplication or misadjustment.

**READ AND FOLLOW ALL INSTRUCTIONS.
SAVE THESE INSTRUCTIONS.**


NOTES:

- For wood or metal doors, 1-3/4" to 2-1/4" (45mm to 57mm) thick, hung in hollow metal frame.
- Removable frame stop required unless frame rabbet exceeds 2-3/16" (56mm).


Typical Installation:

- One (1) track & closer position for all door opening angles.
- Easy arm attachment.


Left Hand Door - LH
Right Hand Reverse - RHR

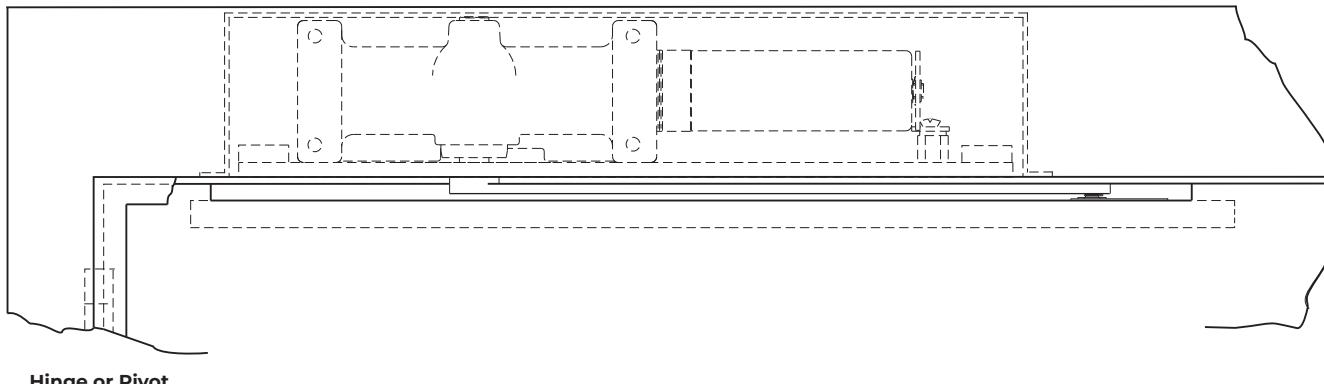

Right Hand Door - RH
Left Hand Reverse - LHR

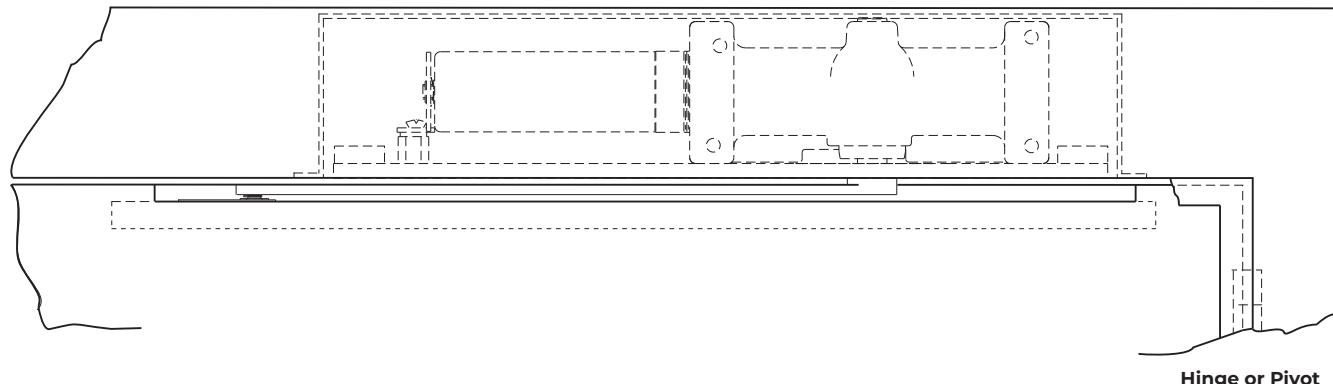

Assembly Components

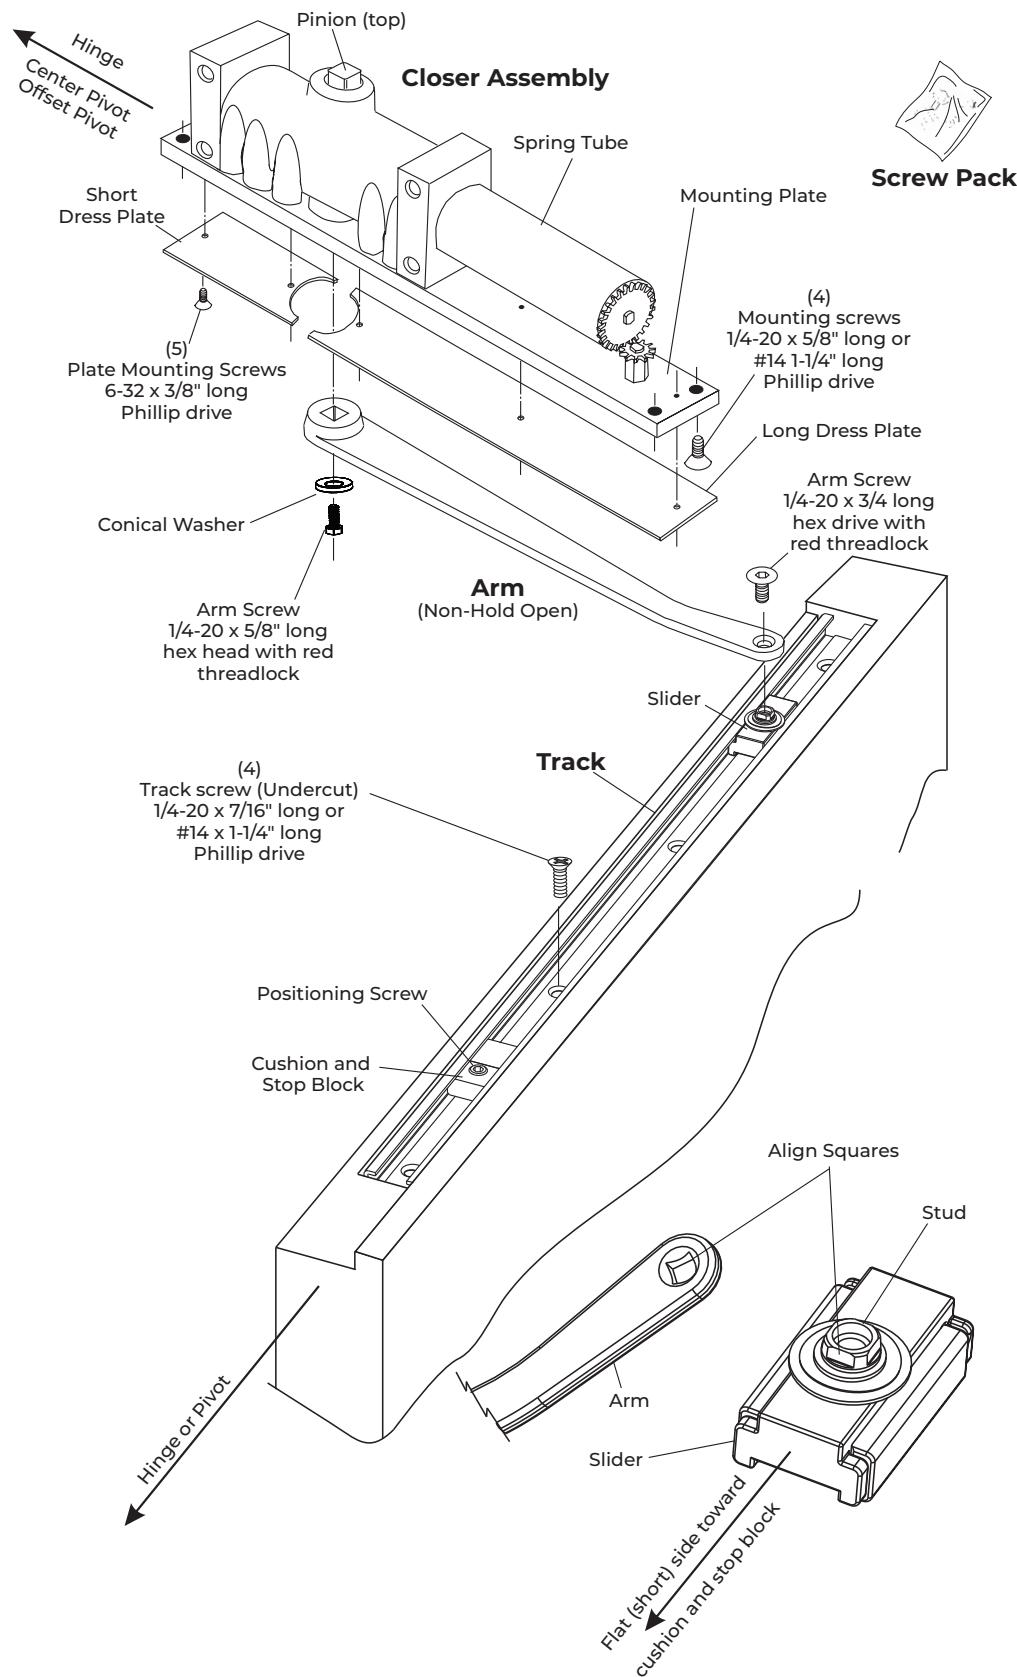


Models 7900-B, 7900-CP & 7900-OP, Non-Hold Open

Standard Butt Hinges, Center or Offset Pivots

NORTON RIXSON
ASSA ABLOY

Template: Model 7900-B with Standard Butt Hinges

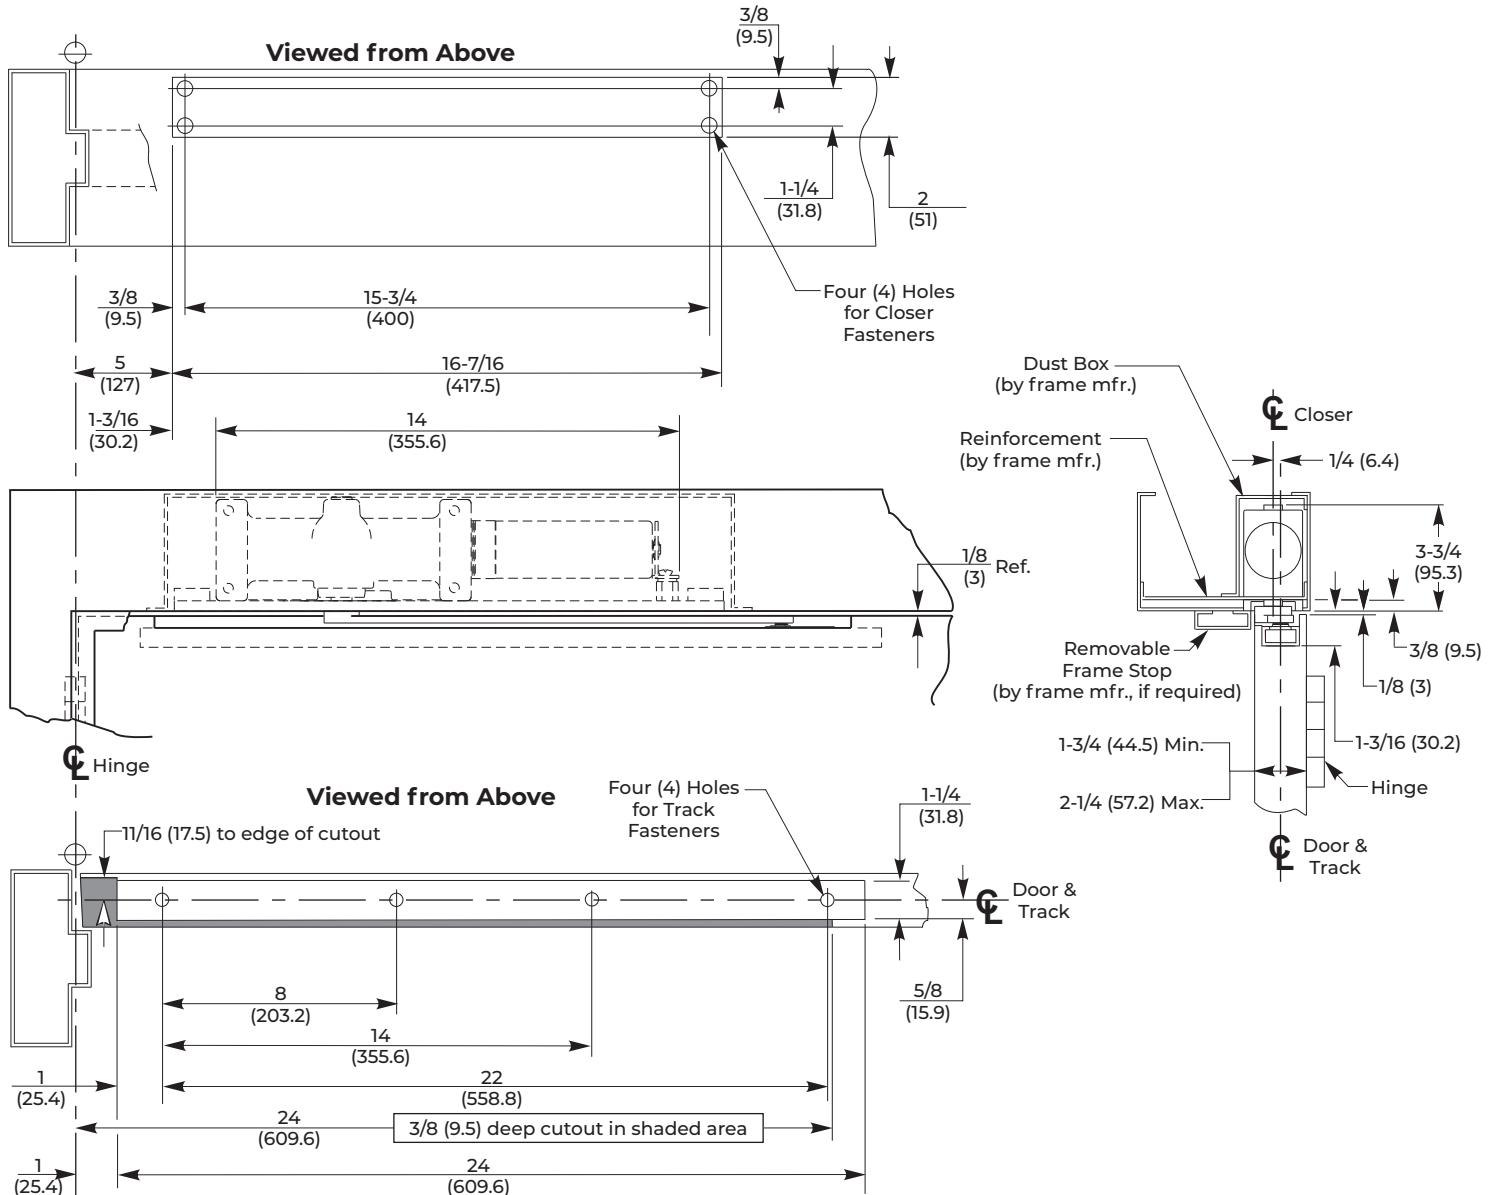

NOTES:


- Do not scale drawing.
- Left Hand door shown.
- Hardware dimensions shown (not cutouts).
- Dimensions are in inches (mm).
- Minimum door width: 27" (0.70m)
- Track: 24" (610mm)
- Maximum width hinge: 5" (127mm)

Fastener	Use	Preparation
1/4-20 Machine Screw	Metal frame & Metal door	#7 (0.201" dia.) or 5.10mm drill 1/4-20 tap
#14 Wood Screw	Wood Door	7/32" or 5.5mm drill

Track Installation	Door Angle		Auxiliary Door Stop Required
	110°	180°	
Non-Hold Open	With Cushion & Stop Block	Without Cushion & Stop Block	Opening greater than 110°

See Installation Sequence on page 6.

Template: Model 7900-CP with Center Pivots

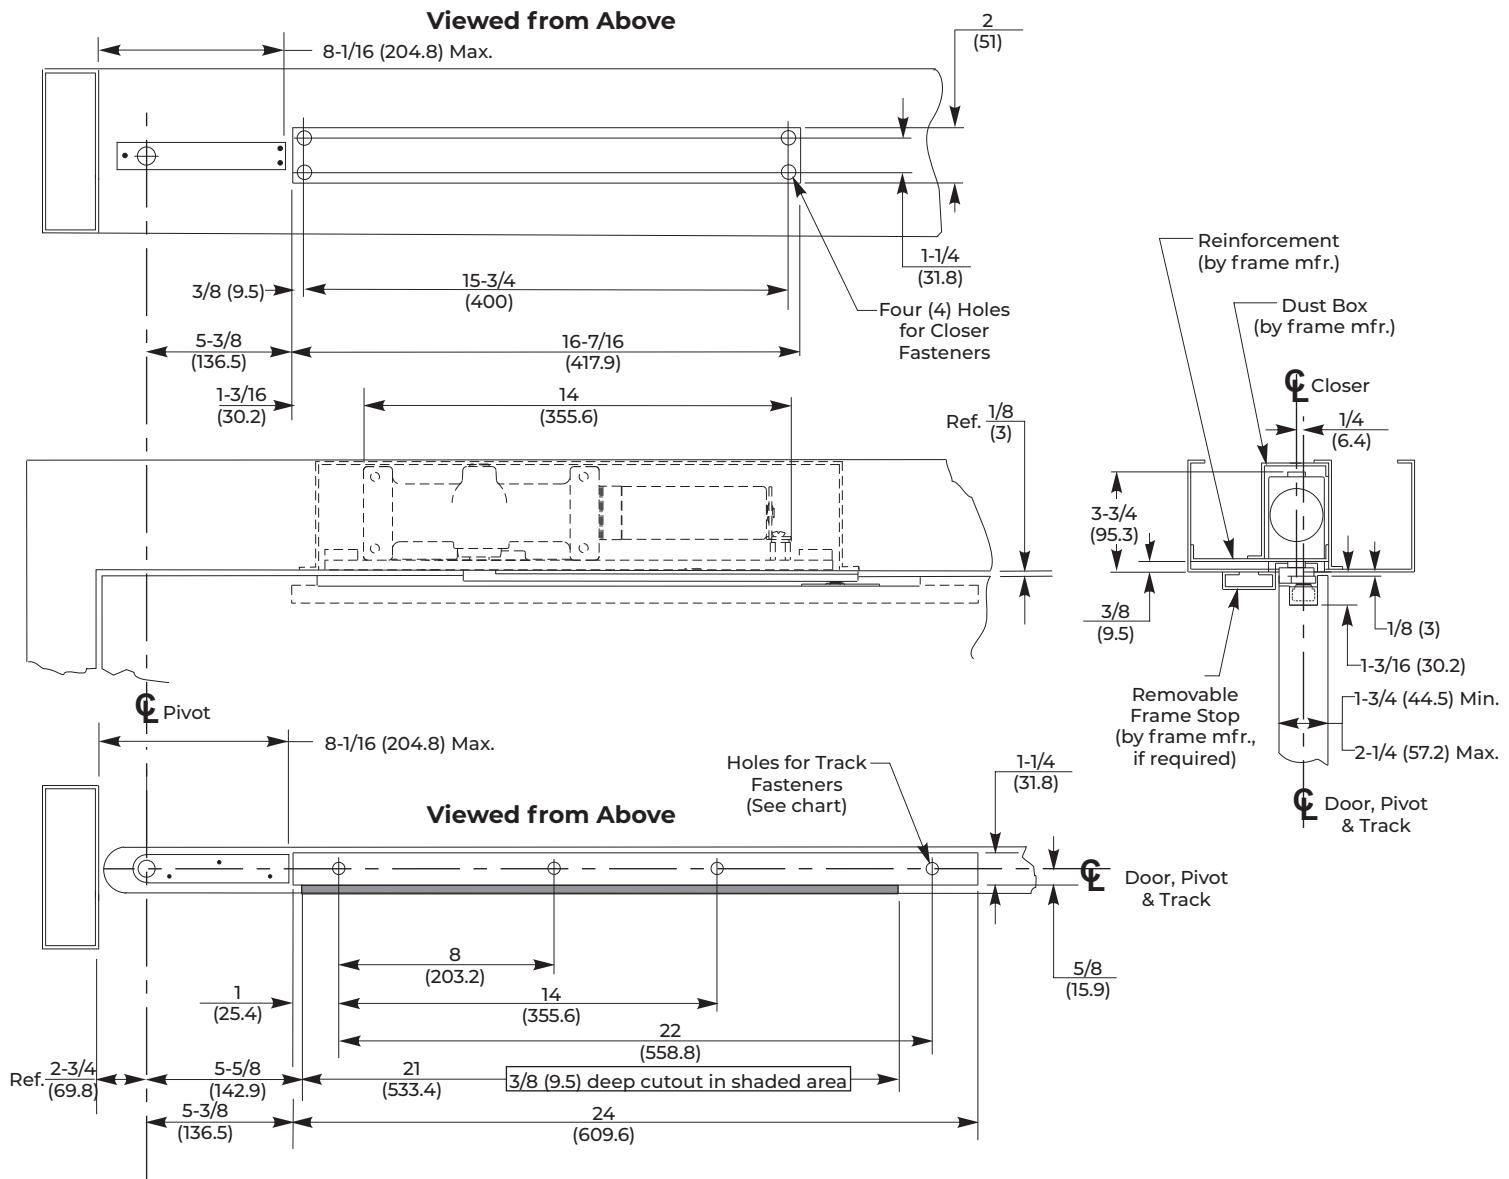

NOTES:

- Do not scale drawing.
- Left Hand door shown.
- Hardware dimensions shown (not cutouts).
- Dimensions are in inches (mm).
- Maximum door swing is 95°. Auxiliary door stop (not supplied) is required for this application.
- Standard track is 24" (610mm) long.
- For doors less than 34' (863.6mm) wide. Contact factory for modification requirements.


Fastener	Use	Preparation
1/4-20 Machine Screw	Metal frame & Metal door	#7 (0.201" dia.) or 5.10mm drill 1/4-20 tap
#14 Wood Screw	Wood Door	7/32" or 5.5mm drill

See Installation Sequence on page 6.

Models 7900-B, 7900-CP & 7900-OP, Non-Hold Open

Standard Butt Hinges, Center or Offset Pivots

Template: Model 7900-OP with Offset Pivots

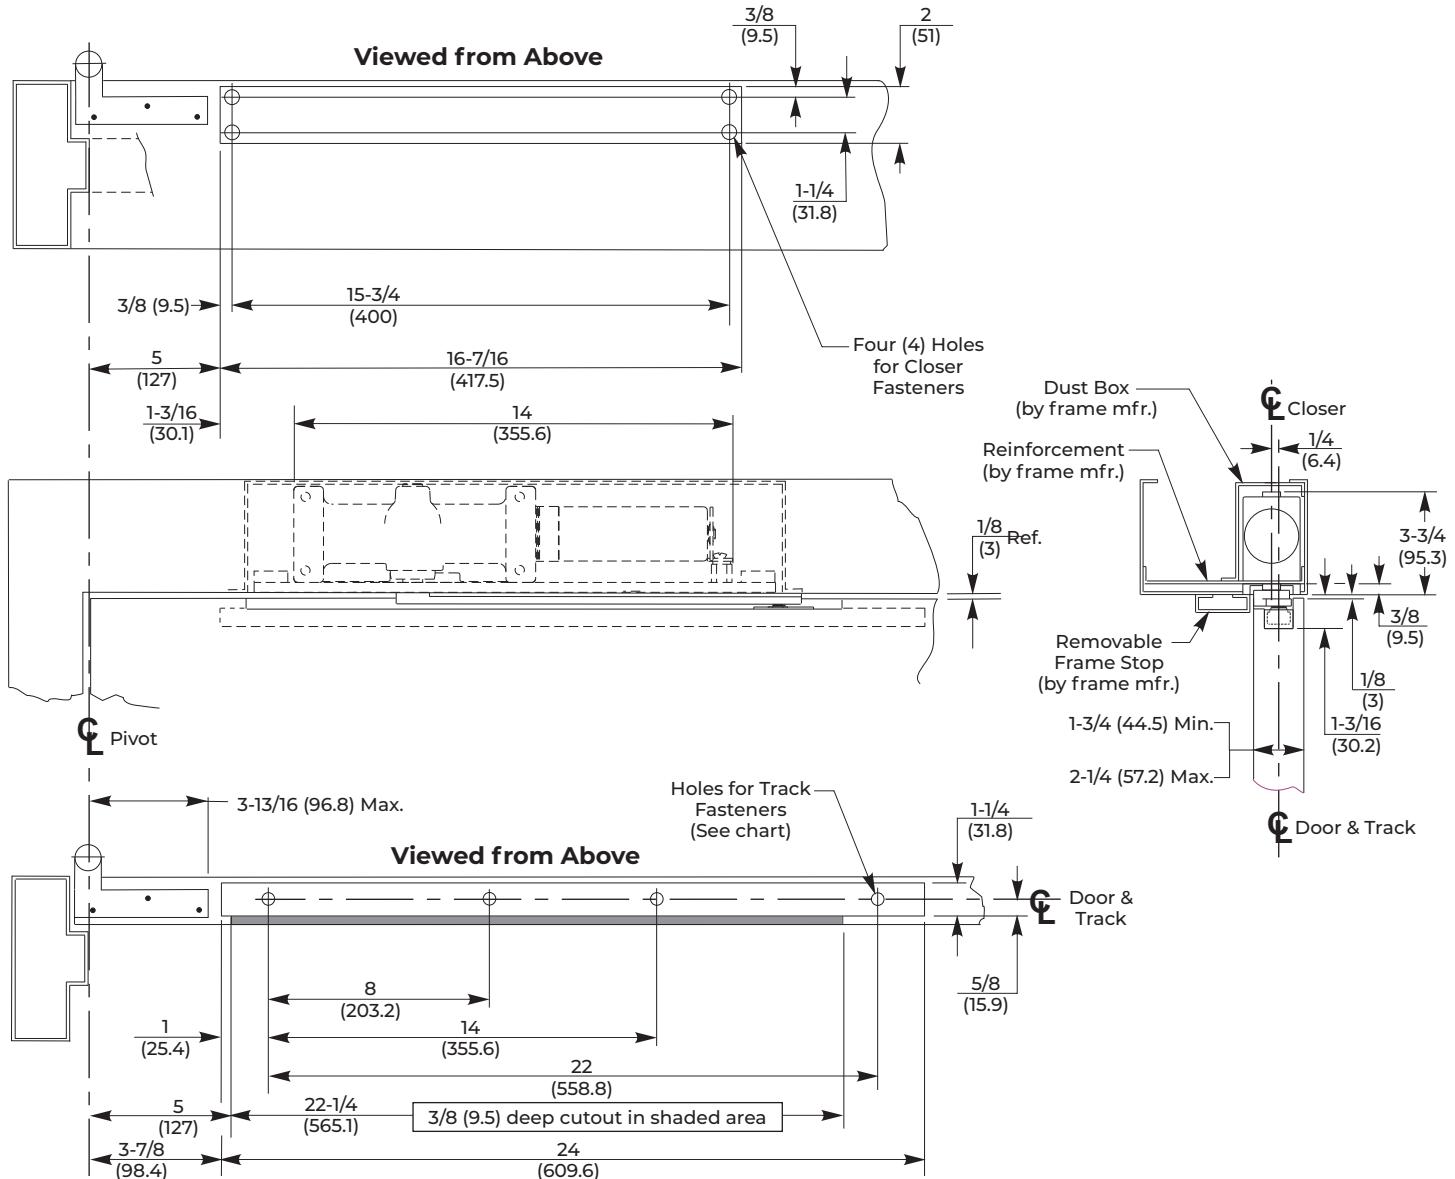

NOTES:

- Do not scale drawing.
- Left Hand door shown.
- Hardware dimensions shown (not cutouts).
- Dimensions are in inches (mm).
- Maximum door swing is 95°. Auxiliary door stop (not supplied) is required for this application.
- Standard track is 24" (610mm) long.
- For doors less than 29" (736.6mm) wide. Contact factory for modification requirements.

Fastener	Use	Preparation
1/4-20 Machine Screw	Metal frame & Metal door	#7 (0.201" dia.) or 5.10mm drill 1/4-20 tap
#14 Wood Screw	Wood Door	7/32" or 5.5mm drill

See Installation Sequence on page 6.

Installation Sequence

- Determine hand of door.**
Refer to page 1. Closers are handed. Hand of closer must match hand of door.
- Use the template dimensions, locate and prepare holes and cutout in frame and door.**
Refer to Template: Model 7900-B with Standard Butt Hinges on page 3.
Refer to Template: Model 7900-CP with Center Pivots on page 4.
Refer to Template: Model 7900-OP with Offset Pivots on page 5.

Prepare the frame for mounting closer.

Drill and tap four (4) holes for 1/4-20 machine screws or #14 wood screws.

Prepare door for track.

Prepare four (4) holes for 1/4-20 machine screws or #14 wood screws.


NOTE: Generally on new construction, hardware cutouts are pre-made by suppliers.

- Mount closer to frame.**

Position spring tube away from hinge or pivot and mounting plate flush with frame rabbet.
Secure with 1/4-20 x 5/8 or #14 1-1/4 Phillip drive mounting screws.

- Install arm on closer pinion.** (see illustration below)

With arm counterbore facing down, align arm index mark with pinion index mark. Install arm onto pinion.
Secure with conical washer and 1/4-20 x 5/8" hex head arm screw with red threadlock.

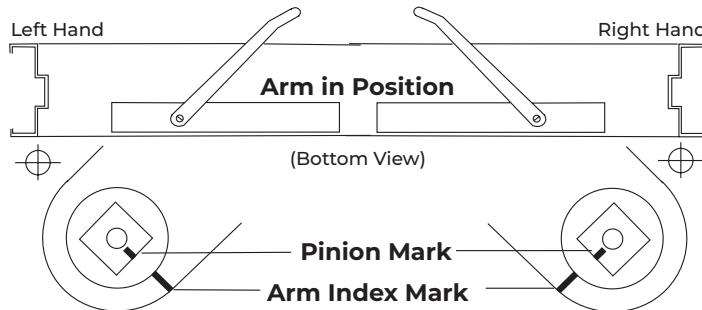

- Install track on door.**

Place the assembled track into door cutout with open side facing up, cushion and stop block toward hinge or pivot.
Move the slider to the opposite end of the track (see illustration on page 2). Secure track with four (4) 1/4-20 undercut machine screws or #14 wood screws.

- Connect arm to track.**

Open door to approximately 5" (127mm), rotate arm to slider and place end on stud. Use a screwdriver to align the square on the slider's stud with the arm square (see illustration on page 2). Push down on arm to seat stud and to prevent stud from rotating. Secure with arm screw, 1/4-20 x 3/4" long flathead hex drive with red threadlock.

- Determine door opening angle.**

Refer to pages 3, 4, and 5.

- Set door opening angle.**

Open the door to the desired angle. With the door held at that position, slide cushion and stop block against slider.
Tighten the stop position screw (large set screw) with the 3/16" hex wrench (provided) until secure. Release door.

- Adjust closer.**

Refer to page 6. Once adjusted, install dress plate.


Models 7900-B, 7900-CP & 7900-OP, Non-Hold Open

Standard Butt Hinges, Center or Offset Pivots


NORTON RIXSON
ASSA ABLOY

Closer Adjustment

CAUTION
Do not back valves out of closer or a leak will result.

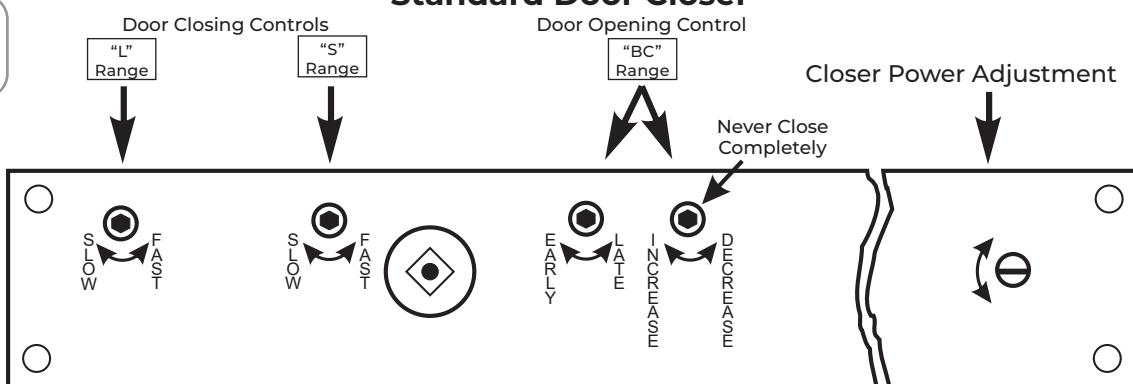

Optional Delayed Action Door Closer

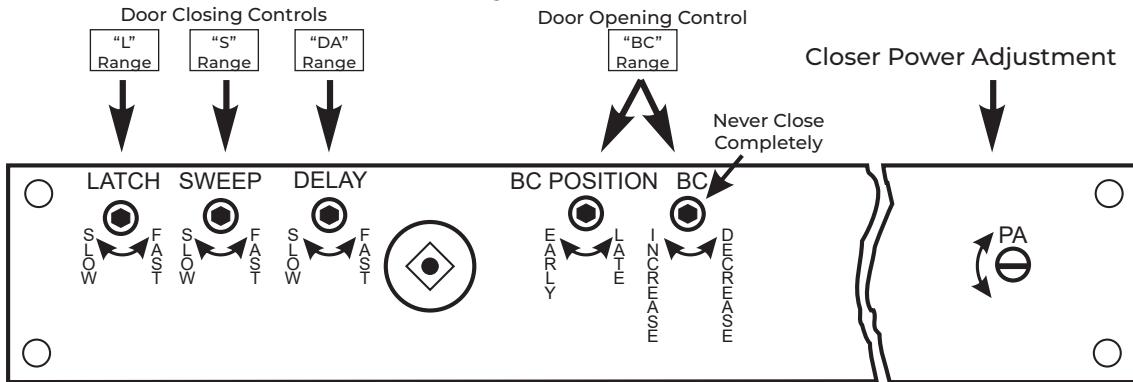

• Closer Controls:

Closer controls are accessible through mounting plate for closer adjustment. Use 1/8" (3mm.) hex-key for valve adjustments.

Use a standard screwdriver for power adjustment.

• Power Adjustment:

Power Adjustment permits increasing door closing force. Controlled by slotted screw marked "PA."

• Closing Speed:

Closing Speed controlled by valves marked "SWEEP" and "LATCH".

ATTENTION: Adjust closing speed time to between 4 to 7 seconds from 90°. Use of the door by people with disabilities, elderly, or small children may require greater closing time.

• Delayed Action:

Delayed Action option permits door to creep from fully open to about 70°. Creeping time controlled by valve marked "DELAY".

• Backcheck:

Backcheck cushions or slows the opening of a door that is forced to travel faster than conditions require. Backcheck controlled by valves marked "BC POSITION" (open for backcheck start at a greater door opening angle) and "BC" (for adjusting backcheck intensity). **Never close BC valve completely.**


• Optional Enhanced Backcheck:

Optional Enhanced Backcheck provides adjustable backcheck intensity beginning at approximately 15° of the door opening cycle. Backcheck positioning valve is omitted when this feature is provided.


• Install Dress Plate:

Refer to page 2.

Closing Controls

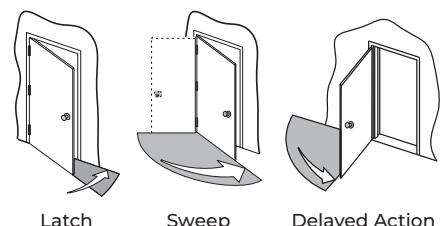

Opening Controls

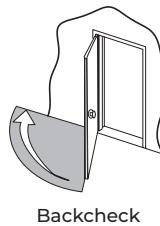

The ASSA ABLOY Group is the global leader in access solutions. Every day we help people feel safe, secure and experience a more open world.



Technical Product Support:

Monroe, NC 28112 USA

Phone: 877.974.2255 ext: 2

Techsupport.NortonRixson@assaabloy.com

NortonRixson.com

Norton Rixson is a brand associated with ASSA ABLOY Accessories and Door Controls Group, Inc., an ASSA ABLOY Group company. Copyright © 2001, 2014, 2024, 2025, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.

Approved 2025-07-31

80-9379-1201-020 Rev 4 08/25