




726 TOP STRIKE DETAIL (See Note 7)

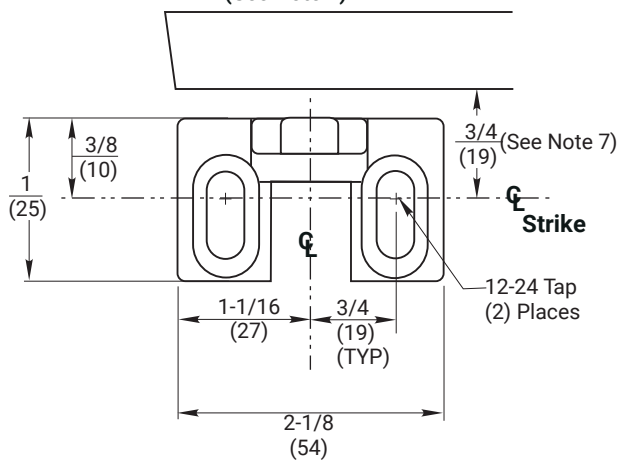

NOTES:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. This hole **MUST** be field located using physical part as template, after installation is complete and device is fully operational.
8. For outside trim preparation see appropriate trim template.
9. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
10. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements to support the device cases are similar for both door stiles.
11. Bottom bolt should retract to 1/8 (3.2) above floor strike. Floor coverings in the door path must be laid accordingly.
12. Wood screws #14 x 1-1/2" (by others) permitted for solid core wood doors if pilot holes are used for installation, when door label allows its use.

Reinforcement
for 726 Strike
(See Note 6)

Lock Edge

Door

See Note 10

Inside Face
of Door

Vertical Reference

11/16
(17.5)

.140 (3.50) Dia.
This Face
(2 Places)

Rods & Strikes

.140 (3.5) Dia.
X 3/4 (19) Deep
Openings Over
8' (2.44m) ONLY
(2) Places

Horizontal Reference
(Device Centerline)

3/8 (9.5) Dia.
Thru Door
(6) Holes for SNB

.140 (3.50) Dia.
This Face
(2 Places)

Bottom of Door

Finished Floor

5/8 (16) Dia. X
3/4 (19) Deep
for 790 Strike

11/16
(17.5)

Rods, Deadbolt and
Floor Strike

1/4 (6) Recommended
3/4 (19) Maximum

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

2170(F)

Surface Vertical Rod Fire/Panic Exit Device
Application For Approved Wood or Composite
Doors and H.M. Frame

1-855-557-5078 Ext. 2

www.accentra-assaabloy.com

ACCENTRA

ASSA ABLOY

Experience a safer
and more open world

Copyright © 2010, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES

04/10

DO NOT SCALE DRAWING

TEMPLATE NUMBER

7427-1010

SHEET

1 of 1

DATE

04/24

