
# 1-1/4 Minimum Strike Reinforcement

Strike Reinforcement (See Note 6)

# **Inside Face Of Door** Vertical Reference 1-5/8 (41)Face of Stop or Mullion See Note 12 2-<u>5/16</u> Typ. 3-5/85/8 (15.9) Dia. (58.7)(92)x 5/8 (16) Deep This Face 13/16 <sub>Typ.</sub> (20.6)3-5/8 (92)For Fire Rated Mullion Installations Only #10-24 Tap (Std.) or SNB (4 Places) See Notes 9 & 14 39-15/16 (1014)3/8 (9.50) Dia. Thru (2 SNB Holes) See Note 13

### NOTES:

- 1. Do not scale drawing.
- Dimensions are in inches(mm).
   LHR door shown. Preparation is typical for both door hands.
- 4. Minimum door stile width: 3-1/2(89).
- 5. Prepare mounting holes when installing the device.
- Unreinforced frames require blind rivet nuts (by others) to mount the strike.
- 7. Dimension from door face.
- 8. For outside trim preparation see appropriate trim template.
- Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
- Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both door stiles.
- 11. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S") also see template 7477-0001.
- These hole(s) MUST be field located using physical part as template, after installation is complete and device is fully operational.
- 13. Wood screws (by others) permitted for solid core wood doors if pilot holes are used for installation, when door label allows its use. Device: #14x1-1/2"RHWS, interlock: #10x1-1/2" FHWS.

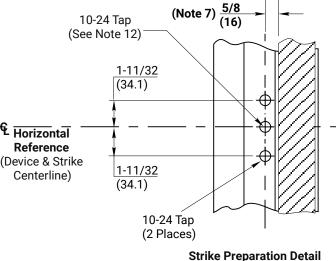

## MULLION NOTE:

FOR MULLION MODEL NUMBERS M100(F) AND KRM100(F) REFER TO TEMPLATE NUMBER 7400-0100.

FOR MULLION MODEL NUMBERS M200(F) AND KRM200(F) REFER TO TEMPLATE NUMBER 7400-0200.

FOR MULLION MODEL NUMBERS M200FWS AND KRM200FWS REFER TO TEMPLATE NUMBER 7400-0210.

### RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

# 7200MF Rim Fire Exit Devices for Narrow Escutcheon Trim

Application for Fire Labeled Wood or Composite Door and H.M. Frame or Mullion with 757F Strike & SNB

1-855-557-5078 Ext. 2 www.accentra-assaabloy.com

ACCENTRA

ASSA ABLOY

Experience a safer and more open world

Copyright © 2008, 2023, 2024, ASSA ABLOY ACCENTRA $^{\rm M}$  Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES

02/08

DO NOT SCALE DRAWING

TEMPLATE NUMBER SHEET 7473-1002 1 of

1 of 1

04/24