



## FRAME APPLICATIONS


(Recommended) Reinf. 12" Min. Width  
Centered in Opening for U.L.  
Fire Rated Frames.  
(Supplied by Frame Mfr.)

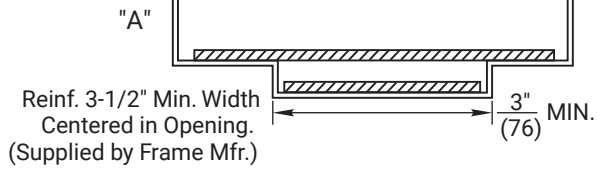


Recommended for double rabbeted frames where  
stop face is less than 3" (76) wide.

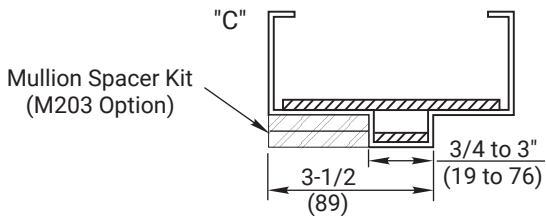

Recommended for header configuration with less  
than 3" (76) of mounting surface.

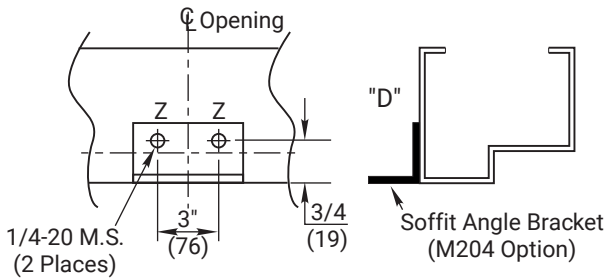

## SOFFIT PREP (TOP VIEW) —TYPICAL FOR ALL FRAMES—

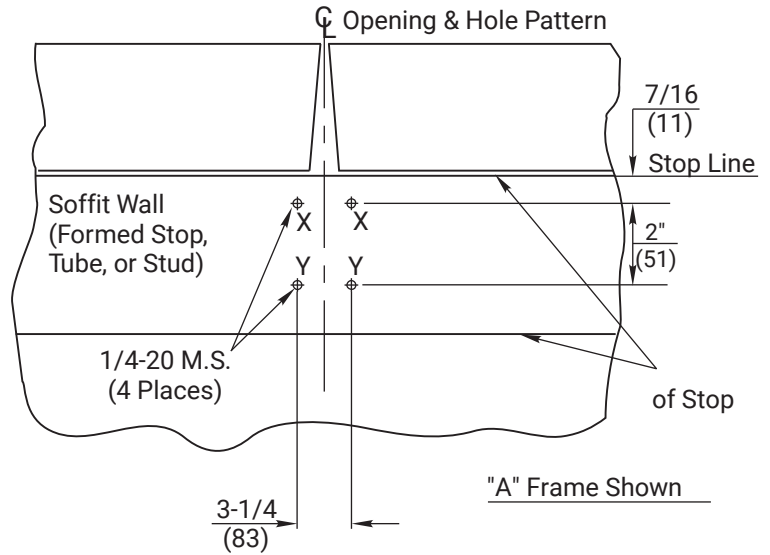

Application	Holes Required
"A"	X & Y
"C"	X & Y (Note 6)
"D"	X & Z

### Notes:

- Do not scale drawing. Dimensions shown in inches(mm).
- Prepare mounting holes when installing the mullion. Use this template for structural frame preparation.
- Metal frames should provide mounts to maintain not less than (3) full screw threads engaged.
- Wood frames should provide not less than 5/8 (16) screw engagement to structural beam (construction grade lumber, or better).
- M200(F) and KRM200(F) mullions are made from 2" x 3" (51 x 76) tubular steel. Locate device from mullion face (strike seat).
- Two flat head 1/4-20 x 1-1/4 machine screws are included with Mullion Spacer Kit (M203 Option) when so ordered.

### RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

## KRM200(F) & M200(F) Mullions Frame Preparation

1-855-557-5078 Ext. 2  
www.accentra-assaabloy.com

**ACCENTRA**  
**ASSA ABLOY**

Experience a safer  
and more open world

Copyright ©2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES 7400-0200 02/24	DO NOT SCALE DRAWING	
TEMPLATE NUMBER 7400-0200	SHEET 1 of 1	DATE 04/24