


## Sprocket wear indicator - 1658/2P

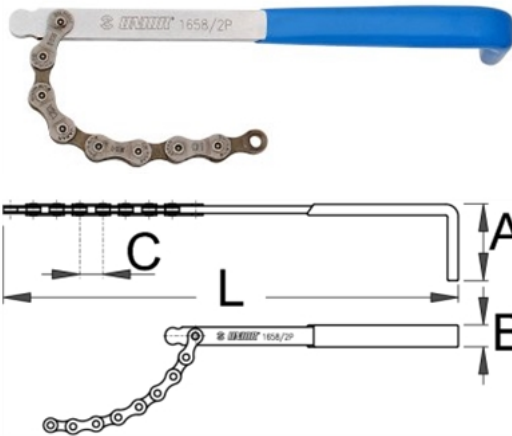

### Description

- material: special tool steel, hardened and tempered
- surface finish: chrome plated according to ISO 1456:2009
- for HG and IG sprockets
- 

### How to use the tool:

• The sprocket wear indicator is used to determine the condition rear sprockets. It can be used to check 12 to 21 tooth sprockets. Procedure: The chain is put on the sprocket and the tool placed with its round end between two teeth on the upper sprocket side. The last chain link is moved away from the sprocket and a force of 100 N or 10 kg is applied to the tool in the direction of sprocket rotation. Now the last chain link is moved towards the sprocket. If it skips easily to the cog the sprocket is in a good condition and will function flawlessly even with a new chain. However, if the last chain link gets stuck on the tip of the neighbouring tooth or if we have to force it to skip on the cog, the sprocket is worn out and should be replaced. In case the chain falls off the cog when applying force, the sprocket is heavily worn out and a replacement is overdue.

### Technical Data

Barcode	Length	B	A	C	Weight	Material	Color	Accessories
619717	250	12	42	1/2"	86	4A	10	-

### Packaging data

Barcode	Retail tool packaging				Transport package				
	Retail packing in mm (width)	Retail packing in mm (height)	Retail packing in mm (length)	Weight	Hand icon	Transport packing in mm (width)	Transport packing in mm (height)	Transport packing in mm (length)	Weight
619717	45	11,5	210	93	4	278	54	75	372