

LCD Drawer User Manual

BUY ON
www.cablematic.com



- GUI
- LCD Monitor
15" / 17" / 19"
- Expansion
Daisy Chain
- OS Support
Win 2k/XP/Win
Vista/7/8/10
- Combo
For USB PC
- Expansion
Card Module
Serial/RS485

Table of contents

- 1. BRIEF INTRODUCTION 3
- 2. PACKAGE INSIDE 3
- 3. FEATURES 3
- 4. SPECIFICATIONS 4
- 5. INSTALLATION 5
- 6. USAGE (Hotkey Commands and OSD Operations) 9

BUY ON
www.cablematic.com

BUY ON
www.cablematic.com

BRIEF INTRODUCTION

The 1+1 Console 8/16 port LCD KVM switch can control attaching servers and computers from local or remote console. This LCD KVM switch is loaded with features such as **one local console port, plus one optional CAT.5 based remote console port or one optional IP based remote console Port**, On Screen Display (OSD) Menu, Password security, Hot key Control, Push Button and Auto Scan Control. It has complete keyboard and mouse emulation for simultaneous PCs boot-up process.

With the CAT.5 based remote console port you can remotely control servers and computers 1000 feet away. In other words, you can locate your monitor, keyboard and mouse up to 1000 feet away from the LCD KVM switch. The built in CAT.5 transmitter synthesizes VGA monitor and keyboard/mouse signals, and transmit the signals to the remote CAT.5 receiver over the popular LAN (CAT.5) cable.

With the IP based remote console port you can control one or many computers locally at the server site or remotely via the Internet using a standard browser. You can securely gain BIOS level access to systems for maintenance, support or failure recovery over the Internet. Communication is secure via SSL encryption.

PACKAGE INSIDE

- 1x LCD Drawer Unit
- 1x User Manual
- 2x Key
- 1x Power Cord


FEATURES

- Support combo(PS/2 & USB) interface for connecting to computer ports conveniently
- One optional remote console (Insertion Card : CAT.5 or IP Module)
- Support MS windows, Netware, Unix, and Linux
- Support iMAC, Power MAC and Sun Micro Systems with USB connection.
- No Software Required --- easy computer selection via On Screen Display (OSD) Menu, Push Buttons, and Hotkeys
- Provide various Hotkey (Scroll-Lock/ Cap-Lock/ Num-Lock/ L-Alt/ L-Ctrl/ L-Win/ R-Alt/ R-Ctrl/ R-Win) for switching computer port and other control functions, so Hotkey function can be used in various types of keyboards, and to avoid Hotkey duplicate problem.
- Provide ACL (Access Control List) security function. Store up to 8 independent user accounts
- Hot Plug --- add or remove connected computers without powering off the LCD Drawer
- Support two user layers, and search computer/server name
- Keyboard status restored when switching computer
- Support Daisy chain(8-layer) & Cascade(2-layer) function

SPECIFICATIONS

Feature	Specification
PC Type	Combo (PS/2 & USB Connector Support)
PC Port Connector	HDB 15
PC Ports	1 / 8 / 16
Max. Distance (LCD Drawer to PC)	16 feet (5m)
LCD Resolution	15" LCD : 1024 * 768 17" & 19" LCD : 1280 * 1024
Video Resolution (Remote Console)	1600 x 1200 for CAT.5-Based 500 feet remote console 1024 x 768 for CAT.5-Based 1000 feet remote console 1600 x 1200 for IP-Based remote console
CAT.5 - Based (Optional) Remote Console Module	RJ-45 Connector, CAT.5 console up to 1000 feet away from Drawer with superior, auto-adjust RGB gain/delay control capability
Over IP -Based (Optional) Remote Module	RJ - 45 8P8C for 10/100 M Ethernet, DB9 male for Modem, Null modem and serial power control, Mini USB 2.0 receptacle
Daisy Chaining	Support Daisy chain(8 - layer) & Cascade(2 - layer) function
Computer port selection	On Screen Display (OSD) Menu, Hot Key, Push Button
Hotkey	Provide various Hotkey (Scroll-Lock/ Cap-Lock/ Num-Lock/ Alt/ Ctrl/ Win)
LEDs	Power on & Selection
Security	Provide ACL (Access Control List) security function, store up to 8 independent controllable Computers lists
Multilingual OSD (On Screen Display) control	8 Languages (English, France, German, Spanish, Italian, Russian, Japanese, Simplified Chinese)
Auto-Scan Intervals	5 ~ 99 Sec.
Keyboard Emulation	PS/2 or USB
Mouse Emulation	PS/2 or USB
Max. PC Connection	>1024
Housing	Metal
Operation Temperature	0 ~ 50°C
Storage Temperature	-20 ~ 60°C
Humidity	0~95%, Non-Condensing
Mechanical	19" Rack mount, 1U
Dimension (mm)	580 * 450 * 42.5

BUY ON
www.cablematic.com

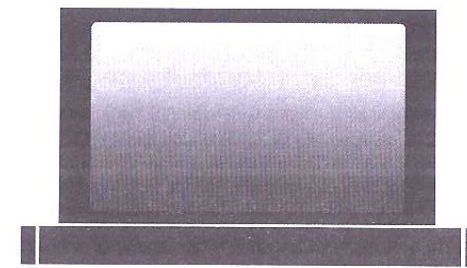

8 port LCD Drawer Front VIEW

8 port LCD Drawer Rear VIEW



If you want to add a remote console module, please break this plate with a flathead screw driver.

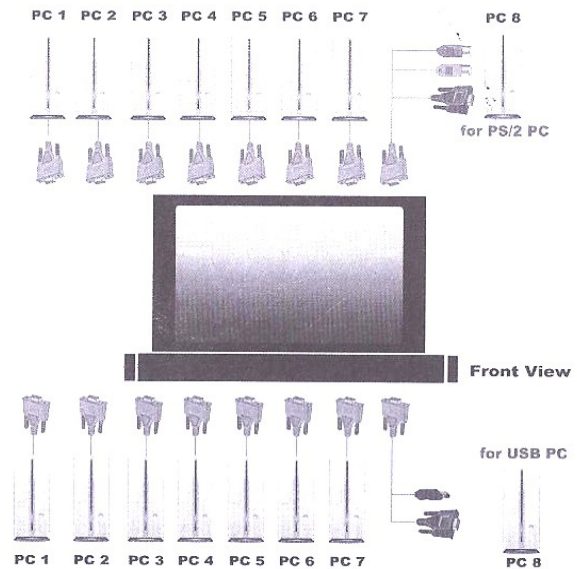


Diagram (16 port LCD Drawer)

INSTALLATION

On the back of the KVM Switch, each of the 8 / 16 PC ports has a HDB15 type connector. Each cable that comes with the Switch has a 3-in-1 connector at one end and a single HDB15 male connector at the other end. Plug the single connector end of the cable into the KVM PC port, and then plug the other end of cable to a PC VGA port.



Figure 1. 3-in-1 DB15 cable

(a) PS/2 computer --- Plug in the PS/2 mouse connector to the computer mouse port, then the PS/2 keyboard connector to computer keyboard port.



Figure 2. 3-in-1 DB15 Cable and PS/2 to USB Adaptor

(b) . USB computer --- Install a PS/2-to-USB adapter to the keyboard PS/2 connector, plug in USB connector to the PC USB port. This single USB port can handle both keyboard and mouse data.

Optional Modules Installation

Over IP Module

Please refer to "Over IP Module User Manual" for details.

Installation: Power off the LCD Drawer firstly. Remove the cover of the add-on slot, slide in the Over IP Module and make sure the module is fully inserted into the slot.

The Over IP Module redirects local keyboard, mouse and video data to a remote administration console. It allows you to control one or many computers locally at the server site or remotely via the Internet using a standard browser.

Serial Power Control

The IP Module comes with a serial port for connecting to any serial device, such as serial PDU to provide remote power control, such as power on, power off, and power cycle for the connected computers/servers.

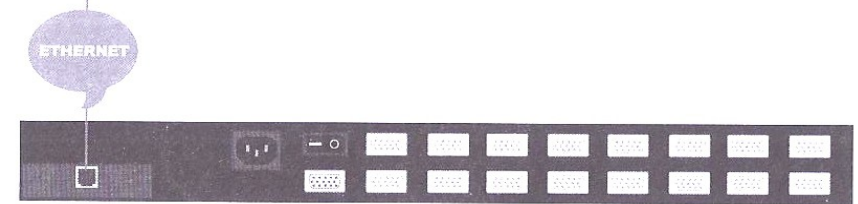


Figure 3. IP-Module Diagram

CAT. 5 Transmitter Module

Installation : Power off the LCD Drawer firstly. Remove the cover of the add-on slot, slide in the CAT. 5 transmitter module and make sure the module is fully inserted into the slot.

To extending your console up to 1000 feet away by connecting the CAT.5 cable to the R-Box in the remote end.

CAT. 5 Module Receiver (R-Box)

The CAT.5 module receiver (R-Box) uses CAT.5 cable to extend your keyboard, mouse and monitor 1000 feet (300 meters) away from the KVM switch. It also has built in 2 port KVM switch for selecting remote or local Computer.

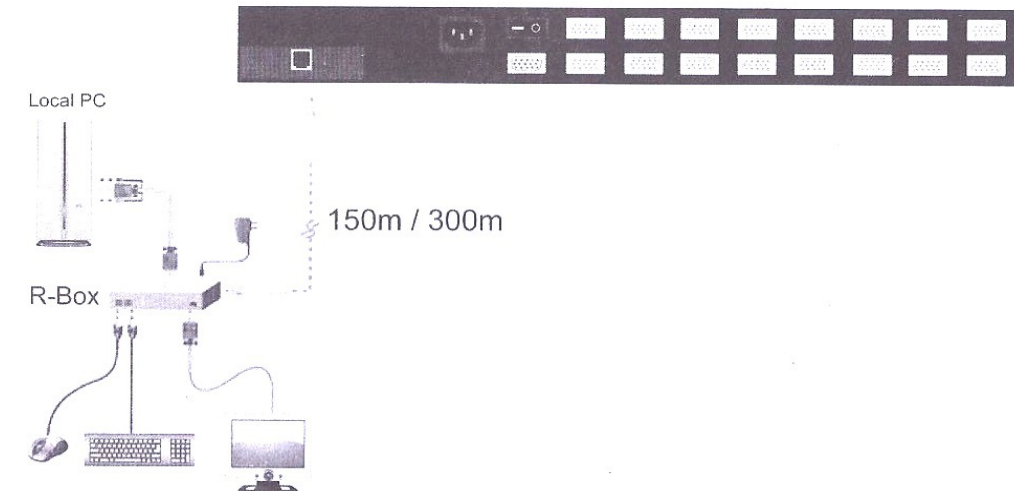


Figure 4. CAT. 5 Module Diagram

CAT.5 Receiver Installation

- Make sure the CAT.5 cable is straight through type.
- Plug one end of CAT.5 cable into RJ-45 connector of the KVM switch CAT.5 console port, and plug the other end of CAT.5 cable into RJ-45 port of the R-Box.
- Connect keyboard, mouse and monitor to the R-Box console port.
- Connect Local Computer to R-box with the accompanied 3-in-1 HDB15 cable.
- Power on the R-Box by plugging in the power adapter.
- Push the **SELECT** button to select remote or local Computer.

Daisy Chain Connection

Use one end of daisy chain cable to connect to the **Daisy Chain port** of Master KVM switch and connect the other end of daisy chain cable to the **Local Console port** of the next Slave KVM switch. Please repeat the connection procedures for next Slave KVM switch. You can daisy chain up to eight banks in maximum.

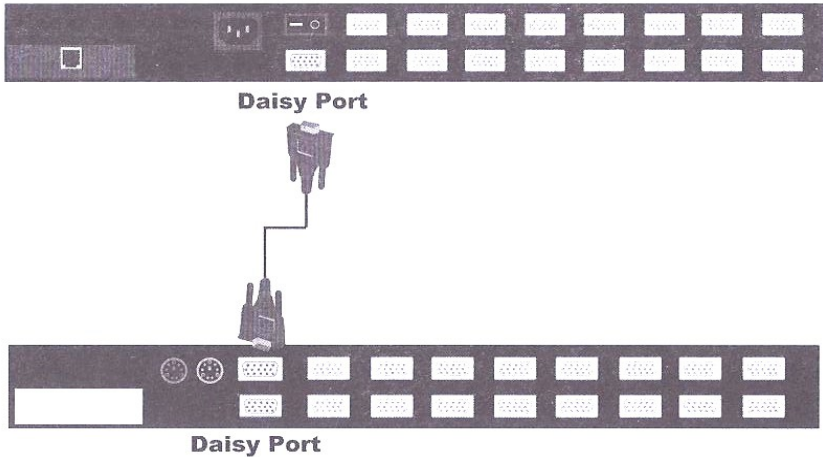


Figure 5. Daisy Chain Connection

The console OSD menu will show only the port information of the master KVM switch. When the master unit starts up, it will query all daisy chained Slave units, and automatically set up the Bank ID for each Slave unit. So the 7-seg LED on the Master unit will display 1, Slave 1 will display 2, Slave 2 will display 3, and so on. If not so, please **reset** (press “BANK” and port button) the Master unit to update the Bank ID immediately. Hot Plug function is supported in daisy chain connection. The Master unit will auto-query the daisy chained Slaves every 30 seconds.

You can also cascade through computer port. This cascade can work with other brand of KVM switch, but you need to change the Hotkey of slave KVM switches so that the master and slave KVM switches do not use the same Hotkey.

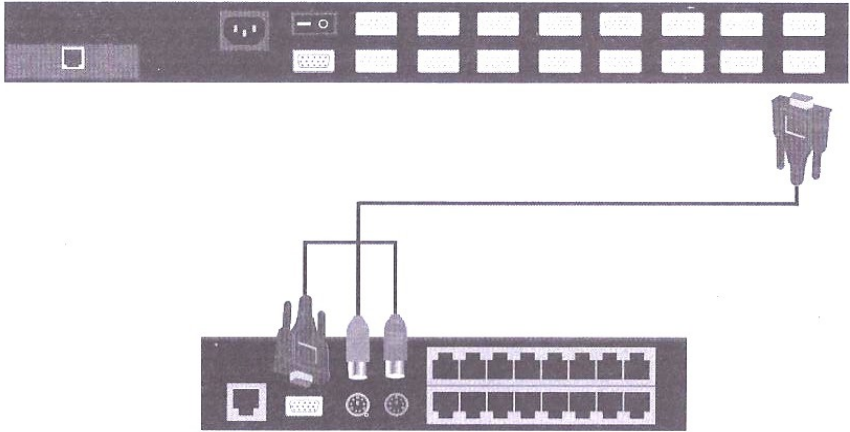


Figure 6. Cascade through Computer Port

Usage (Hotkey Commands and OSD Operations)

Buttons

The push Buttons 1 ~ 16 :
 You can simply switch to a port by pressing the corresponding button. For 16 ports LCD Drawer, please press button 1 ~ 16 directly to select the port you want.

Hotkey

You can conveniently command LCD Drawer through a simple hot key sequence. To send commands to Drawer, you must **press the hotkey (default Caps Lock) twice within 2 seconds**. You will hear a beep sound confirming entering Hotkey mode. If you do not press any key during Hotkey mode over 2 seconds the Hotkey mode will be escaped and back to Normal state.
 The default hotkey is **Caps Lock** but you can change hotkey as your application convenience. If you prefer to use other hotkey, please go to OSD menu and change the default hotkey to the other.
 The table blow lists all supported hotkey commands.

The default hotkey starts from “Caps Lock”+“Caps Lock”, then the keys on the table list.




Command	Function
Space bar	Brings up the OSD overlay screen
↑	Switches to the previous port
↓	Switches to following port
[1,2,...,8] bank, [01, 02,...,32] port	<ul style="list-style-type: none"> The first digit is the Switch bank number, starting with "1". The KVM switch on the daisy chain line is on bank 1 (the Master). A standalone KVM switch is also on bank 1. The second & third digits are port numbers starting with "01"
Pg. Up	Switches to the previous bank
Pg. Dn	Switches to next bank
B	Turns the beep sound on/off
R	For SUPERVISORS that will set the OSD back to the factory default value (except the User Security settings).
S	For SUPERVISORS that activates the Auto-Scan function
U	For SUPERVISORS that turns the Security function on/off. (Default is off).
P	Log out, that's only valid when the security is on.

BUY ON
www.cablematic.com

Example #1 – To bring up the OSD overlay window, press **Caps Lock**, "**Caps Lock**", and the "**Space Bar**". Immediately, the OSD overlay screen will appear. The superimposed menu screen is generated by the LCD Drawer, and does not affect your computers or software function in any way.



Example #2 – To switch to Bank 1 Port1, press "**Caps Lock**", "**Caps Lock**", and "**1**", "**0**", "**1**".



Actually there are two methods to bring up the OSD overlay window.

- Activate OSD by press Hotkey** --- press Hotkey twice then press Space bar.
- Activate OSD by Mouse** ---
Press and hold the **left button** of the mouse and hit the **Esc** key to show the **Status** screen.
Press and hold the **right button** of the mouse and hit the **Esc** key to bring up the **Main Menu**.

OSD (On Screen Display)

OSD Menu provides a menu-driven interface to control the LCD KVM switch.


This OSD Menu has four types of display screens:

- Login Window** --- When powering on this LCD KVM switch, it will prompt a login window and ask for user name and password. This OSD function can setup one **SUPERVISOR** and eight **USERS**. **SUPERVISOR** can access to all OSD functions. **USER** can access to port name and port search only.
- Status screen** --- after the log in the Status screen will show up to display the current port settings and Hotkey type.
- Port Name** --- this menu displays port status, and you can switch to other port right here.
- Main Menu** --- there are eight menus to operate. They are listed as below:

MAIN MENU	Function
01 LANGUAGE	OSD language selection
02 PORT NAME EDIT	PORT NAME modification
03 PORT SEARCH	Quick searching by port name
04 USER SECURITY	Change password
05 ACCESS LIST	Define user access authority
06 HOTKEY	Change Hotkey
07 TIME SETTINGS	Modify auto-SCAN time interval
08 OSD MOUSE	Modify OSD MOUSE speed

Login Window

Power on the local console monitor, and power on the KVM Switch by plug in the power adapter. If the Security function is enabled (default is disabled), the Login window will show up waiting for user name and password.

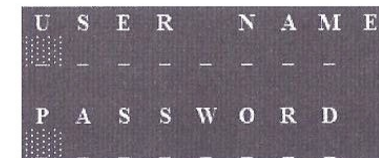


The Login window

The default is SUPERVISOR and default user name is eight zeros "00000000".

The default password is eight zeros "00000000".


There are case-insensitive, while OSD display fixed in upper case.

After login or port switch by panel button, OSD or Hotkey, the Status screen will show up to display the information of current settings -- one digit BANK NUMBER, two-digit PORT NUMBER, PORT NAME, and current Hotkey settings. Pressing any key or moving mouse will let the Status screen disappeared.

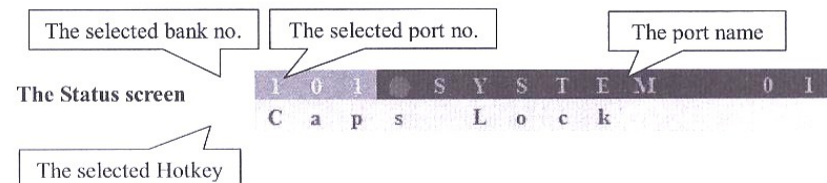

Auto-LOGOUT function

- In Login window, if no input for username and password over 1 minute, the screen will disappear. Hit any key to bring up the Login window again.
 - At normal operation, if no input from the console keyboard or mouse over 10 minutes the LCD KVM switch will turn off the screen display and show up Login window asking for user name and password. One more minute of keyboard/mouse inactivity, the monitor will be turned off
- The first page shows the current port name and the selected port, and the operation hint.

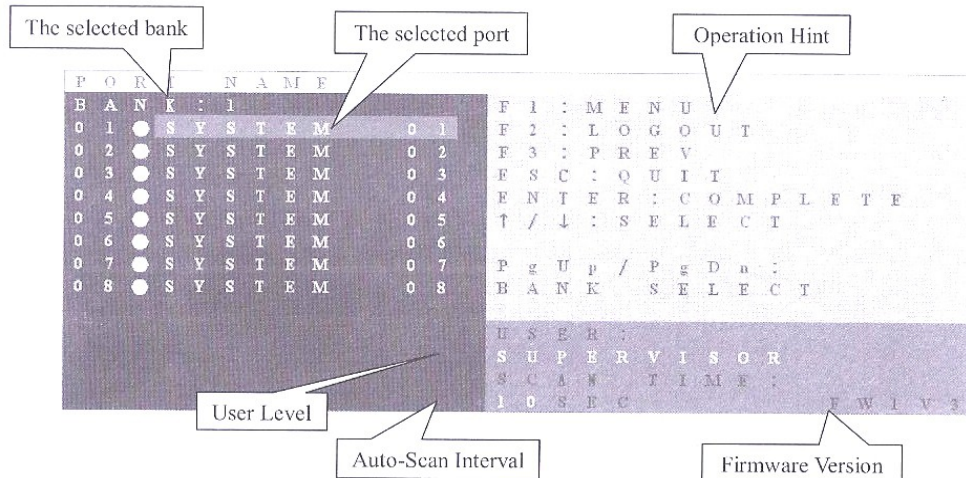

OSD Function Key	Description
F1	Go to the Main Menu
F2	To log out the OSD. If Security is enabled it will show up the Login window waiting for username and password. If Security is disabled it will show up the Status window
F3	Previous Menu
Enter	Switch to the selected port
↑ / ↓	Select the port (press Enter to switch)
PgUp	Previous Bank
PgDn	Next Bank
Esc	Exit
1	Show ports 01 ~ 08
2	Show ports 09 ~ 16
3	Show ports 17 ~ 24
4	Show ports 25 ~ 32

- **USER** --- There are two types of user levels: **SUPERVISOR** and **USER**. The default is **SUPERVISOR**. **SUPERVISOR** can setup and change the OSD settings at Main Menu. **USER** can only do the port switch and port search.
- **SCAN TIME** --- This is the time interval for auto-scan function. When auto-scan function is activated, the KVM switch will auto-scan the host port one by one in the interval as setting. Notice that the port without connecting to a computer/server will be skipped over on the scan.
- The numeric keypad is not supported, while in OSD screen, the arrow keys, PgUp, PgDn, and Enter keys are supported.

Main Menu


There are eight menus to choose from.



LANGUAGE

The OSD supports eight languages: English, French, German, Italian, Spanish, Simplified Chinese, Japanese, and Russian.

The default language is **ENGLISH**. Moving the cursor by keyboard (Up Arrow key “↑” or the Down Arrow key “↓”) or mouse to select the language you like.

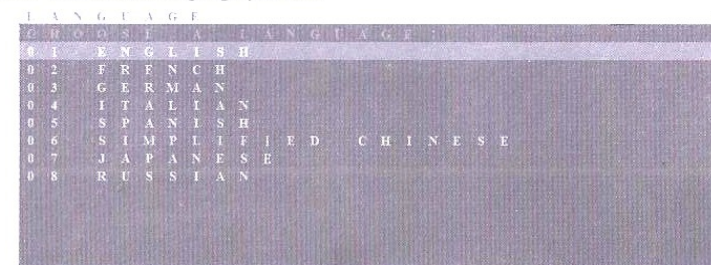

BUY ON
www.cablematic.com

PORT NAME EDIT

BANK	PORT	NAME	EDIT
0	1	● S Y S T E M	0 1
0	2	● S Y S T E M	0 2
0	3	● S Y S T E M	0 3
0	4	● S Y S T E M	0 4
0	5	● S Y S T E M	0 5
0	6	● S Y S T E M	0 6
0	7	● S Y S T E M	0 7
0	8	● S Y S T E M	0 8

The first line bar is Bank number, following lines are port name list.

Use keyboard (Up Arrow key “↑”, Down Arrow key “↓”) or mouse to select the port. After select the port, you can either press the **Enter** Key, or move the cursor to port name and double click **left button** of mouse to switch the port immediately. Press **PgUp** key or **PgDn** key for selecting the previous or next Bank.

Press **Enter** key for editing port name. Press **Esc** key to cancel the editing without any change or press **Enter** key to complete the editing.

PORT SEARCH



BANK	PORT	SEARCH
0	1	
0	2	
0	3	
0	4	
0	5	
0	6	
0	7	
0	8	

➤ Search the computer by port name. Enter “*” will show the all the port names.

USER SECURITY

There are two types of user levels: **SUPERVISOR** and **USER**. There is one SUPERVISOR and up to eight USERS can be configured.

USER	NAME	PASSWORD
S	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0
1		
2		
3		
4		
5		
6		
7		
8		

Press the **Enter** key or right button of mouse for editing. The left-top “S” means SUPERVISOR, and “1”, “2”, “3”,....., “8” mean USERS. The maximum length of NAME and PASSWORD is eight characters (A~Z and 0~9).

ACCESS LIST

BANK	PORT	NAME	1	2	3	4	5	6	7	8
0	1	● S Y S T E M	0 1	0	0	0	0	0	0	0
0	2	● S Y S T E M	0 2	0	0	0	0	0	0	0
0	3	● S Y S T E M	0 3	0	0	0	0	0	0	0
0	4	● S Y S T E M	0 4	0	0	0	0	0	0	0
0	5	● S Y S T E M	0 5	0	0	0	0	0	0	0
0	6	● S Y S T E M	0 6	0	0	0	0	0	0	0
0	7	● S Y S T E M	0 7	0	0	0	0	0	0	0
0	8	● S Y S T E M	0 8	0	0	0	0	0	0	0
1	0	● S Y S T E M	1 0	0	0	0	0	0	0	0
1	1	● S Y S T E M	1 1	0	0	0	0	0	0	0
1	2	● S Y S T E M	1 2	0	0	0	0	0	0	0
1	3	● S Y S T E M	1 3	0	0	0	0	0	0	0

Only SUPERVISOR can configure the ACCESS LIST. The first column is the port number, following the server/computer name list. The last 8 columns are the access right of each user. Use the **Enter** key or left button of mouse to active/deactivate the access right of each port. “X” means to disable access and “O” means to enable access.

HOTKEY

FUNCTION	KEY
ENTER	LOCK
NUMBER	LOCK
CAPS	LOCK
LEFT	CTRL
RIGHT	CTRL
LEFT	ALT
RIGHT	ALT
LEFT	WIN
RIGHT	WIN

➤ Some keyboards may not equip with all the special keys. Making sure the key you select is available in you keyboard.

TIME SETTINGS

SCAN TIME
10 SEC

When the Auto-Scan function is activated, the LCD KVM switch will auto-scan the host ports one by one in the interval as setting. Notice that the port without connecting to a computer/server will be skipped over on the scan. The interval range is 5 ~ 99 seconds, and the default interval is 10 seconds. Press “**Enter**” key to save the SCAN TIME setting.

OSD MOUSE

You can change the moving speed of mouse cursor in this item. There are three levels to choose from. The fastest moving speed is "FAST", the second is "MIDDLE" and the slowest is "SLOW".

Using "↑" and "↓" key on keyboard to move highlight bar to the wished speed. Press the **Enter** key to go into effect.



BUY ON
www.cablematic.com