







## HOW MUCH PER TIRE?

	MOTORCYCLE	8 oz. (237 mL)
	WHEELBARROW	8 oz. (237 mL)
	CAR/TRAILER	16 oz. (473 mL)
	TRUCK/SUV	20 oz. (592 mL)
	GOLF CART	20 oz. (592 mL)
	ATV/MOWER	24 oz. (710 mL)

## APPLICATION FORMULA FOR ALL TIRES

USE FOR THE SIZES NOT LISTED IN THE ABOVE APPLICATION CHART



**For low speed tires  
(Under 45mph/72kph)**

$$X'' \times Y'' \times 0.12 = \text{OZ. REQUIRED}$$

$$X(\text{CM}) \times Y(\text{CM}) \times 0.55 = \text{mL REQUIRED}$$

**For high speed tires  
(Over 45mph/72kph)**

$$X'' \times Y'' \times 0.065 = \text{OZ. REQUIRED}$$

$$X(\text{CM}) \times Y(\text{CM}) \times 0.30 = \text{mL REQUIRED}$$

**\*PRIME THE PUMP:** Fill the pump's flex tube with sealant by depressing the pump handle until flex tube is full. Attach flex tube to valve stem, then pump the recommended amount of sealant into the tire.

**NOTE:** One full depression of the pump dispenses approximately 1 ounce (30 mL) of sealant.

## HOW DO I INSTALL SLIME?




1. Position valve core in upper half of tire.

2. Slowly remove valve core with tool in cap.




3. Allow tire to fully deflate.

4. Remove object (if possible).

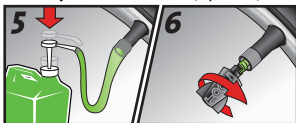

5. Attach hose and install sealant.\*

6. Replace valve core.

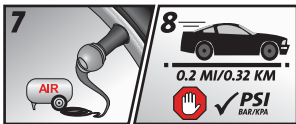

7. Inflate tire.

8. Drive. Stop. Verify seal and check pressure.