



USER MANUAL

SMART Mirror

27-INCH TV

MODEL NUMBER

27-V2-SMT
Version: 5A

Thank you for selecting a Séura SMART Mirror.

This product has been inspected and packaged carefully before shipment.

Please read this guide before beginning installation.

Please keep this manual for future reference.

Information in this manual is subject to change without prior notice.

FCC Information

This equipment has been tested and found to comply with limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment causes unacceptable interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced Radio/TV technician for additional help.



WARNINGS

To reduce the risk of fire, electrical shock and other injuries, keep these safety precautions in mind when installing, using, and maintaining your Television Mirror. The socket-outlet should be installed near the equipment and be easily accessible. The TV should be connected to a grounded GFCI protected main socket outlet.

WARNING: If you manipulate against the recommended usage, serious injury or death to user may result.

To protect against electric shock, do not immerse the power cord, power plug, or product in water or other liquid.

Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.

Close adult supervision is necessary when any product is used by or near children.

Do not operate any product with a damaged cord or plug or operate it after the appliance malfunctions or has been damaged in any manner.

Do not use the product close to any heat sources such as radiators, heat registers, stoves, or other products that produce heat.

Do not let the power cord come in contact with hot surfaces.

If you notice any smoke or scorched smell near the product, unplug power cord and refer to qualified personnel for service and/or repair.

Do not use or place any combustible or flammable substances near the product.

To electrically disconnect the product, turn OFF the product, then remove the electrical power plug from the outlet.

Do not place heavy articles on or step on the product.

Do not place the product on an unstable cart, stand, tripod or table.

Do not use this product for other than intended use.

This Séura product is only intended for use indoors.

This product is not waterproof. Do not immerse this product in water and/or expose to dripping or splashing water.

For added safety during a lighting storm, or when this product is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna.

Specifications of this product are subject to unannounced changes; this manual may thus not reflect the current technical status.



WARNING: READ ALL INSTRUCTIONS AND REVIEW ALL DRAWING SHEETS BEFORE ATTEMPTING TO INSTALL OR SERVICE THIS PRODUCT.

When installing and during use of this product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons including the following:

- Inspect the desired location for installation and be aware of all electrical wiring pathways, water pipes, gas lines, or other potentially hazardous conditions that may exist to protect from accidental damage during creation of on-site conditions.
- Ensure all required electrical specifications are adhered to and have been installed by the appropriate individuals and are code approved.
- Ensure all framing requirements, if needed, have been completed to building code and pose no structural issues.
- It is **REQUIRED** that this product is plugged into an electrical outlet protected by a Ground Fault Circuit Interrupter (GFCI) to protect against electric shock, fire, and/or injury. Failure to do so will void any warranty for this product.
- Only qualified individuals should attempt to service the product. Removing covers can expose you to high voltage and other dangerous conditions.
- To protect against electric shock, do not immerse the power cord, power plug, or product in water or other liquid.
- Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.
- Close adult supervision is necessary when any product is used by or near children.
- Do not operate any product with a damaged cord or plug or operate it after the appliance malfunctions or has been damaged in any manner.
- Do not let the power cord come in contact with hot surfaces.
- To electrically disconnect the product, turn **OFF** the product, then remove the electrical power plug from the outlet.
- Do not use this product for other than intended use.
- This Séura product is only intended for use indoors.
- This Séura product is not waterproof. Do not immerse this product in water and/or expose to dripping or splashing water as this could cause an electrical hazard.
- Retain this manual in a safe place for future reference.



WARNINGS:

Do not handle or remove your Television Mirror from the packaging until it is ready to be installed.

To avoid damage to the Television Mirror, only transport it in a vertical position. Transporting the product horizontally may permanently warp the mirror.

It is highly recommended that at least three (3) persons assist in the installation of the Television Mirror.

Contents

BEFORE USE

Lighting and Performance.....	5
Care and Maintenance	5

INSTALLATION AND SETUP

Display Requirements	6
Setup.....	7
Parts.....	8
Installation.....	9

MENUS AND SETTINGS

SMART Setup	10
On Screen Display Menu (OSD).....	14
Integration and Control.....	17

TROUBLESHOOTING AND TECHNICAL DETAILS

Troubleshooting.....	18
Ports and Media Support	19
Specifications.....	19
Product Limited Warranty	20

Lighting and Performance

The environment in which the Television Mirror is installed will affect the product performance. The key factors to consider for proper installation are surroundings and ambient light. Use the following guidelines to maximize the performance of the Séura product:

Type of Lighting

Avoid direct natural sunlight and excessive lighting. These conditions will diminish the television brightness and hinder its performance.

Light Direction

Avoid directing light toward the mirror. Position lights such that they illuminate objects in the room, not the mirror itself. For example, lights on the wall next to the mirror are more favorable than lighting located on the ceiling in the center of the room.

Background Colors

Sidewalls and furnishings that are dark, uniform, and non-reflective will provide better performance of the display. Bright colors, patterns, and contrasting colors will minimize the quality of the display.



DO use ambient or indirect lighting that illuminates the room, not the Television Mirror.



DO use shades or window treatments to block outdoor light that would interfere with picture performance.



DO NOT position lighting directly on the Television Mirror. This will wash out the picture and hinder the product's performance.



DO NOT position the product opposite bright, untreated windows. Natural lighting will interfere with picture performance.

Care and Maintenance

Our mirror technology has been developed to completely protect the mirror surface and allow easy maintenance. Please follow the guidelines listed for proper mirror care and cleaning:

- The glass surface can be cleaned with any conventional non-ammoniated glass cleaner. Care should be taken to use only a soft lint-free cloth. Apply all cleaners directly to the cloth and not the mirror surface. Never saturate the mirror surface as residual cleaner may seep behind the mirror.
- Stubborn spots can be removed with solvents such as mineral spirits, de-natured alcohol, and acetone. Immediately remove solvent and dirt residues per the prescribed methods above with a compatible glass cleaner or water.

Display Requirements

Operation and Storage Requirements

The ambient temperature for operating the device is between 41° to 104° Fahrenheit. Do not install the device in the proximity of heat sources, such as heating pipes, heaters, furnaces or other devices that radiate heat. Mount the device in such a way that it is protected against moisture. To prevent fire or electric shock, never allow liquids to enter the unit. The product must be stored in dry and well-ventilated rooms, without extreme temperature fluctuations. Heat sources and aggressive active substances may not be stored in the proximity of the device. The required storage temperature is 32° F - 140° F at an air humidity of 5 - 85% RH non-condensing. The device must be stored in the complete packaging, as delivered.

Installation Environment

Avoid direct light or sun exposure, direct proximity to heat sources, and outdoor installation. The product is specifically designed for indoor use only. There is the danger of fire and of electric shock and damage to the device if it is operated outdoors. Do not place any heat sources such as radiators and heat registers, etc. near the monitor. To reduce eye strain, avoid installing the Séura Television Mirror against a bright background such as a window. Position the monitor at the height of your eye level. Position the monitor directly in front of you at a comfortable viewing distance.

Installation

Have this product installed by qualified personnel only. Use the mounting systems which are specified or recommended by Séura. Install the product in a way that it is fixed properly and take care that children are not exposed to danger. Please take extra care during installation, avoid impacts. Before cabling your monitor, check that the power is off. To avoid any possibility of electric shock, always connect your equipment to properly grounded outlets. Use of power cords or adapters other than those provided may cause fire or malfunction. Place this product as close to the power socket as possible. Leave enough space to insert and remove the power plug on demand. Even if you switch off the product with your remote control, power is not cut off unless the power cord is unplugged.

The device may only be operated with the provided power adapter. The rated voltage is indicated on the product label. Use only power cords and plugs that are suitable for your local electrical outlets. Install the power cords in such a way that it does not obstruct anyone. Ensure furthermore that the cable is not clamped and that it cannot be pulled out accidentally from the power adapter. Do not install the power cords in the proximity of heating elements and never place heavy items on the cable or power adapter. Do not modify or arbitrarily repair the power cords.

CAUTION

Do not use any power cords or adapters other than those provided with this product! Use of power cords or adapters other than those provided with this product may cause fire, electric shock or malfunction. If several kinds of power cords are provided with this product, use the one that fits your power socket. Do not let the adapter hang down while using. Do not cover or wrap the adapter. Leave space around the adapter to prevent overheating. The individual components can be destroyed, if the polarity is reversed or an incorrect connection is used. A goodwill replacement is not possible in such cases, since each device is submitted to meticulous quality inspections prior to shipping. The connecting plugs must be attached in such a way that the connector is held firmly. Have trained technical personnel install the electrical facilities necessary for mounting. The power adapter must be installed in ventilated areas due to heat emission. Connect the power cord to a grounded outlet. Never cut or damage the power cord.

Please disconnect the device from the power adapter in the following cases:

1. The device is out of use for a lengthy period.
2. The device malfunctions or displays other unusual features, necessitating maintenance work.
3. During a thunderstorm.

Please plan the positioning of the power adapter and the source cables before proceeding with the structural measures and positioning of the Séura Television Mirror. Observe the protection zones when placing the power adapter! For in-wall applications please bear in mind that the power adapter has to be placed beyond the inset due to heat emission. Optional 50' adapter extension cables may be purchased from Séura.

NOTE

The power adapter should be adequately secured to prevent it from becoming unstable and/or falling. Make sure the power source circuits are properly grounded. Use the supplied power cord in order to connect it to the power source. If your installation requires a different power cord, be sure to use an officially approved power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. Please consider that the AC outlet for the power adapter is placed within reach of the Séura Television Mirror and should be easily accessible in case it needs to be powered off.

Install the unit in a dry environment where the operating ambient temperature will not exceed 40°C / 104°F. Also, don't position the power adapter on top of the Séura monitor system in order to prevent thermal overload. Ensure that your installation complies with your national and local safety rules. Any servicing, adjustment, maintenance or repair must be performed only by service-trained personnel.

Ensure the power adapter is installed in an accessible location, to access it easily in case of a defect. If you choose to place the power adapter in a separate space, take care that ventilation is present, because the power adapters need convection cooling for stable working conditions.

When placing the power adapter in a fully enclosed space, make sure the air flow around the sides and top of the power adapter is not restricted. According to a common rule of thumb please calculate the length of the power adapter plus an additional gap of at least 3" (75mm) all around for DC 19V power adapters.

Before using the device please check the following contents of the box for completeness:



SMART Mirror Assembly with SMART Module




YpBPr Adapter



Mounting Hardware



3-foot USB Cable

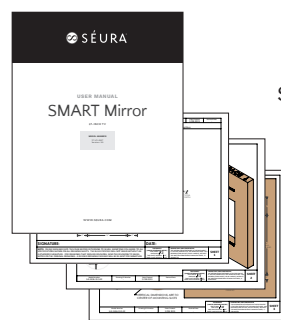

Manual and Drawing Package with Installation Instructions



SMART Module Power Supply



IR Emitter Cable



Composite Adapter



SMART Module




IR Remote Control



25-foot Wiring Harness (Remote Location)

DISPLAY CONNECTIONS

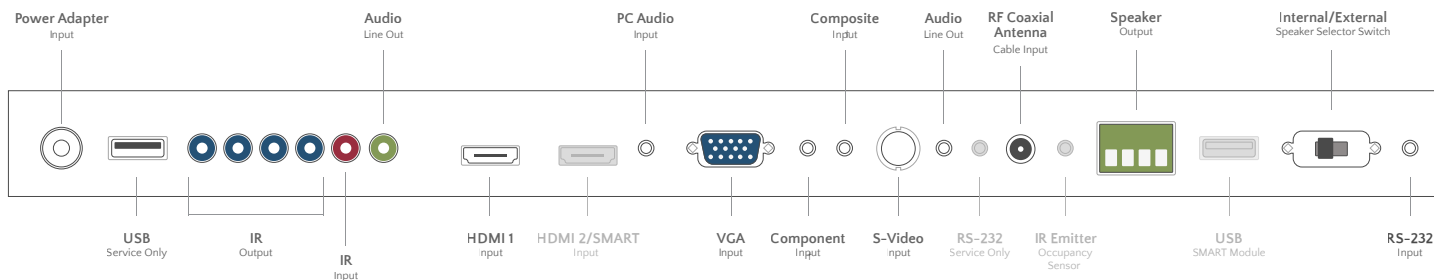

† Mini jack connection on TV, product includes adapter cables

Remote Functions

(Only for TV Control)

- POWER ON** (Red button)
- OFF** (Grey button)
- ZOOM** (Magnifying glass icon)
- STOP** (Square icon)
- CC** (Closed Caption icon)
- GUIDE** (TV icon)
- 1-9** (Numerical buttons)
- 0** (Zero button)
- ENTER** (Small square button)
- VOLUME +/-** (Volume up/down buttons)
- MUTE** (Mute icon)
- LAST** (Last channel icon)
- CHANNEL ARROWS** (Up/down arrow buttons)
- MENU** (Menu icon)
- EXIT** (Exit icon)
- FAVORITE** (A, B, C, D buttons)
- TV** (TV icon)
- HDMI 1** (HDMI 1 icon)
- HDMI 2** (HDMI 2 icon)
- HDMI 3** (HDMI 3 icon)
- YPbPr** (YPbPr icon)
- AV** (AV icon)
- VGA** (VGA icon)
- USB** (USB icon)
- DISPLAY** (Display icon)
- PLAY/PAUSE** (Play/Pause icon)
- STOP** (Stop icon)
- REWIND** (Rewind icon)
- FAST FORWARD** (Fast Forward icon)
- POWER OFF** (Red power icon)

Power On — Power Off

ZOOM configures ratio and appearance of picture

SLEEP designates power off after a specified time

Numerical selection for channels and settings

MUTE turns on or off all audio output

Use **VOLUME +/-** to increase or decrease volume level

Favorite Buttons

Quick Input Controls Quickly toggles between content input options

INPUT displays full input menu for source content

DISPLAY displays input and resolution information

CC turns on/off subtitles

GUIDE displays available EPG (Electronic Program Guide) when using tuner input

LAST recalls last channel viewed


Use **CHANNEL ARROWS** to increase or decrease channel selection

Menu Controls
Press **MENU** to launch On Screen Display menu
Use arrows and **OK** to navigate menu and make selections
Press **EXIT** to close the On Screen Display menu

Content Navigation Controls
For use with on demand, DVR, or CEC systems


MIRROR BACK ELECTRONIC CONNECTIONS

Remote-location configuration shown. Exact location varies by mirror size.

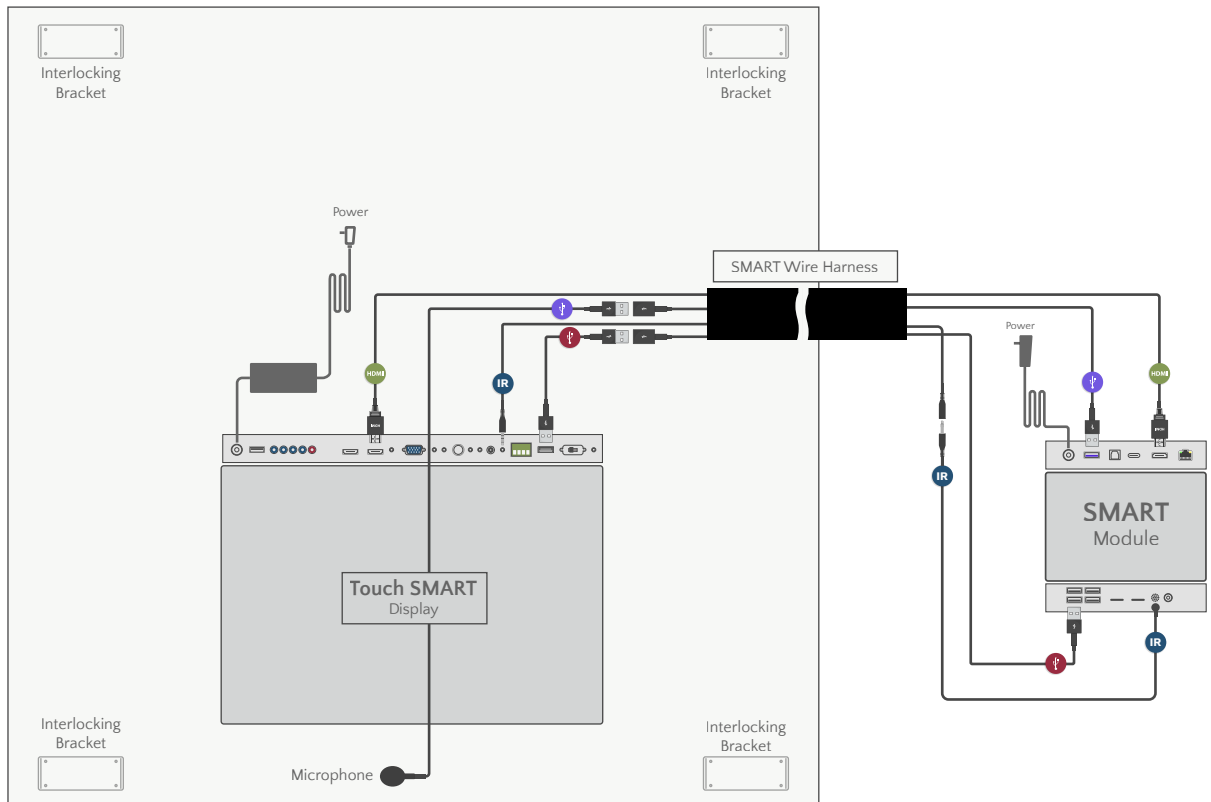

MIRROR BACK ELECTRONIC CONNECTIONS

On-mirror configuration shown. Exact location varies by mirror size.

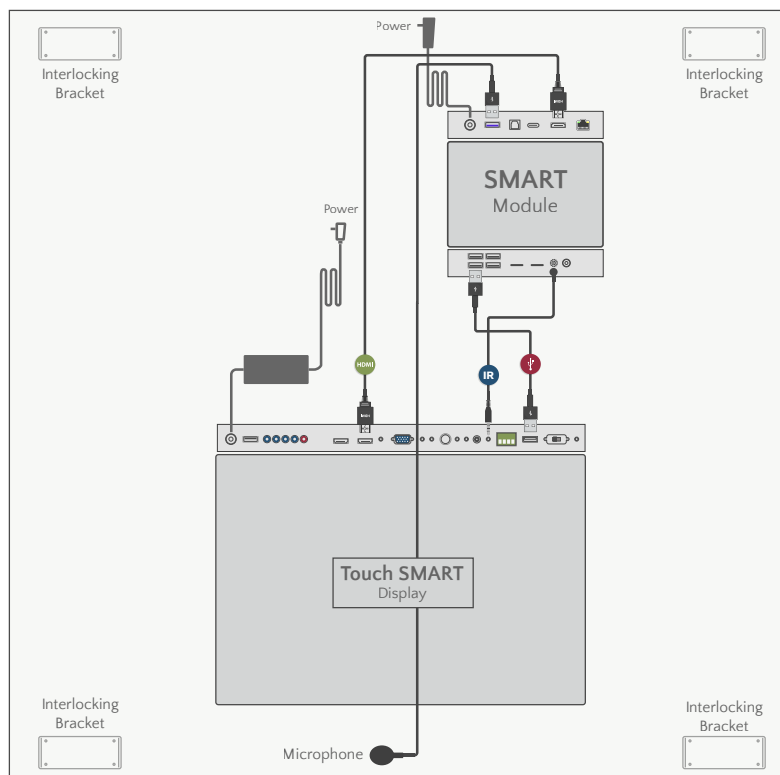

Refer to the included custom drawing package for specific dimensions and instructions for your custom product.

1. Verify that the wall is prepared appropriately. If the product is an in-wall, or “Recessed” configuration, verify the dimensions of the rough opening.
2. Install mounting brackets according to the dimensions and instructions shown on “Sheet 3” of the included drawing package. Ensure mounting brackets are securely fastened using framing members where possible.

NOTE: Take care when moving the product. Always transport the product with at least two people.

WARNING: Always transport the product in a vertical position. Moving the product in an unsupported horizontal position may result in product flex or damage.

3. Connect power supplies and audio/video components.
 - Test all electrical and electronic devices to verify proper integration and functionality before securely mounting it to the wall.

NOTE: If you opt to remote-locate the SMART module, it may be removed from the back of the mirror. SMART extension kits are available (sold separately) that allow the SMART module to be located as far as 25’ away from the mirror.




4. Position SMART Mirror close to wall surface and securely engage mounting brackets.
 - Allow for a ¼” ventilation gap for proper air flow and heat transfer.

5. Check to ensure the SMART Mirror is fully engaged and secure to the mounting brackets.




NOTE:

All Séura drawing packages indicate generalized nominal residential wood framing construction, and are not indicative of any particular building code. It is the installers responsibility that all electrical, audio/visual, and framing construction are code compliant to the municipality in which the product is being installed. Modifications made to Séura recommendations are at the sole discretion of the installer and release Séura of all liability.

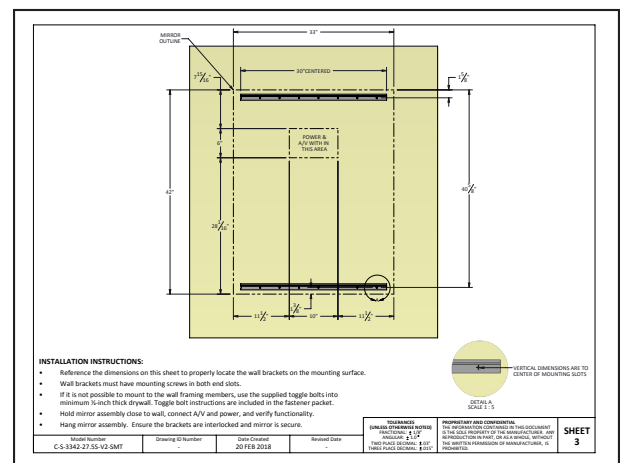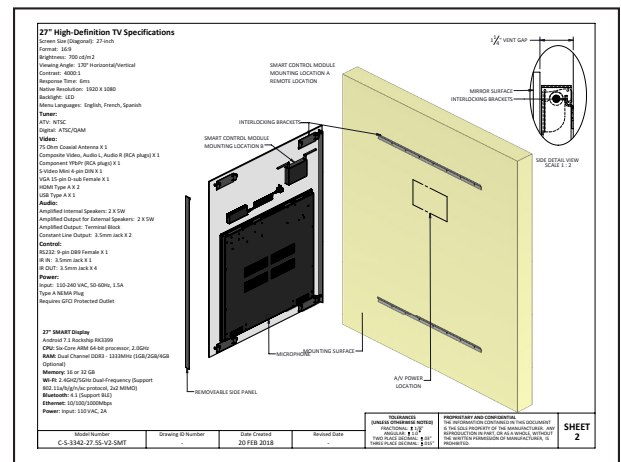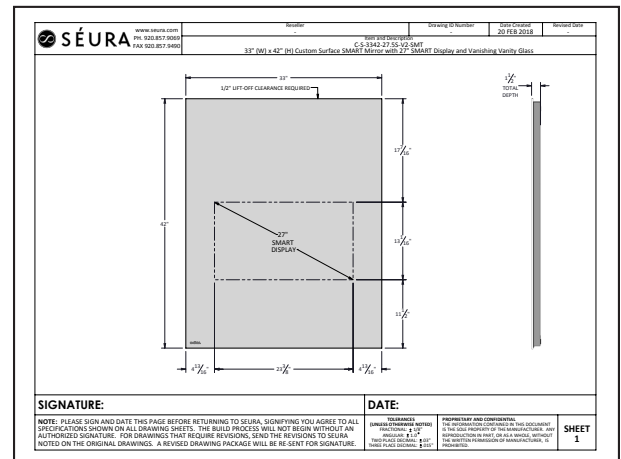


SMART Setup

1. Establish the type of connection that will be used with the smart mirror.
 - a. If the mirror needs a wired connection, you will need to plug in an ethernet cable and then power on. Then you will be taken to step 2.
 - b. If the mirror is using a wireless connection, power the mirror on, and internet connectivity will be checked. If connection needs to be established, configure the connection in settings. To set up the connection in settings you will need to select a network and provide the password if needed. After connection is established you will need to press the home button located in the bottom center.

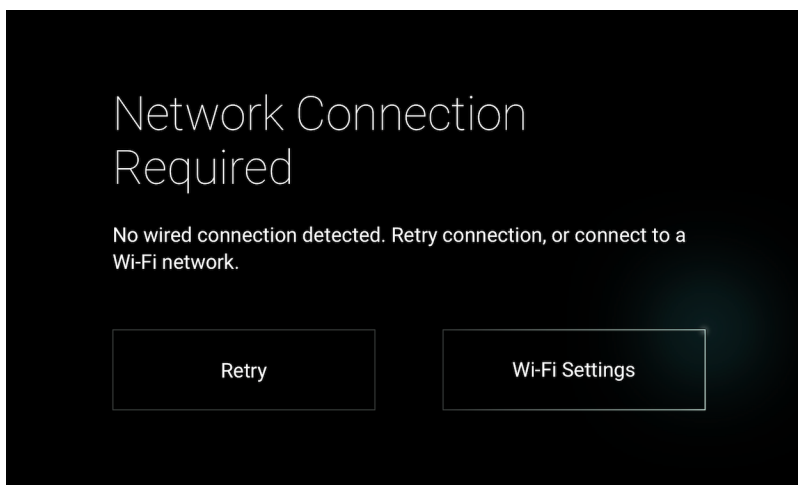

2. Provide a profile name, this will appear when the mirror greets you.

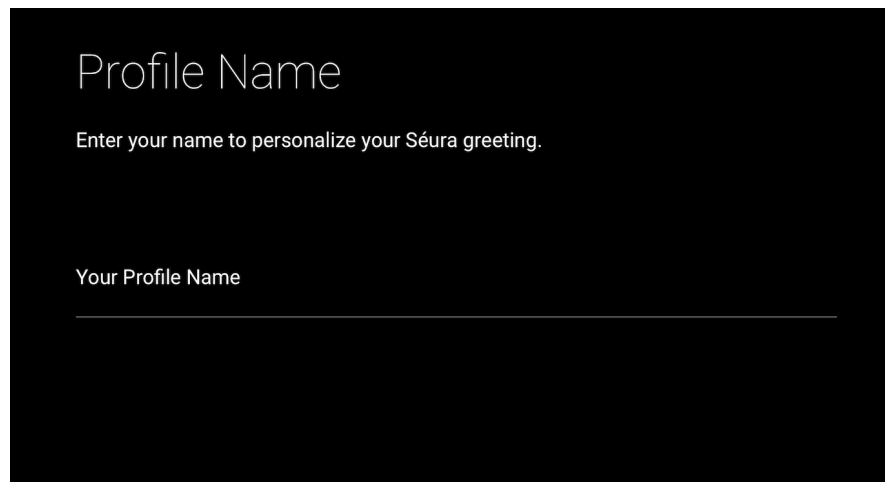

3. **(Optional)** Provide a PIN (personal identification number) that is 4,5, or 6 digits in length. You will be asked to confirm your PIN by entering it in a second time. A PIN is an option to provide security to the information that is accessible through your smart mirror. To continue without a PIN, press the **Skip** button in the top-left corner.




Create a PIN

For on site security, create a 4, 5, or 6 digit PIN. (Optional)

PIN

4. Confirm your zip code. To change your zip code, tap the text field and enter in the correct zip code. Your zip code is utilized to provide you with weather forecasts. You are able to choose whether the degrees are in Celsius (C°) or Fahrenheit (F°).

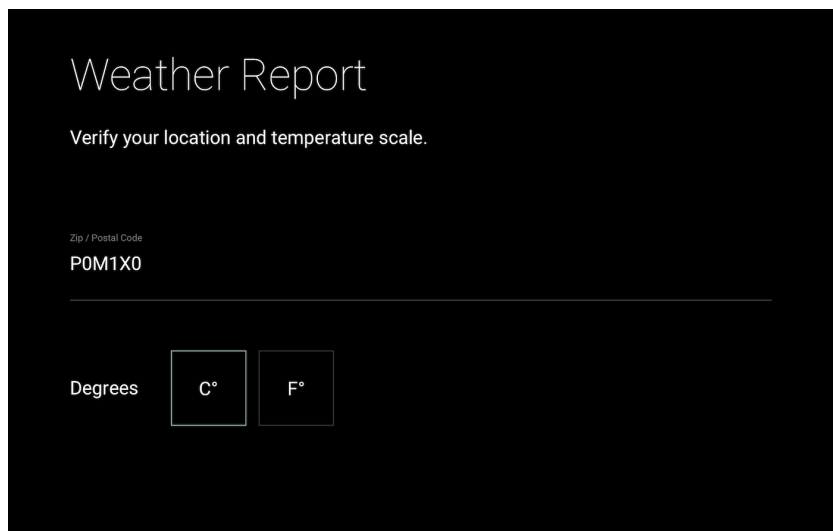

Weather Report


Verify your location and temperature scale.

Zip / Postal Code
P0M1X0

Degrees

SMART Setup

5. Verify the date and time given. If you choose to change the time or date simply select the “Change date & time” button and you will be taken to the system settings. You will need to select the back button to return to set-up.

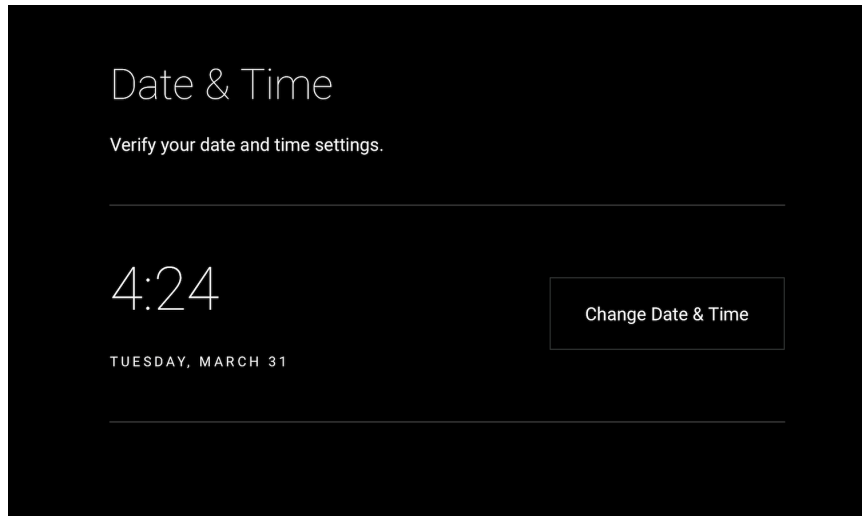

6. Provide a Google email account. You will be prompted to provide this information and press continue. This is used to access third party apps and receive updates to your smart mirror. If you do not have a Google account, you can make one.



Note: It is important to keep in mind that the Google account you provide will be the master account for your smart mirror.

Next Step: Google Sign In

Next, we'll have you sign in to or create a Google Account.


A Google Account is required to ensure you have access to third party apps and to get the latest security updates for your system.

7. The smart mirror will use the Google account provided in the step above to pull the account's emails. You do have the option to opt out of email and calendar information taken from this account.
 - a. To add a new account, you will press the "Add Account" button where you will choose which email provider you would like to use. Once the provider is chosen you will be prompted to enter in the necessary information such as email and password.
Note If you have selected Yahoo! as a provider you will be asked to confirm your password.*
 - b. It is also important to keep in mind that you are able to have up to 16 email accounts on your Smart Mirror

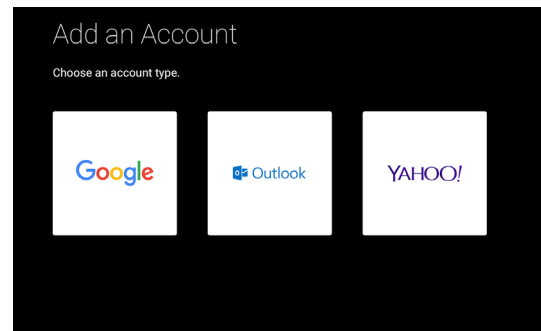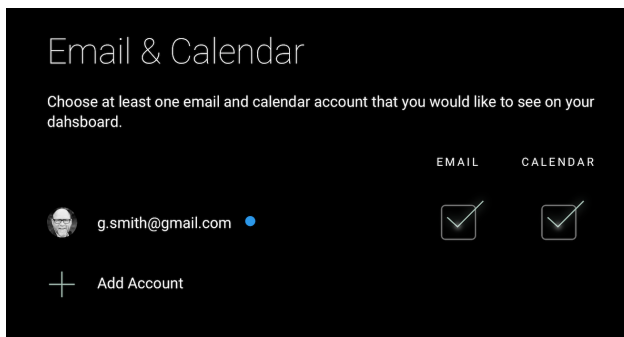


8. Once all steps above have been completed you will be shown a completion screen. After selecting "Finish" you will be taken to the lock screen in which you will provide your PIN from step 3 if you set one up.

With PIN

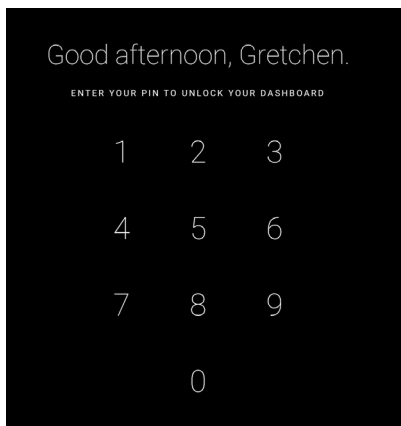

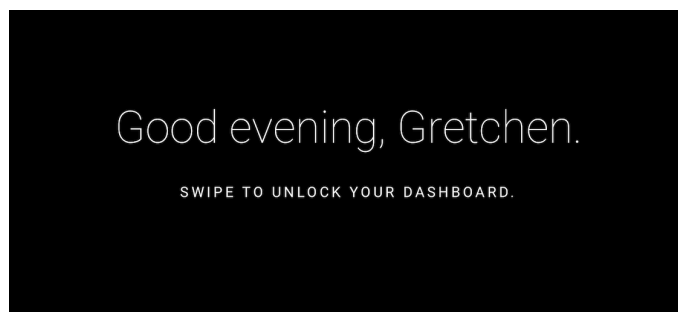


Without PIN



TV On Screen Display Menu (OSD)





On Screen Display Menu (OSD)

In the on screen display menu (OSD) you can adapt the characteristics of your display based on personal preferences. OSD menus include **Video, Audio, TV, Setup, and Parental**.

1. Press  on your remote control to open the OSD menu
2. Navigate within the OSD with the left/right and up/down arrows
3. Change settings with the left/right arrows
4. Go back one step with 
5. Confirm selection with the OK button
6. Press  to exit the OSD menu.

Input Source Selection

In the Input Source menu, you may select from the available input sources.

1. Press  to power the Television on
2. Press  to display the Input Source list OR use the quick input controls on the remote to directly designate the input source.
3. Press the up or down arrows until the desired Input Source is highlighted.
4. Press OK to confirm selection of the chosen input and clear the Input Source list from the screen or press  again to switch through the signal inputs.
5. Press  to close the Input Source list without selecting an alternative source.



Video Settings

The Video Settings menu offers options to enhance and refine the image characteristics of your Séura Television Mirror. These settings are based on ambient conditions of illumination and personal preferences.

Adjustment options include:

Picture Mode

Brightness

Contrast

Saturation

Hue

Sharpness

Back Light

Advanced Video

Reset Picture Mode



PICTURE MODE

Within the **Picture Mode** menu you can customize the image display according to your preferences.

Your options: **Home, Vivid, User, Cinema, Sport**

The **Home** setting is recommended for most viewing environments. Select the **User Mode** to adjust your preferred settings manually.

Advanced Video Settings

The Advanced Video Settings menu offers further options to refine the image characteristics of your Séura Television Mirror.

Adjustment options include:

- DNR**
- MPEG NR**
- Adaptive Luma Control**
- Flesh Tone**
- DI Film Mode**
- Blue Stretch**
- Game Mode**
- Blue Mute**
- Gamma**
- Color Temperature**



COLOR TEMPERATURE

Within the **Color Temperature** menu you can customize the **Color Temperature** of the picture according to your preferences.

Your options: **Standard, Warm, User, Cool**

Audio Settings

The Audio Settings menu offers options to enhance and refine the sound characteristics of your Séura Television Mirror based on personal preferences.

Adjustment options include:

- Balance**
- Bass**
- Treble**
- Sound Surround**
- Sound Mode**
- MTS**
- Audio Language**
- SPDIF Type**



TV OSD (cont.)

TV Settings


The TV Settings menu offers options to set up and adjust preferences using the built-in television tuner.

Adjustment options include:

Tuner Mode

Channel Scan

Channel Skip

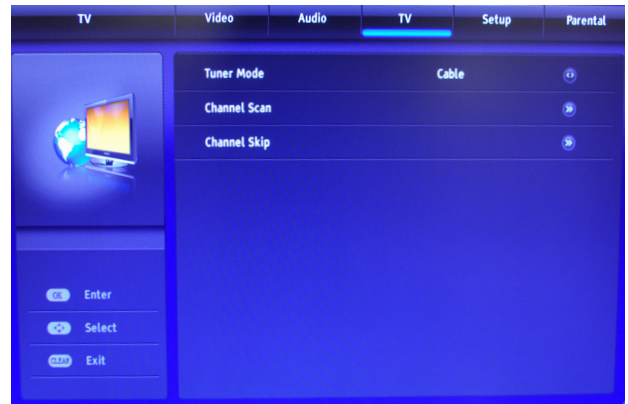

TUNER MODE

Select the option for obtaining television programming: **Cable, Antenna**

CHANNEL SCAN

Select Channel Scan to begin automatic scanning of channels. This process takes a few minutes and depends on program availability.

CHANNEL SKIP

Designate preferences for skipping channels.

Setup Menu

The Setup Menu offers options to determine fundamental settings of your Séura Television Mirror based on personal preferences.

Adjustment options include:

OSD Language

Caption

Time Setup

Reset Default



TIME SETUP

Options within the Time Setup selection include **Time Zone, Time, and Sleep Timer.**


TIME ZONE


The local time zone may be selected using the graphical map of North America

SLEEP TIMER

Within the **Sleep Timer** menu you can determine a timespan after which the Séura Television Mirror will turn off automatically.

Your options: **Off, 10, 20, 30, 40, 50, 60, 90, 120 minutes**

 The Sleep Timer can also be activated and deactivated directly with on the remote control.

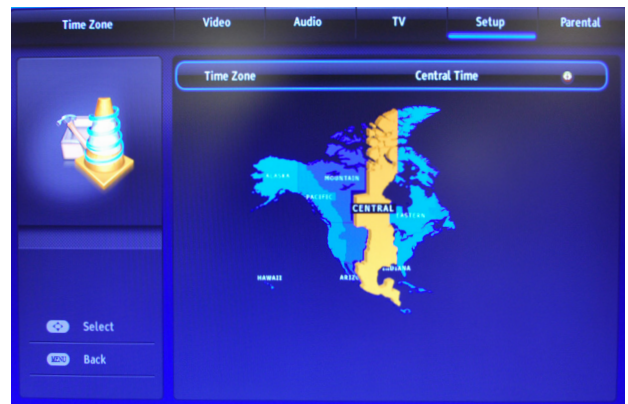

Parental Menu

The Parental Menu offers options to restrict program viewing based on various national rating systems.



To access the menu, enter the 4-digit Password using the keypad on the remote. The factory default password is "0000".

Adjustment options include:

Program Block

Change Password

Clean All (or reset settings)

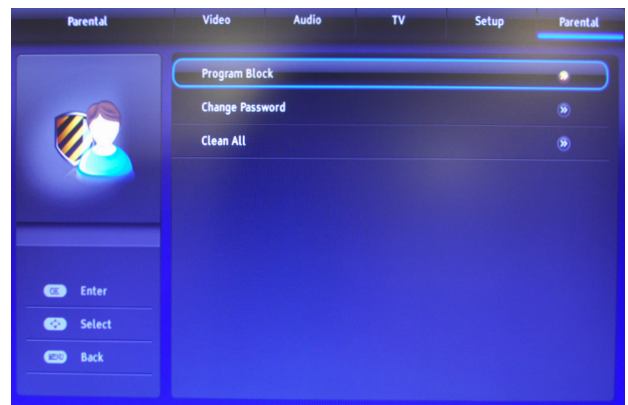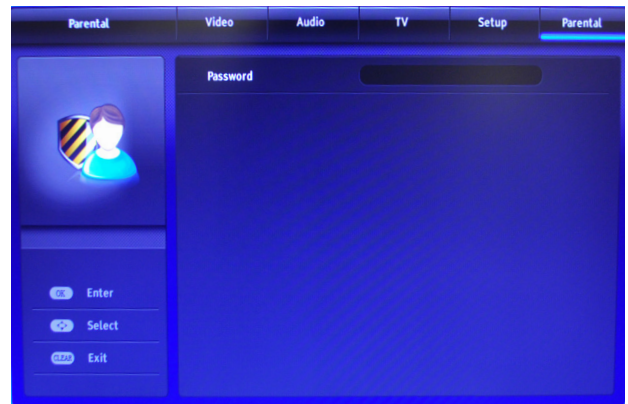


Integration and Control

For complete control documentation, please visit www.seura.com/download-center

- RS232 Protocol
- IR Commands

For additional technical support, please contact Séura at **1-800-957-3872** during regular business hours: M-F 8:00 am - 4:30 pm, Central Time.

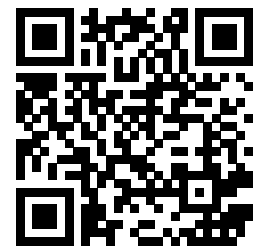

Scan here to visit the download center on your mobile device

Troubleshooting

If the product is not working properly, please follow the below troubleshooting recommendations before contacting customer service:

Television

Symptoms	Possible Solution
Blank screen	Check the status LED. The LED should illuminate blue for a few moments when the TV is powered on, then extinguish. Please check if an input source is available and that the port of the device has been connected correctly in the Service Settings/ Input Ports menu. Press "Menu" on your remote control: you should see the OSD menu. Check your settings for misconfigurations and adjust accordingly. Alternatively, perform a factory reset to restore the Television Mirror to its default settings. If the problem still exists contact customer service.
Color defects	Check that the signal cable connector is properly connected and that the connection pins are not bent or damaged.
The image is unsatisfactory	Adjust the picture characteristics as described in the above-mentioned section "Video Settings". Image is not stable Check that the display resolution and frequency from your media source is compatible with the Television Mirror.
Error message: "No Signal"	Check that the connected media sources are switched on. Check that the signal cable connector is properly connected and that the connection pins are not bent or damaged. Press "Menu" on your remote control: you should see the OSD menu. Check your settings for misconfigurations and adjust accordingly. Alternatively, perform a factory reset to restore the Television Mirror to its default settings. If the problem still exists contact technical support.
Low or no sound	Press "Volume Up" and/or "Volume Down" on your remote control and check the audio connection cable(s). Make sure that the Volume Limit setting in the Service Settings menu has been set to an audible value. Ensure that the speaker selector switch on the unit is correctly switched to designate internal or external speakers.
Remote control doesn't work	Replace the batteries in the remote. Tip! If the problem persists, verify that the remote is sending IR signal by observing the IR output on the remote via a cell phone camera. IR signal will appear blue in the camera. If there is no IR signal or the problem persists, contact technical support.


SMART

Symptoms	Possible Solution
Frozen or unresponsive screen	Power cycle the SMART Module. Unplug the device, wait 15 seconds, then turn it back on. If the problem continues, contact technical support.
The touch screen is unresponsive	Like other touch screens, Séura's SMART Mirror touchscreen requires contact to activate. This may be hindered by wet hands or excessive moisture. Dry your hands and the surface of the mirror before use. If the problem continues, contact technical support.
Videos don't play	If video streaming apps don't play video reliably, the most likely problem is a poor internet connection. Check the signal strength in the Android Settings menu and perform an online network speed test. If connected wirelessly, you may improve signal to your SMART Mirror by moving the SMART Module closer to the signal source. If the problem continues, contact your internet service provider.
Downloaded apps don't appear in the app drawer	Power cycle the SMART Module. Unplug the device, wait 15 seconds, then turn it back on. If the problem continues, contact technical support.
Accidentally removed a widget from home screen	All widgets including Séura Dashboard widgets may be added by tapping and holding any blank area on the home screen. The widgets and settings menus will appear below the home screen. Select "Widgets". From this menu, all widgets installed on the device may be added to any screen and re-sized according to the users needs.

NOTE: If the above troubleshooting hints do not help you to find a solution, please contact Séura.

Technical Specifications

DISPLAY CONNECTIONS

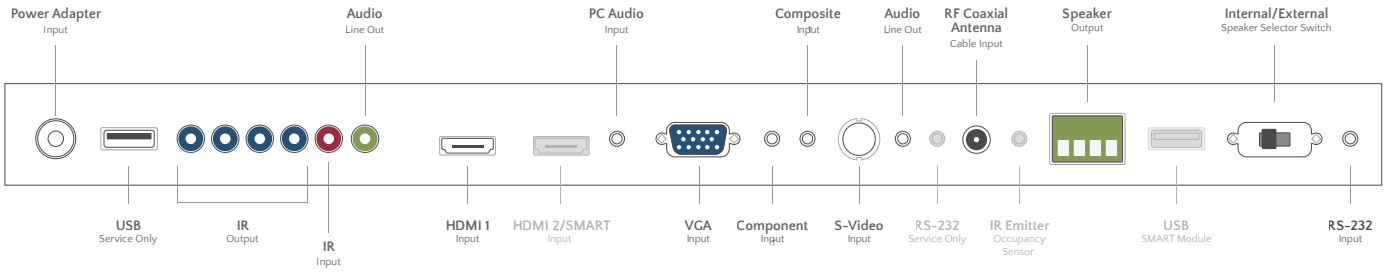

27 INCH DISPLAY
Model: 27-V2-SMT, Version: 5A


CUSTOMIZATIONS		
CUSTOM DESIGN OPTIONS		Custom frame, display placement, matching mirrors
MAXIMUM MIRROR SIZE		Up to 94" w x 70" h or 70" w x 94" h
MINIMUM MIRROR SIZE		28" w x 32" h (Recessed) 29" w x 36" h (Surface)
STANDARD MIRROR SIZES		30" w x 42" h 42" w x 42" h 60" w x 42" h
VIDEO		
VIEWABLE SCREEN SIZE		23 3/8" w x 13 1/16" h
DISPLAY RESOLUTION		1920 x 1080
ASPECT RATIO		16:9
CONTRAST RATIO		Typical 1200:1
TUNER		ATSC, NTSC, QAM
RESPONSE TIME		3.5 ms
VIEWING ANGLE		170° Horizontal, 160° Vertical
INTEGRATION		
HDMI		1
COMPONENT YPBPR		1†
COMPOSITE (AV)		1†
VGA		1
S-VIDEO		1
RF COAXIAL ANTENNA		1
USB		1
IR INPUT		1
IR OUTPUT		4
AUDIO		
PC AUDIO IN		1
FIXED LINE OUT		2
PHOENIX TYPE SPEAKER OUTPUT		2 x 5W @8Ω/ channel
INTERNAL SPEAKERS		2 x 10W
SMART MODULE		
STORAGE		128GB Internal Storage MicroSD (TF) Card Slot
RAM		4GB
HARDWARE PLATFORM		Android
OPERATING SYSTEM/VERSION		Android 7.1 "Nougat"
CPU		2.0GHz Six-Core ARM 64-bit processor
POWER SOURCE		2A @ 110V power consumption
ETHERNET		1000 Mbps Ethernet
WI-FI/WIRELESS TYPE		2.4GHz/5GHz 802.11a/b/g/n/ac
BLUETOOTH		Bluetooth 4.1 (Support BLE)
PRE-LOADED WIDGETS		Mail, Calendar, Weather, Time

27 INCH DISPLAY
Model: 27-V2-SMT, Version: 5A

MOTION SENSOR		
TYPE		X-Band Frequency Occupancy Sensor
RANGE		12 Feet
DEFAULT SLEEP TIME		5 Minutes
INSTALLATION		
MOUNT OPTIONS		Integrated Surface Mount or Integrated Recessed Mount
SURFACE MOUNT OFF-WALL DISTANCE		1.5"
RECESSED MOUNT IN-WALL DEPTH		.75"
RECESSED MOUNT WALL OPENING SIZE		28" w x 32" h
RECESSED MOUNT VENT GAP		.25"
OTHER		
CERTIFICATIONS AND COMPLIANCE		FCC
WARRANTY		Séura warrants SMART Mirrors with respect to Séura's labor, glass, structure, and assembly for three (3) years; display including remote, power supply and SMART Technology for one (1) year.
REMOTE		Séura IR Remote Control

MIRROR BACK ELECTRONIC CONNECTIONS

On-mirror configuration shown. Exact location varies by mirror size.

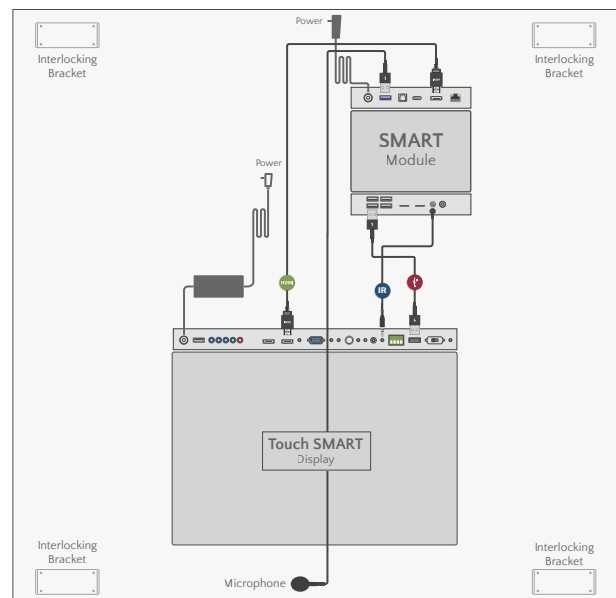

† Mini jack connection on TV, product includes adapter cables
Additional cost for customizations.

The standard limited warranty policies of Séura, Inc. ("Séura") shall apply to all equipment or other goods ("Products") at the time of sale to any authorized Séura distributor and/or product reseller. These warranty policies may be modified by Séura from time to time. Copies of the standard limited warranties then in effect for a particular Product will be made available upon request and are also available on the Séura website at <https://www.seura.com/warranty/>. This warranty is valid only with respect to Product sales in the U.S. and Canada.

If any Product fails to work or operate properly because of a defect in materials or workmanship, Séura will, if notified of such defect within the applicable warranty period indicated below, at its option, either: (a) repair the Product with new or refurbished parts onsite or at Séura's factory, including Séura's labor if applicable; or (b) replace the Product with a new or refurbished Product; or (c) if repair or replacement is not commercially feasible, refund an amount equal to a pro rata share of the current MSRP (as determined by the remainder of the warranty period). The remedy chosen will be in good faith and at the discretion of Séura. In no event will Séura be responsible for any costs related to installation and/or removal of Product.

Séura warrants its Products as set forth below, which warranty periods shall start and run from the date of Séura's sale of the Product:

- **Lighted Mirrors** (excluding Select Lighted Mirrors) with respect to Séura's labor, glass, structure, and assembly for three (3) years; electrical and LED light strips for five (5) years.
- **Select Lighted Mirrors** with respect to Séura's labor, glass, structure, and assembly for one (1) year; electrical and LED light strips for three (3) years.
- **SMART Mirrors, Alexa Mirrors, and Bluetooth® Mirrors** with respect to Séura's labor, glass, structure, and assembly for three (3) years; display including remote, power supply and SMART Technology for one (1) year.
- **TV Mirrors** with respect to Séura's labor, glass, structure, and assembly for three (3) years; TV including remote and power supply for two (2) years.
- **Lighted TV Mirrors** with respect to Séura's labor, glass, structure, and assembly for three (3) years; electrical and LED light strips for five (5) years. TV including remote and power supply for two (2) years.
- **Indoor Waterproof TVs** with respect to Séura's labor, glass, structure, and assembly for three (3) years; TV including remote and power supply for two (2) years.
- **Outdoor Displays** with respect to Séura's labor, structure, assembly, display including remote, and power supply for two (2) years.
- **Indoor and Outdoor Mounts** for two (2) years against defects in original hardware and/or workmanship. Excludes corrosion or rust resulting from damaged, scratched or chipped paint or other surfaces.
- **Outdoor Soundbars** with respect to labor and parts for one (1) year.
- **Protective Display Covers** for two (2) years against material and/or workmanship defects.
- **Decorative Frames** for one (1) year.

Exceptions to Warranty: This warranty is valid only with respect to Product sales in the U.S. and Canada. Séura does not warrant Products against defects arising out of, related to, or caused by, whether totally or partially, and whether directly or indirectly, any of the following:

- A. Failing to properly clean and maintain, any Product, part or component of a Product, including, but not limited to, filters, front bezel, and other Product areas or components;
- B. A Product's extended use, including particularly, commercial applications, where a Product is operating on average more than twelve (12) hours per day on a permanent or extended periodic basis;
- C. Circumstances, damage (including concealed damage) or other conditions occurring during shipment of a Product or at any time after a Product leaves Séura's facility (including without limitation transport of the Product to or from Séura before or after authorized service). Products must be packed properly using original packaging or Séura replacement or pre-authorized packaging. Customer assumes all risk, and costs, including transportation costs, while Product is in transit to or from Séura;
- D. Circumstances, damage or other conditions occurring during unpacking and/or removal of a Product from its original packaging, including the removal of protective material;
- E. Improper, incorrect, or insufficient AC supply voltage to a Product;
- F. Alterations, modifications, including use of unauthorized mount, or changes to a Product without Séura's prior written authorization;
- G. The incorporation of a Product into or within a product of a third party, without Séura's prior written authorization;
- H. A Product's misuse, neglect use, abuse, or improper operation, including the failure to follow a Product's normal and ordinary operating instructions;
- I. The effects of fire, flood, lightning, electrical surges, water and other liquid infiltration, smoke, insect or animal infestation, sand, mud, chemicals, improper cleaning agents and other substances not intended to come into contact with a Product, including any such substances contact with a Product as the result of acts of God;
- J. The improper or faulty installation, setup, or adjustment of a Product;
- K. A Product's repair, attempted repair, or total or partial disassembly by any party other than a Séura authorized service representative;
- L. When the Product occurs with pixel errors within the specified and permitted area. (For more information about this, inquire directly with Séura regarding the Séura Pixel Policy.)
- M. Corrosion that does not affect the performance of a Product or the reasonable cosmetic appearance of a Product (including without limitation, scratches or other paint or finish damage to a Product that lead to or are caused by, in part or in total, corrosion);
- N. When a Lighted Mirror or Lighted TV Mirror using LEDs retains an overall brightness greater than 70% of the original brightness, including cases whereas an individual LED fails; and/or
- O. Normal wear and tear on the Product.

Séura does not warrant that its Products will integrate with any third party products at present or in the future. It is purchaser's responsibility to test and verify compatibility. Further, Séura does not warrant its software or programs, or any content downloaded after shipment. It is the purchaser responsibility to take precautions to protect the product from malware, viruses, data loss, and other potentially destructive programs.

Warranty Disqualifiers. This Limited Warranty only extends to, and runs for the benefit of, the original purchaser of the Product and only covers a Product purchased new. All warranty claims must be submitted together with original proof of purchase and any Product subject to a warranty claim must retain its original Séura serial number. Séura reserves the right to require any warranty claimant to produce the original purchase receipt or other original purchase date proof as may be reasonably required by Séura to verify the Product's warranty eligibility. Séura shall have no liability with respect to Products whose serial number has been removed, defaced, replaced, or otherwise tampered with in any manner. Séura reserves the right to examine all failed product components and determine, in its sole discretion, whether any product components are defective and covered under warranty.

LIMITATION OF LIABILITY. THE EXPRESS LIMITED WARRANTIES SET FORTH HEREIN ARE IN LIEU OF ALL OTHER WARRANTIES, WRITTEN OR ORAL, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE. SÉURA WILL NOT BE LIABLE FOR ANY DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED ON INCONVENIENCE, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF THE CUSTOMER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SÉURA WILL NOT BE LIABLE FOR ANY LOSS, DAMAGE OR LIABILITY OR ANY DIRECT, INCIDENTAL, INDIRECT, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR MISUSE OF A PRODUCT, OR ARISING OUT OF ANY BREACH, BY THE PURCHASER OF A PRODUCT, OF THIS LIMITED WARRANTY. SÉURA SHALL NOT BE LIABLE FOR ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY. SÉURA SHALL NOT BE LIABLE FOR ANY VERBAL WARRANTY ASSURANCES MADE BY ANY EMPLOYEE OR AUTHORIZED DISTRIBUTOR, RESELLER OR INSTALLER THAT CONFLICTS WITH OR ENHANCES THE WRITTEN WARRANTY HEREIN. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON HOW LONG AN IMPLIED LIMITED WARRANTY LASTS, SO THE EXCLUSIONS MAY NOT APPLY TO A PARTICULAR PURCHASER. NOTWITHSTANDING ANYTHING HEREIN TO THE CONTRARY, SÉURA'S MAXIMUM AGGREGATE LIABILITY RELATED TO ANY WARRANTY CLAIM OR WITH RESPECT TO A PRODUCT SHALL NOT EXCEED THE THEN CURRENT SÉURA WHOLESALE PRICE OF THE SPECIFIC PRODUCT FROM WHICH THE CLAIM DERIVES.

NOTICE OF ANY WARRANTY CLAIM MUST BE RECEIVED BY SÉURA, IN WRITING, PRIOR TO THE EXPIRATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. THE PRODUCT WARRANTY APPLIES ONLY FOR THE PERIODS SET FORTH ABOVE.

Warranty Procedure. A warranty claimant must contact Séura at 920-857-9069 for a diagnostic. Please have your Product receipt available. At that time, Séura will provide technical support over the phone to attempt to fix the problem. If unsuccessful, a Séura Representative will determine if the Product will be serviced onsite, replaced, or returned to Séura's factory in Green Bay, Wisconsin for repair. If Séura determines that the Product is not covered under the warranty or damaged in shipping, Séura will notify and inform the purchaser of service alternatives that are available on a fee basis.

Toll-Free Technical Support: Please call 1-800-957-3872 to speak with a Séura Technical Support Representative. Séura Representatives are available Monday-Friday, 8:00am-4:30pm Central Time.

Onsite Service: If Technical Support determines the problem may be fixed onsite, a Séura service agent will be scheduled within 24 hours to service the unit. A Séura representative will work with the customer to schedule a convenient time for onsite service. Parts may be sent to the customer's location. Onsite service is available in the United States during normal business hours Monday – Friday, unless other special circumstances exist and special arrangements are made.

Factory Service: If Technical Support determines the Product must be sent back to Séura's factory for repair, the customer must follow return instructions below. Séura will ship the repaired Product to the authorized reseller, installer or customer's address. This warranty does not cover removal or installation costs of Products.

Advanced Replacement: If Technical Support determines the Product must be replaced, Séura will ship a new Product to the authorized reseller, installer or customer's address. The customer must follow return instructions below to send the damaged Product back to Séura's factory. Credit card information will be collected before shipment of the replacement Product. If Séura does not receive the original Product back within thirty (30) days of shipping the replacement Product, the credit card on file will be charged at full MSRP. This warranty does not cover removal or installation costs of Products.

Return Instructions: If return is necessary, Séura will issue a return goods authorization (RGA) number and, if applicable, specific return and shipping instructions. A Product will only be accepted for warranty claims if returned and shipped to Séura in the Product's original packaging materials. If original packaging is not available, please contact Séura to receive authorized replacement packaging. Packages not bearing the issued returned goods authorization (RGA) number will not be accepted by Séura and will be returned to sender. In addition to the Product, the package must include the warranty claimant's original sales receipt for the purchase of the Product. All Product returns shall be received by Séura, at 1230 Ontario Road; Green Bay, WI 54311 with freight prepaid by the warranty claimant. Séura shall not be responsible for, and the warranty claimant assumes and retains all such responsibility, any damage or loss to or of the Product during shipment to and from Séura as the result of a warranty claim.

Exclusive Remedy. This Limited Warranty sets forth the exclusive remedies of a warranty claimant, and the exclusive liabilities and obligations of Séura, with respect to allegations of a defective Product.

19163121.3

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Séura is under license. Other trademarks and trade names are those of their respective owners.