



Operation Manual



-Please read the manual carefully before using-

• Packing List

- Professional Manicure LED lamp that cures in 30s,45s,60s,90s of products (x1)
- DC Adapter for professional manicure LED lamp (x1)
- Operation Manual (x1)
- Warranty card (x1)

• Parts Description



Front



Back



Operation panel



Timer display





A



B



C

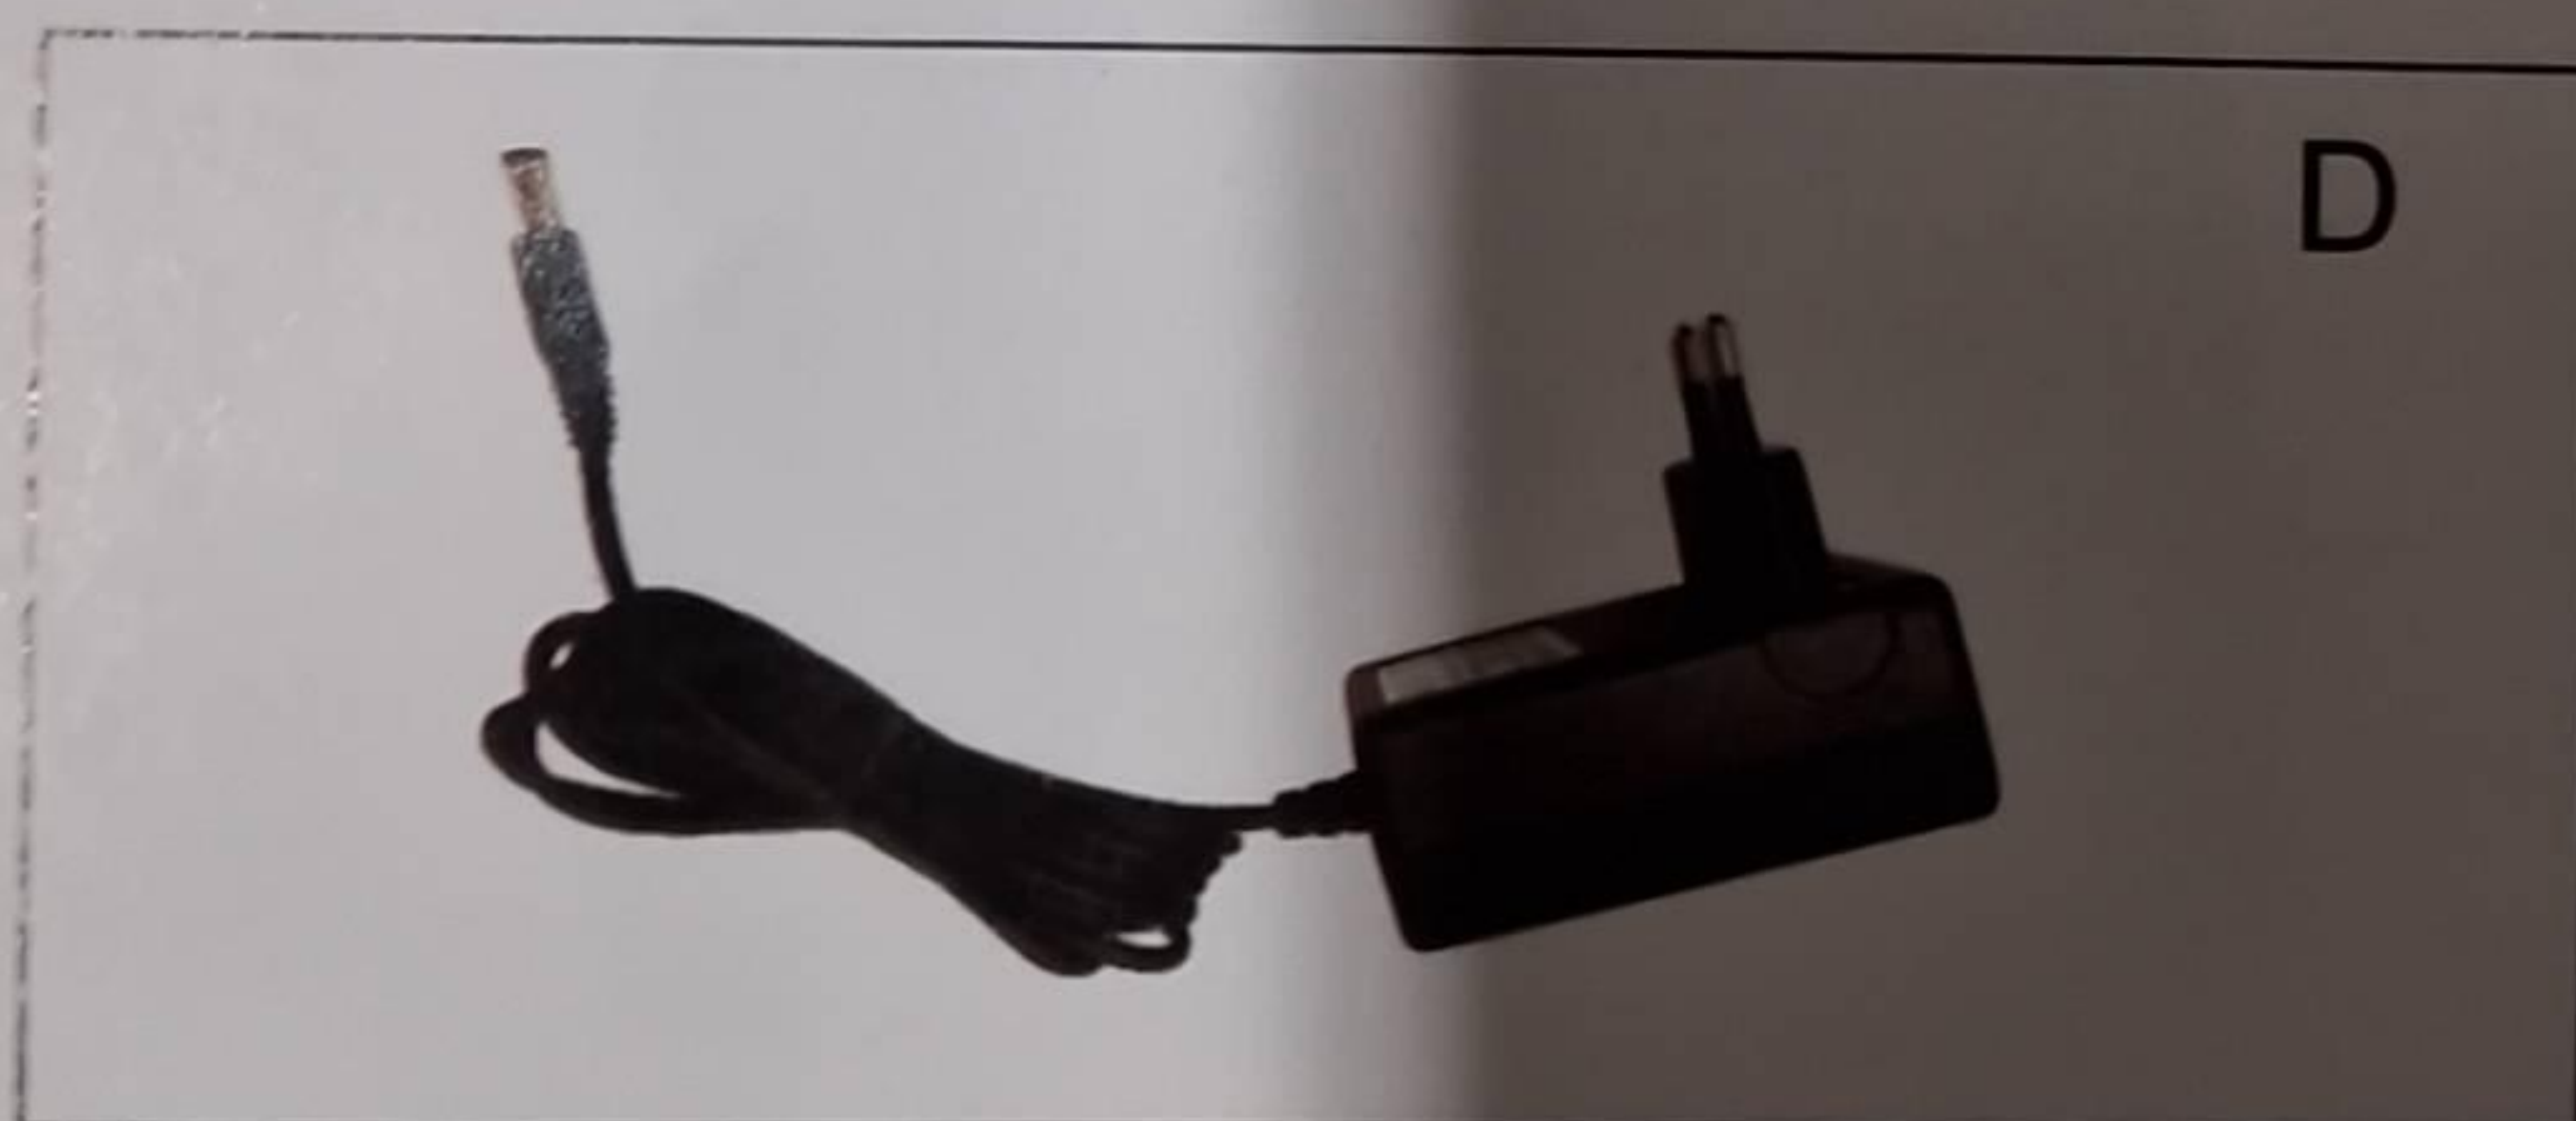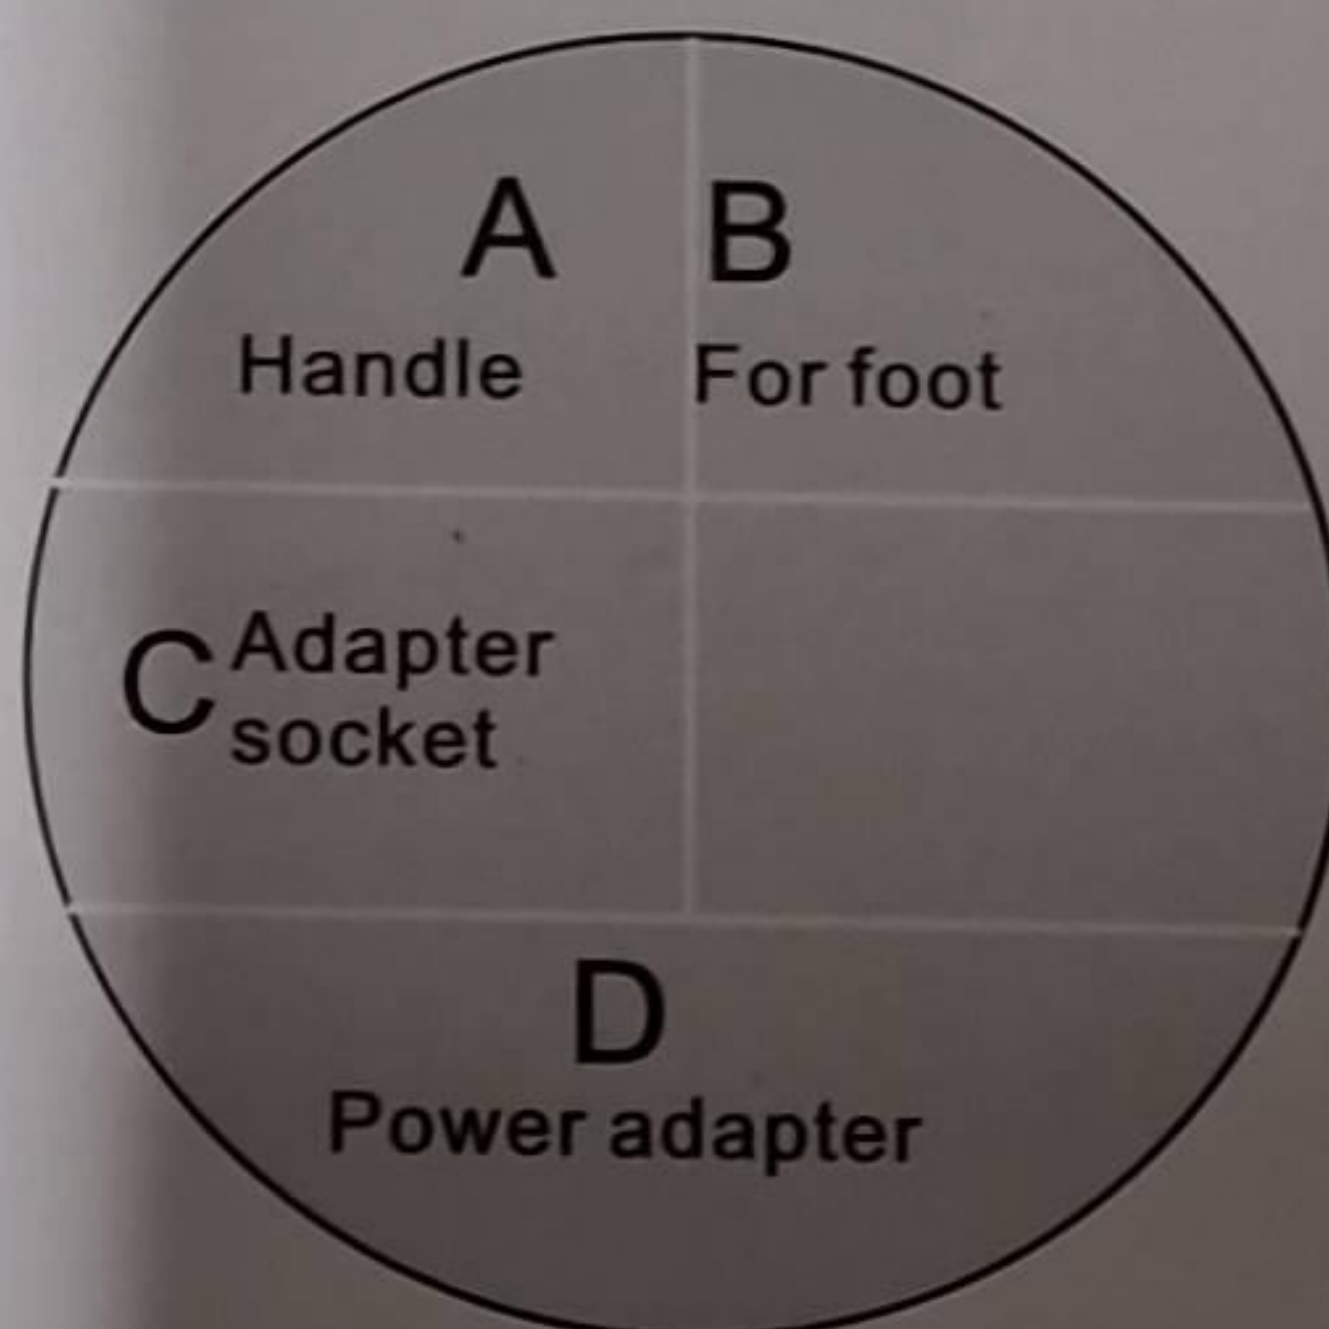

D

• Safety Operation Instruction and Warning

- Please read the instruction carefully before use the lamp and keep it well.
- Please use the correct Voltage for the lamp
- Please don't let any fragment, water or other kind of liquid get into the machine to avoid any fault for the machine.
- The machine should not be used in contact with water. Do not used in rooms with a humid environment. (e.g. in bathrooms or near to a shower)
- If do not use the lamp for long time, please switch off lamp and plug out the plug from power source.
- If the adapter was damaged, to avoid any potential risk, please send it to professional maintenance department or similar unit for repairing.
- Please don't use if the machine or connection cable is visibly damaged.
- Please don't use if the timer is damaged.
- The machine should be used by anyone with limited physical, sensory or psychological capabilities. Ensure that children do not play with the machine and are not present whilst it is in use.
- Never look directly at the LED light during in use for a long time. the led rays may cause acute and irreversible damage to the eyes and skin. If you notice sudden changes in the skin, seek advice from a doctor immediately.
- The machine is only for use in the enclosed rooms and must not be used outdoors.
- Proper and right operation and use would increase the use life of the machine.

• Specifications

Model	
Size	
N. W	
Wavelength	365nm+395nm
Adapter Input	100V-240V 50/60HZ 1.8A
Adapter Output	DC-13V 1.8A
Power	64W(max)

• Features

- Preset 30s, 45s, 60s and 90s timer ON/OFF.
- Full five-finger curing. Adjustable "feet" for convenient pedicure use.
- Spacious, comfortable interior for all hand sizes.
- (36) 2 -watt LED lights(-64Watts)(max)
- The Light has consistent and good performance with life span of 50,000 hours.
- 1-year limited Warranty.

• General Operation:

- The LED Light is designed for the use of curing/drying LED formulated gel. The LED lamp have specialized preprogrammed timer to ensure accurate curing of LEDgels.
- Connected the power adaper to the LED light, then insert the adapter into the mains outlet or power strips, and press the switch on the adapter to have the light on and begun to work. Default time is 30s. Please read the third point details as below for following operation.
- After finishing the operation 2, touch the switch of timer 30s directly, and the countdown of 30s will begin, the LED light will begin to work. The light will stop working automatically after 30s. If need to choose other timer, select and touch the switch of your desired time (45s/60s/90s) directly. Repeat again to touch the switch have chosen (45s/60s/90s), then the light will work, after completion of the countdown, the LED light will stop working automatically. If need to turn off the LED light in advance, you can touch the switch of selected timer (45s/60s/90s) again, it will stop working in advance.
- There is an auto touch-sensor system on working area, so we can also turn on or turn off the LED. Light with this system. After finishing operation 2, the default timer show 30s, then put hand or foot into the specified position of working area directly. The countdown of timer 30s will begin, and the LED light will begin to work. After completion of the countdown 30s, the LED light will stop working automatically. If need to choose other countdown time, select and touch the switch of your desired time (45s/60s/90s) directly, and then put hand or foot into the specified position of working area directly. The LED light will begin to work, after completion of the countdown, the LED light will stop working automatically. (Only the direct or indirect touch of human body can this function be realized. The working principle is the same as touch-screen of intelligengt cellphone.) Place hand inside working area under the LED light and press the timer button to turn on the light to cure the LED gel on the fingers.
- The LED Lamp is 64W(max) and has an estimated life of 50000 hours of personal use.
- When lamp during standiby mode, there minutes without any operation, the lamp will enter the dormant state.
- The background screen light will power off. Lamp can be rechargeable, one charge, 3hours working life.

NOTICE:

Light have separate power switch, turn off the button, the lamp will power off automatically (during without external power source). During Using the external power source, the power switch do not work, the lamp can rechargeable automatically, the background light would be lighting.

• Professional LED light and Portable light of Comparison

Professional Manicure	STRUCTURE BASE COAT GEL	GEL POLISH LIGHTER COLORS	GEL POLISH DARKER COLORS	BRILLIANCE SEALASHINE TOP COAT GEL
Professional LED light	30 Sec	45 Sec	45 Sec	30 Sec

Recommended curing times are per layer. The surface will remain tacky until the final cure of professional manicure and cleansing of the nails.

