


🔍

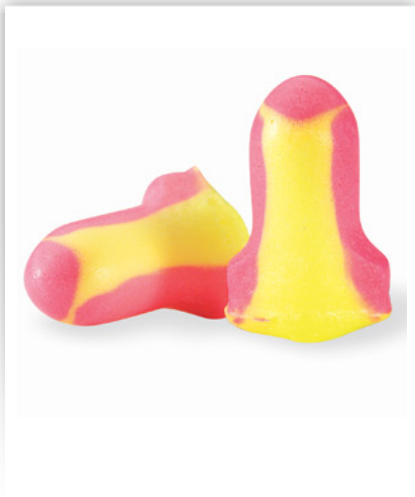

Product Family

Laser Lite Single-Use Earplug

Highly visible protection

Learn more about our products at howardleight.com

>



Product Numbers & Ordering Information

	Product Numbers	Details
	8015911	LASER-LITE - BOX OF 10 PAIRES IN INDIVIDUAL BAG SNR 30 DB Product emphasized in an effective packaging designed for a self-service environment.
	1015911	LASER-LITE - BOX OF 10 PAIRES IN INDIVIDUAL BAG SNR 30 DB Product emphasized in an effective packaging designed for a self-service environment.
	3301106	Laser Lite - corded SNR 35 H - 34 M - 32 L - 31
	3301105	Laser Lite - uncorded SNR 35 H - 34 M - 32 L - 31
	1013047	Laser Lite - uncorded bulk refill for Leight Source 400 SNR 35 H - 34 M - 32 L - 31
	3301271	Laser Lite - uncorded bulk refill for Leight Source 500 SNR 35 H - 34 M - 32 L - 31

Overview

Key Features

- Vibrant colors make protection visible
- Self-adjusting polyurethane foam expands to fit virtually every wearer
- Contoured T-shape for easy insertion and wear
- Smooth, soil-resistant closed cell-foam skin prevents dirt build-up
- Available in paper bag packaging and/or with cotton cords for process industries [pulp & paper]
- Bulk refills for Leight Source 400 and Leight Source 500 Earplug Dispensers save time, waste and space

Recommended Industries/Use

- Agriculture • Chemical • Construction • Fire Protection • Forestry • Government
- Law Enforcement • Manufacturing • Medical • Military • Mining • Municipal Services
- Oil and Gas • Pharmaceutical • Steel and Metals • Transportation • Utilities • Welding

Hazards

- Noise

Regulations

- 29 CFR 1910.95 - 29 CFR 1910.95
- S3.19-1974 - Attenuation Test Protocol (US)
- Part II, (R.S.C. 1985, c. L-2) - Canada Labour Code
- Z94.2-1994 - Attenuation Test Protocol (CAN)
- 2003/10/EC - EU Hearing Directive
- 89/686/EEC - EU Directive/PPE
- Category II - EC Category/PPE
- EN 352-2:1993 - EU Standards
- EN-24869-1:1993 - EU Standards
- NOHSC: 1007 (2000) - National Standard for Occupational Noise (AUS/NZ)
- NR 15 - Security and Health of Work, Annexes 1 and 2, n°3.214/1978 - Occupational Noise Regulations (BR)
- ANSI S12.6/1997 - Method B - Attenuation Test Protocol (BR)
- 9001:2008 - ISO

Historical Brand

Howard Leight

Specifications

Color

- Magenta/Yellow

Shape

- T-Shape

Material

- Polyurethane Foam

Packaging Options

- • Polybag • Paper Bag • Bulk Refill for Leight Source 400 or Leight Source 500 Dispenser

Cord Options

- • Uncorded • Polycord • Cotton Cord

NRR

- 32

Canada Class

- A(L)

SNR

- 35

SLC80

- 25 dB / Class 4

EU Certifications

- European Directives – 89/686/EEC
- EC Category PPE – Category II
- Standards – EN 352-2:1993 / EN-24869-1:1993
- EC Certification Number – 951095
- EC Attestation Number – 9503632
- Laboratory – B.G.I.A.

AUS Certifications

- Standardsmark License #1579

Certifications

EU Certificate - Laser Lite

http://www.honeywellsafety.com/Supplementary/Documents_and_Downloads/Secured/Hearing_Protection/Earplugs/20035/1033.aspx

EU Certificate - Laser Lite

EU Certificate - Earplugs

http://www.honeywellsafety.com/Supplementary/Documents_and_Downloads/Secured/Hearing_Protection/Earplugs/42685/1033.aspx

EC Declaration of conformity The manufacturer SPERIAN HEARING PROTECTION, LLC, 7828 Waterville Rd. San Diego, CA 92154 United States declares that the Personal Protective Equipment (PPE) items listed below, conform with the provisions of Council Directive 89/686/EEC and, where applicable, with the national standard, tr

EU Certification Report - Laser Lite

http://www.honeywellsafety.com/Supplementary/Documents_and_Downloads/Secured/Hearing_Protection/Earplugs/20049/1033.aspx

EU Certification Report - Laser Lite

Literature & Documents

Instruction Manual - Laser Lite (global)

http://www.honeywellsafety.com/Supplementary/Documents_and_Downloads/Hearing_Protection/Earplugs/4294986713/1033.aspx

Earplug Instruction Poster - EN

http://www.honeywellsafety.com/Supplementary/Documents_and_Downloads/Hearing_Protection/Earplugs/19799/1033.aspx

Training & Proper Use

1. With clean hands, roll the entire earplug into narrowest possible crease-free cylinder.
2. Reach over your head with a free hand, pull your ear up and back, and insert the earplug well inside your ear canal.
3. Hold for 30 – 40 seconds, until the earplug fully expands in your ear canal. If properly fitted, the end of the earplugs should not be visible to someone looking at you from the front.
4. Proper Fit – If either or both earplugs do not seem to be fitted properly, remove the earplug and reinsert
5. Removal – Gently twist earplug while slowly pulling in an outward motion for removal.
6. Acoustical Check – In a noisy environment, with earplugs inserted, cup your hands over your ears and release. Earplugs should block enough noise so that covering your ears with your hands should not result in a significant noise difference.

Additional Information

CARE + MAINTENANCE

- INSPECT – Inspect prior to fitting, examine your earplugs for dirt, damage or extreme hardness—discard immediately if compromised.
- DISCARD – For proper hygiene, discard Single-Use earplugs after use.
- HYGIENE – To maintain hygiene standards, Single-Use earplugs should be discarded at the end of every shift.