

ADJUSTABLE SERRATED FOOT PEGS


PART #	DESCRIPTION
08-56-1	LONG, BLACK
08-56-2	LONG, ALUMINUM
08-57-1	SHORT, BLACK
08-57-2	SHORT, ALUMINUM

NOTE: USE BLUE OR RED LOCTITE ON ALL HARDWARE

DISCLAIMER: Joker Machine denies any responsibility for any issues that may be caused from failure to use liquid thread locker on all hardware listed below.

1. Adjust footpeg to desired position and install 5/16-18 SOCKET CAP SCREW using blue or red Loctite.
2. Tighten the 5/16-18 SOCKET CAP SCREW firmly, but be careful not to strip the screw.
3. Once the peg is securely in place firmly tighten the 1/4-20 POINTED SET SCREW using blue or red Loctite.
4. Use our exclusive 10-24 PITCH ADJUSTMENT SCREW that enables you to change the angle of the peg in order to adjust it to a "level" riding position (if necessary) so the pegs don't appear to "lay down" with time, vibration, etc.

1931 Yeager Ave., La Verne, CA 91750
www.jokermachine.com, sales@jokermachine.com
(P) 909-596-9690, (F) 909-596-9693

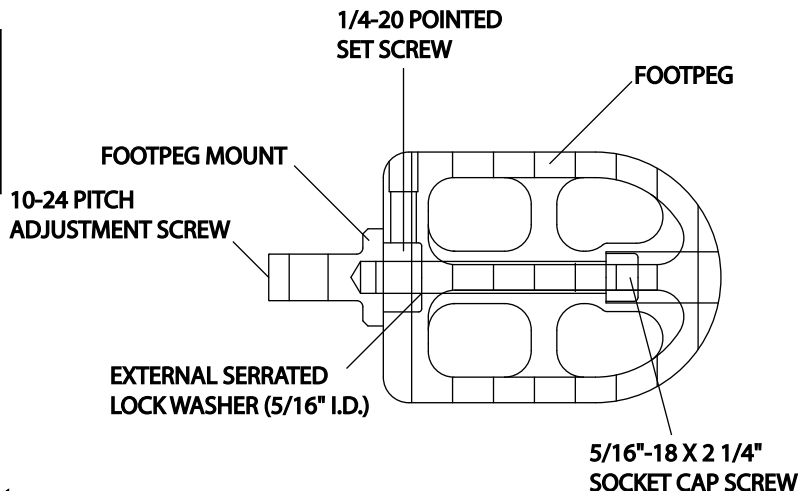

081004D 4/9/2009

ADJUSTABLE SERRATED FOOT PEGS


PART #	DESCRIPTION
08-56-1	LONG, BLACK
08-56-2	LONG, ALUMINUM
08-57-1	SHORT, BLACK
08-57-2	SHORT, ALUMINUM

NOTE: USE BLUE OR RED LOCTITE ON ALL HARDWARE

DISCLAIMER: Joker Machine denies any responsibility for any issues that may be caused from failure to use liquid thread locker on all hardware listed below.

1. Adjust footpeg to desired position and install 5/16-18 SOCKET CAP SCREW using blue or red Loctite.
2. Tighten the 5/16-18 SOCKET CAP SCREW firmly, but be careful not to strip the screw.
3. Once the peg is securely in place firmly tighten the 1/4-20 POINTED SET SCREW using blue or red Loctite.
4. Use our exclusive 10-24 PITCH ADJUSTMENT SCREW that enables you to change the angle of the peg in order to adjust it to a "level" riding position (if necessary) so the pegs don't appear to "lay down" with time, vibration, etc.

1931 Yeager Ave., La Verne, CA 91750
www.jokermachine.com, sales@jokermachine.com
(P) 909-596-9690, (F) 909-596-9693

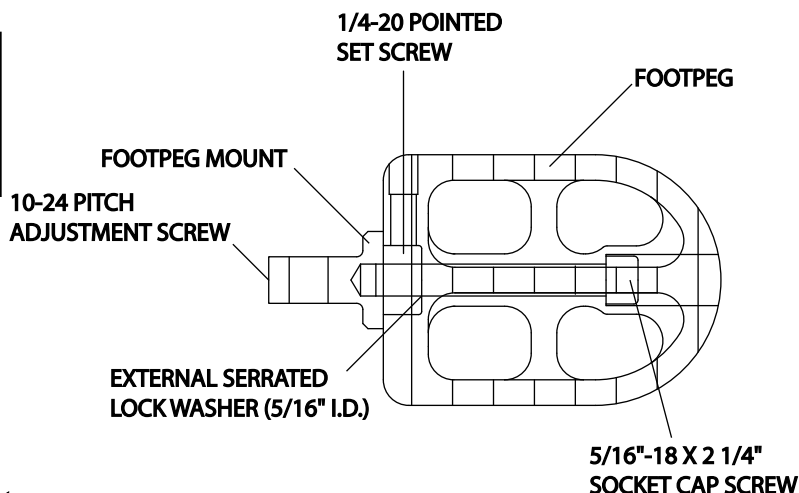

081004D 4/9/2009