

HOW TO USE THE PUMP-KIT FOR A80

If you need to use your A80 for an extended period of time, you can purchase the pump-kit accessorie. (article number: 800500)



- Use a hose in size 1/2".
- Squeeze clamp (17,5) on the cooling adapters.



- Squeeze clamp (16,5) on the waterpump.



- Press the cooling adapters into the sockets on the back of the machine, then pull on the hoses to check that they are firmly attached.




- Plug the connector into the (12V. 0,5A) jack.



- Place the pump in a container of water before the power is switched on.



- Connect A80 to power outlet.

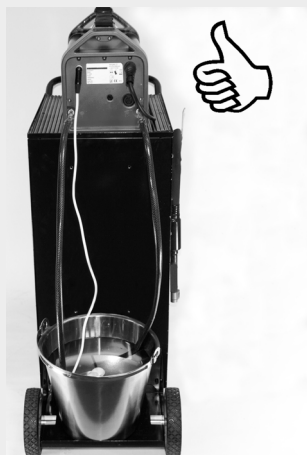

The machine must be on a higher level than the water tank.