

ASSEMBLY INSTRUCTIONS

<p>STEP 1.</p>	<p>STEP 2.</p> <p>ATTENTION !! Place backrest face down to attach backrest post.</p>
<p>STEP 3.</p>	<p>STEP 4.</p>
<p>STEP 5.</p>	<p>STEP 6.</p>

<p>A</p> <p>Caster (5)</p>	<p>B</p> <p>Base</p>	<p>C</p> <p>Seat Post</p>
<p>D</p> <p>Seat Post Cover</p>	<p>E / F / G (pre-assembled)</p> <p>(E) Mechanism (F) Seat (G) Arm Bracket (2)</p>	
<p>H</p> <p>Backrest Post</p>	<p>I</p> <p>Backrest Screw</p>	<p>J</p> <p>M5 Size Allen Wrench</p>
<p>K</p> <p>Backrest Bolt + Washers (3)</p>	<p>L</p> <p>Backrest</p>	<p>M</p> <p>Armrest (2)</p>
<p>N</p> <p>Arm Width Adjustment Knob + Washers (2)</p>	<p>O</p> <p>Backrest Post Bellow</p>	<p>P</p> <p>Backrest Post Bellow Screw (2)</p>

Model: ALE-EL42BME 10B
 Manufactured for / Hecho para / Fabriqué pour Alera® / USSCo
 1 Pkwy North, Ste 100, Deerfield, IL 60015 © 2013 USSCo
 Made in / Hecho en / Fabriqué à Taiwan
 Product support and parts : 1-800-733-4000
 Ayuda del producto y partes / Support technique et pieces




OPERATING INSTRUCTIONS

ALE-EL42BME10B


A. Seat height adjustment

To raise the seat height, stand up from the chair while lifting the lever (A) under the right side of the seat. To lower the seat height, lift the lever (A) while sitting in the chair.

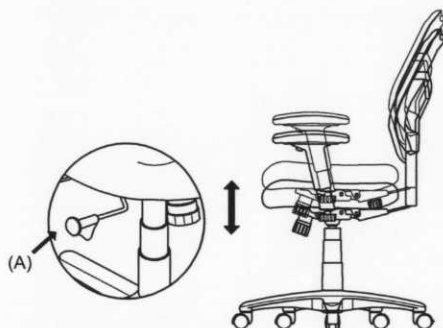


B. Back tilt adjustment

Pull lever horizontally, move backrest to tilt. To lock in upright position, push lever in.

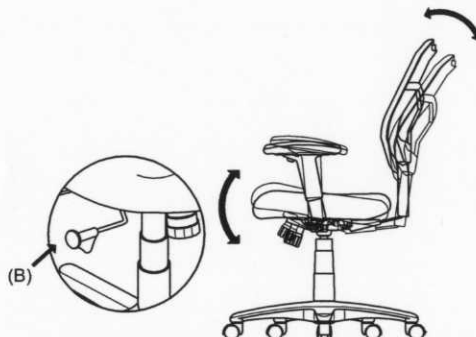


C. Tilt tension

Knob underneath seat adjusts angle and ease with which chair reclines to the different weights and strengths of different users. To increase tension, turn knob to the right. To release tension (loosen), turn knob to the left.

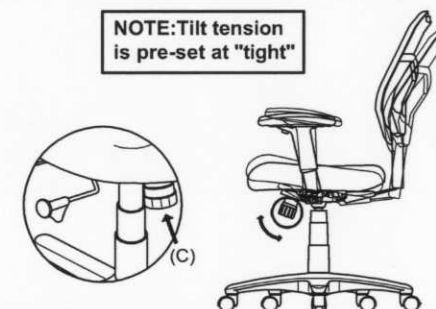

D. Arm width adjustment

To adjust the arm width, loosen the bolt under the arm support and move arm to the desired placement. After reaching desired placement, tighten bolt.

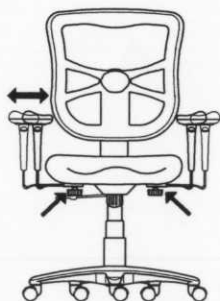


E. Arm height adjustment

To adjust arm height, push the button on the outside of each arm and move the arm up or down. Release the button to set the height.



F. Backrest height adjustment

To raise the back, pull up on the seat back until it clicks into the desired height. To lower the back, raise the seat back all the way up until tension is released and then lower all the way down. Raise back up to desired position.

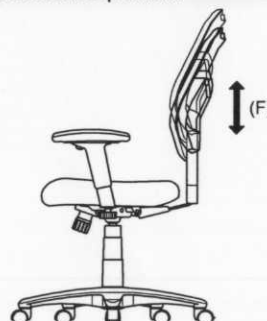

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- **AT LEAST EVERY THREE MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHTENED.**
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING - IT MAY CAUSE SUFFOCATION
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY